



GRAVITE

OWNER'S MANUAL

Welcome aboard your vehicle

This vehicle user manual contains the information necessary:

- for you to familiarise yourself with your vehicle, to use it to its best advantage and to benefit fully from the all the functions and the technical developments it incorporates.
- to ensure that it always gives the best performance by following the simple, but comprehensive advice concerning regular maintenance.
- to enable you to deal quickly with minor faults not requiring specialist attention.

It is well worth taking a few minutes to read this manual to familiarise yourself with the information and guidelines it contains about the vehicle and its functions and new features. If certain points are still unclear, our authorised dealers will be pleased to provide you with any additional information.

The following symbol will help you when reading this manual.



These appear in the vehicle and indicate that you should consult the manual for detailed information and/or limits on operations with respect to your vehicle's equipment.

- anywhere in the manual indicates a transfer to a page.



anywhere in the manual indicates a hazard, danger or a safety recommendation.

The descriptions of the models given in this manual are based on the technical specifications at the time of writing. **This manual covers all items of equipment (both standard and optional) available for these models, but whether or not these are fitted to the vehicle depends on the version, options selected and the country where the vehicle is sold.**

This manual may also contain information about items of equipment to be introduced later in the model year.

The diagrams in the user manual are provided as examples.

Enjoy driving your new vehicle.

Translated from English. Copying or translation, in part or in full, is forbidden unless prior written permission has been obtained from the vehicle manufacturer.

CONTENTS


Welcome aboard your vehicle	4	Running in.....	106
Exterior	4	Starting, stopping the engine.....	107
Passenger compartment	6	Gear control	111
Driver's position	8	Parking brake.....	115
Driving aids	10	Special features of petrol versions	116
Safety on board	12	Maintenance and antipollution advice	117
Identifying a vehicle - labels	14	Driving advice and ECO driving.....	118
The engine compartment (routine maintenance).....	16	Tyre pressure monitoring system	122
Breakdown recovery	18	Driver correction devices, aids	129
Getting to know your vehicle	20	Take a break reminder.....	132
Card	20	Cruise control.....	135
Key, remote control.....	28	Environment.....	138
Doors and opening elements.....	32	Parking aids.....	139
Front seats	39	Your comfort	145
Rear seats	40	Air vents, heating and air conditioning.....	145
Seat belts.....	45	Multimedia equipment	151
Additional safety devices	50	Passenger compartment equipment.....	179
Child safety	58	Passenger compartment storage, fittings	183
Child seats	63	Transporting objects	186
Child safety: the front passenger airbag.....	73	Maintenance	187
Driving position	73	Accessing the engine, levels	187
Trip computer.....	76	Battery	192
Warning lights	87	Cleaning.....	194
Steering	91	Practical advice	198
Rear view.....	92	Tyres	198
Lighting and signals.....	94	Breakdown recovery.....	208
Audible and visual signals	99	Headlights, lights: replacing bulbs	211
Wiper	100	Wiper blades: replacement.....	219
Fuel tank.....	104	Fuses	220
Driving	106	Installation and use of accessories.....	224

CONTENTS

Operating faults	226
Technical specifications	229
Information about the vehicle	229
Replacement parts and repairs	235
Anticorrosion check	236

EXTERIOR

1

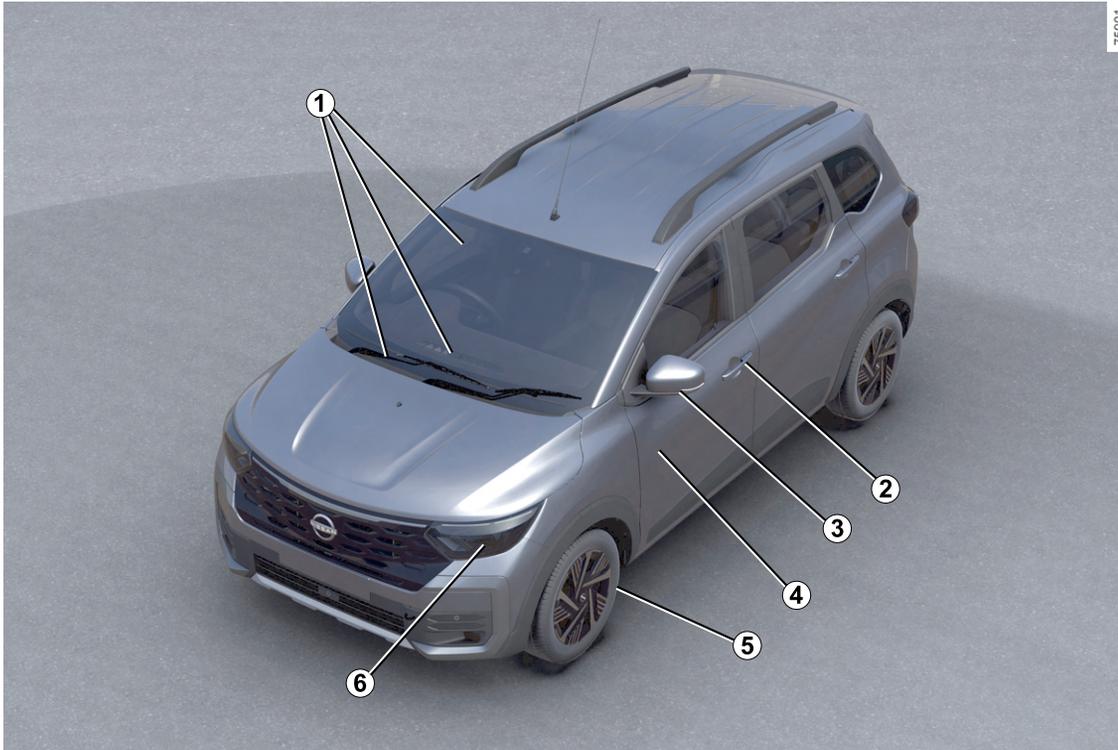

4 - Welcome aboard your vehicle



EXTERIOR

1. Electric windows → 179

Windscreen wipers → 100

Demisting → 148

2. Card → 20

Locking/unlocking the doors → 33

3. Rear view mirrors → 92

4. Bodywork maintenance → 194


5. Tyres → 198

6. Lights: operation → 94

Lights: replacement → 211

PASSENGER COMPARTMENT

1

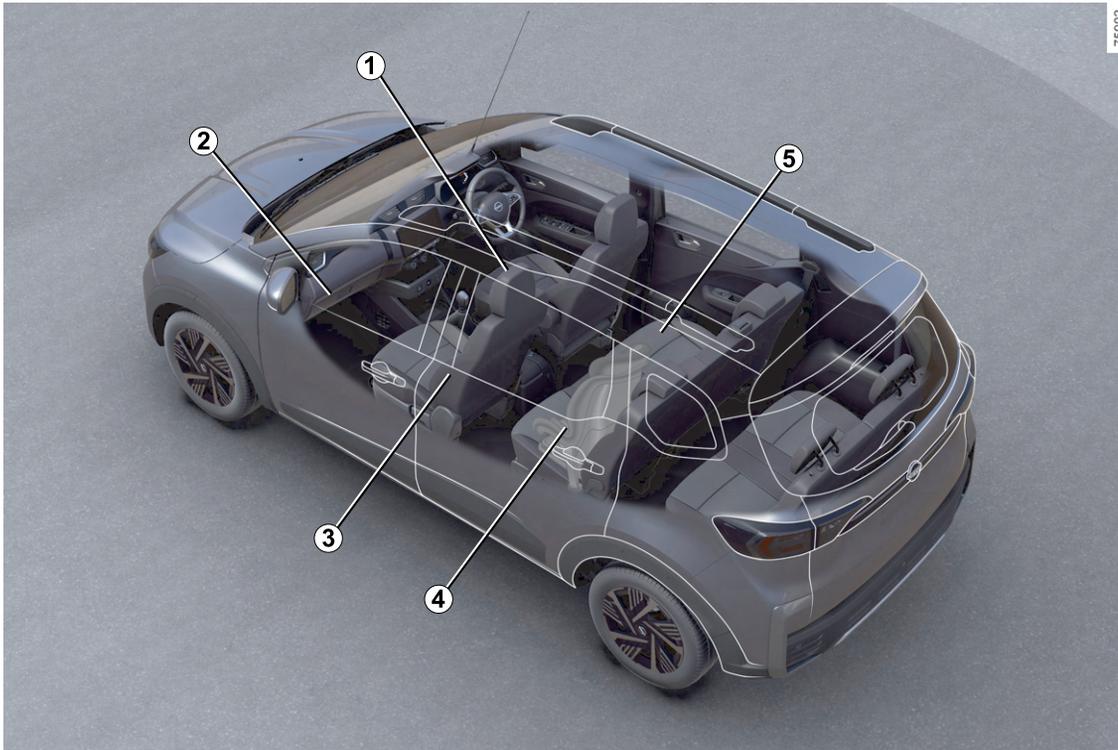

6 - Welcome aboard your vehicle




PASSENGER COMPARTMENT

1. Adjusting your driving position → 45
2. Passenger compartment storage/fit-tings → 183
3. Front seats → 39
4. Child safety → 33, → 58
5. Rear seat → 40

DRIVER'S POSITION

1

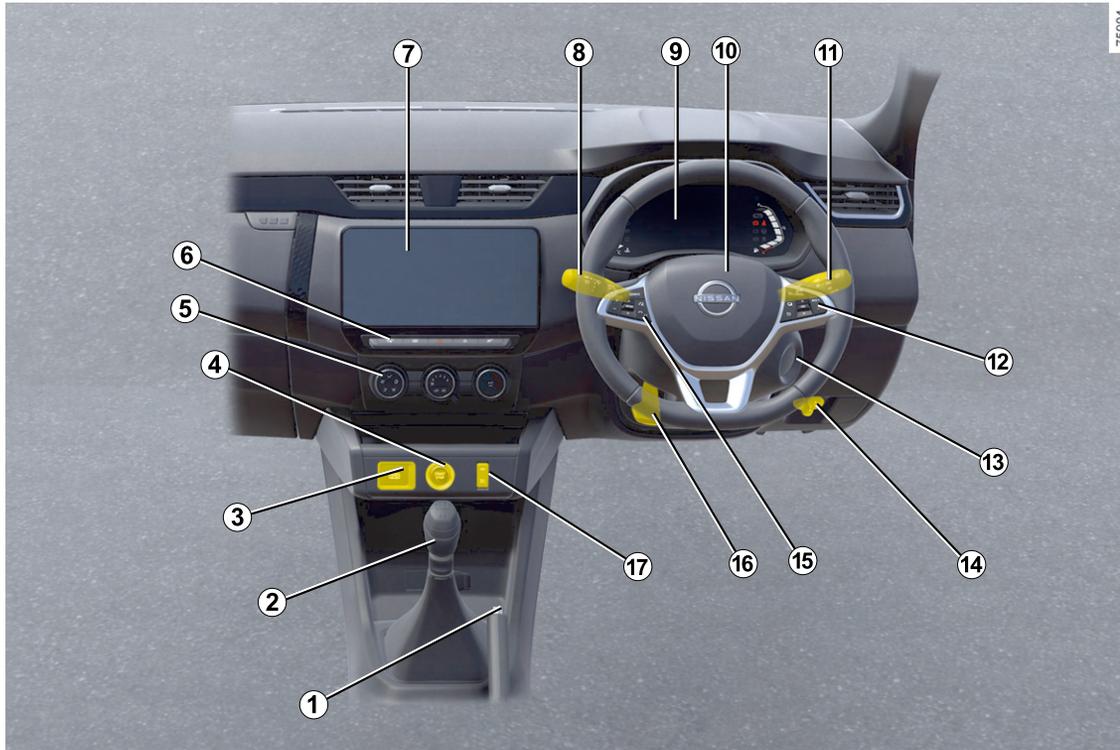

8 - Welcome aboard your vehicle



DRIVER'S POSITION

1. Handbrake → 115
2. Gear lever → 111
3. Multimedia port USB → 151
4. Engine start/stop button → 108
5. Heating/Air conditioning system → 148
6. Controls for:
 - Activation/ Deactivation of front parking system → 142
 - Heated rear screen → 149
 - Hazard warning light → 99
 - Interior locking/unlocking door control → 35
 - ESC off → 130
7. Multimedia screen → 151
8. Screen wash/wipe stalk → 100
9. Instrument panel → 87
10. Horn → 99
11. Exterior lighting → 94
12. Controls for:
 - Cruise control functions → 135
 - Trip computer → 76
13. Key ignition switch → 107
14. Headlight beam adjustment → 96
15. Multimedia controls → 152
16. Steering wheel adjustment → 91

17. Cruise control ON/OFF → 135

DRIVING AIDS

1

75908



10 - Welcome aboard your vehicle



DRIVING AIDS

1. ABS (anti-lock braking system)
➔ 129

ESC (electronic stability control) ➔ 130

Braking assistance ➔ 129

Hill start assistance ➔ 131


2. Tyre pressure monitoring system
➔ 122

3. Parking distance control ➔ 140

4. Reversing camera ➔ 139

SAFETY ON BOARD

1

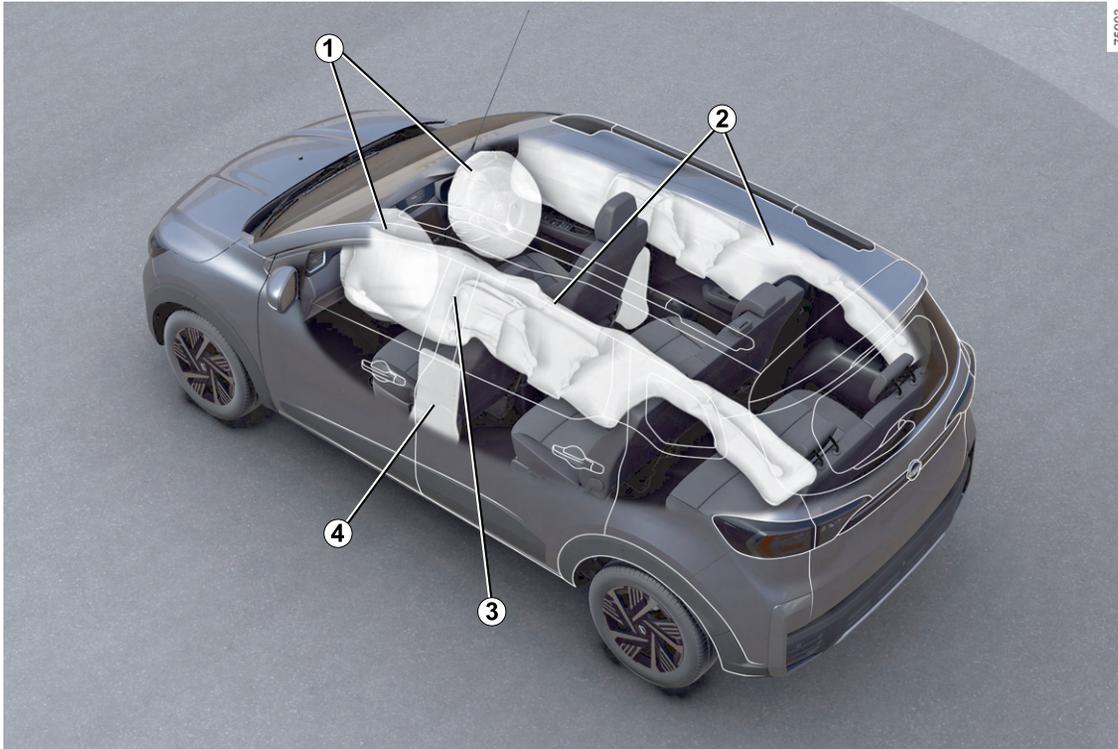


SAFETY ON BOARD

1. Front airbags → 50
2. Curtain airbags → 55
3. Seat belts → 45
4. Side airbag → 55.

1

IDENTIFYING A VEHICLE - LABELS

1

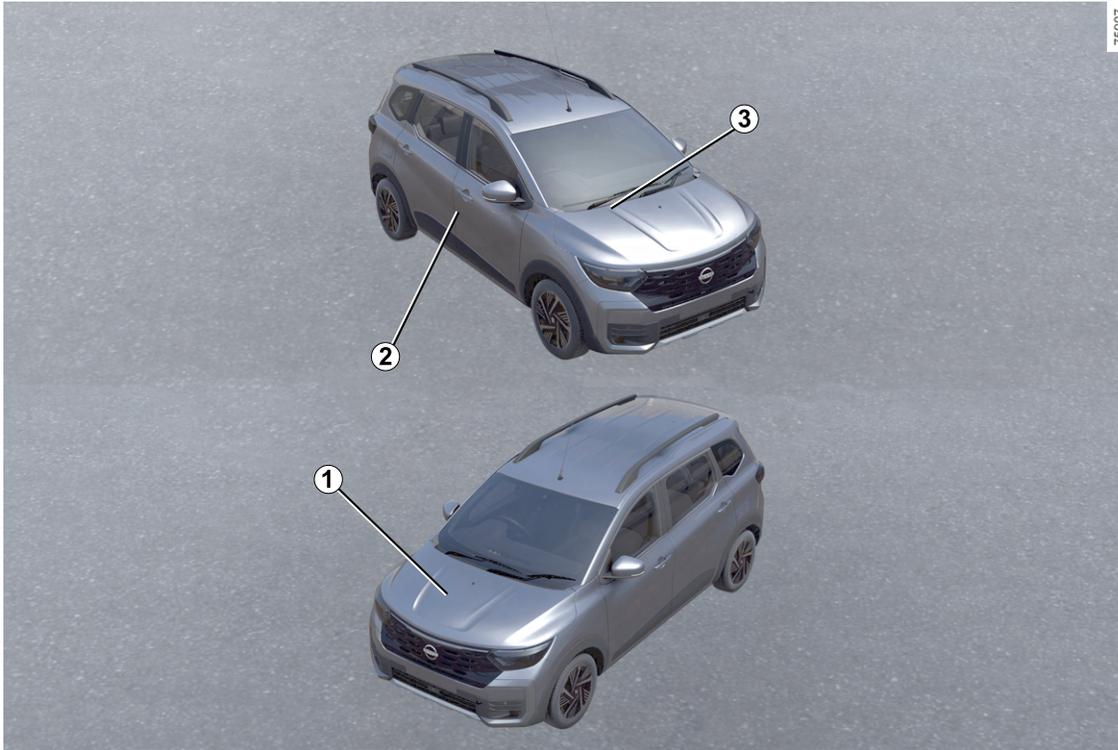


IDENTIFYING A VEHICLE - LABELS

1. Engine identification plate → 229
2. Tyre pressure labels → 200
3. Vehicle identification plates → 229

THE ENGINE COMPARTMENT (ROUTINE MAINTENANCE)

1

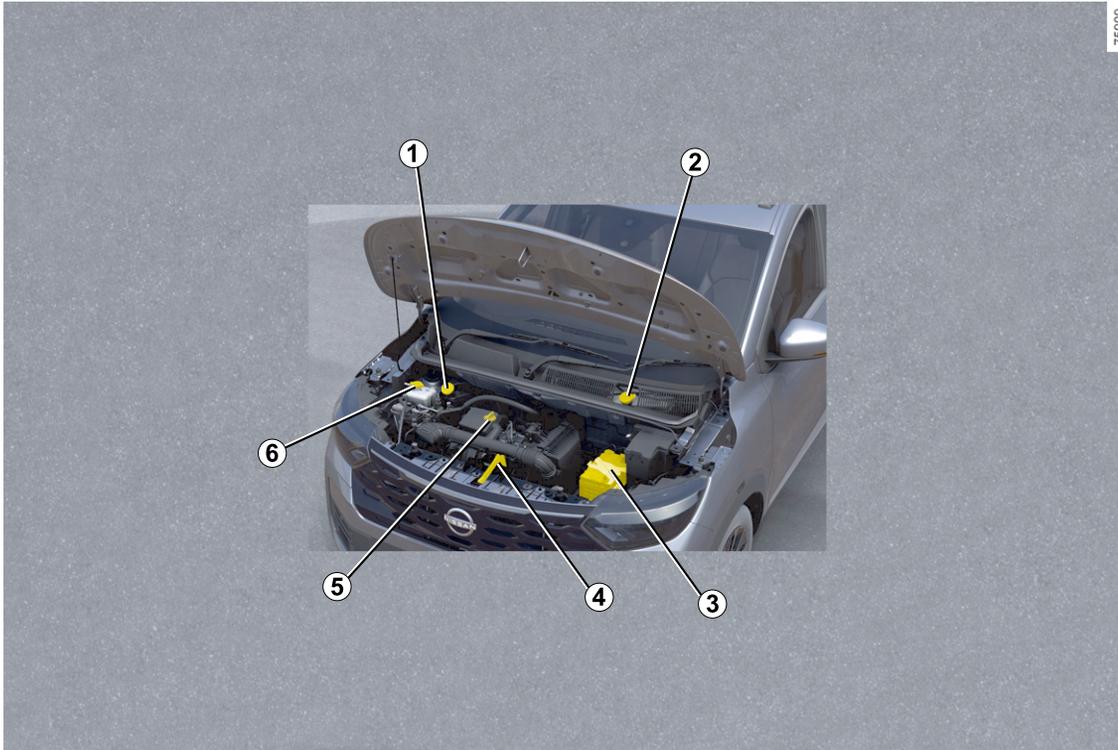

75909




THE ENGINE COMPARTMENT (ROUTINE MAINTENANCE)

1. Brake fluid → 191
2. Windscreen washer fluid → 191
3. Battery → 192
4. Opening the bonnet → 187
5. Engine oil → 188
6. Coolant → 190

BREAKDOWN RECOVERY

1

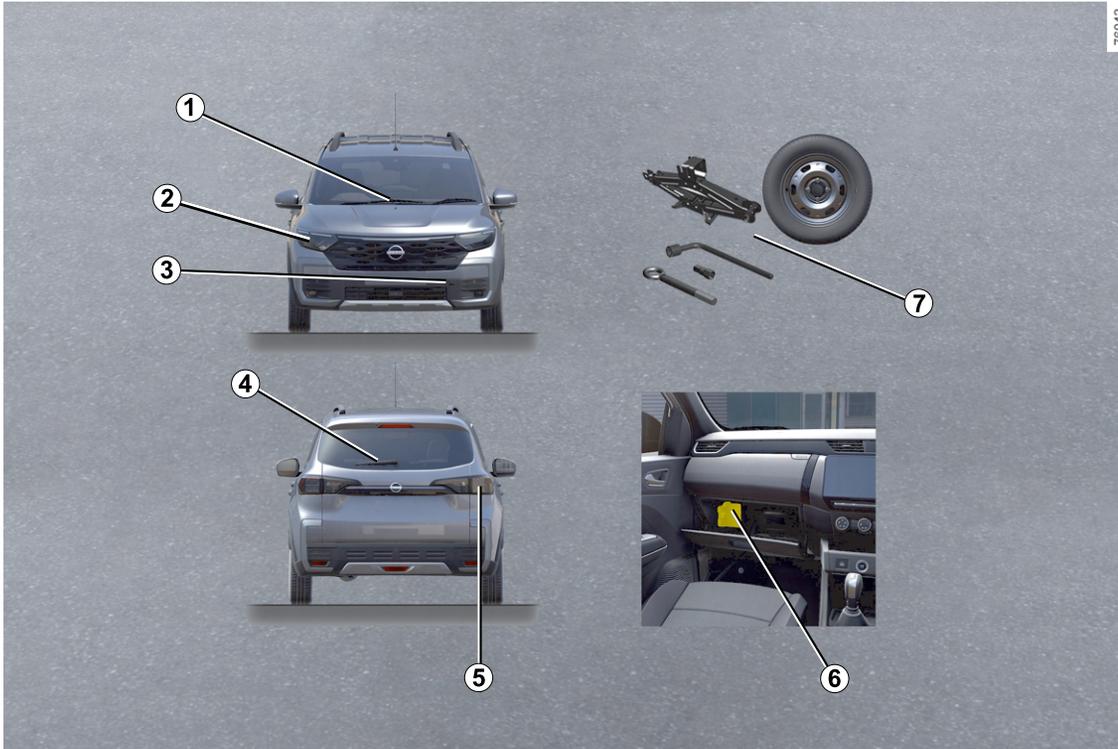


BREAKDOWN RECOVERY

1. Replacing front windscreen wiper blade(s) → 219
 2. Replacing headlight bulbs → 211
 3. Front towing point → 208
 4. Replacing the rear screen wiper blade → 219
 5. Replacement of the rear lights → 213
 6. Fuses → 220
 7. Puncture → 202
- Tools → 201
- Emergency spare wheel → 202
- Changing a wheel → 205

CARD

General information

2

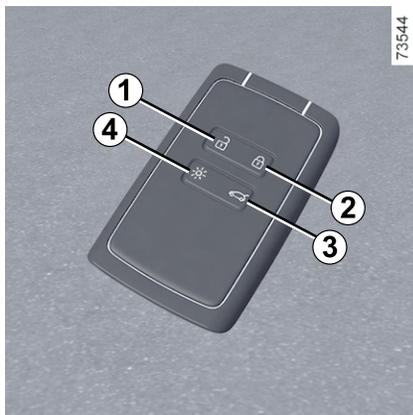

1. Unlocking the doors and tailgate.
2. Locking all doors and tailgate.
3. Unlocking/locking the tailgate.
4. Switching on the interior lighting remotely.

The card is used for:

- locking/ unlocking the opening elements (doors, tailgate);
- switching on the vehicle interior lighting.

Range

Make sure that the correct battery type is being used, and that the battery is in good condition and inserted correctly. Its service life is approximately two years : replace it when the message “Keycard Battery Low” appears on the instrument panel → 25.

Card operating range

This varies according to the environment : take care not to accidentally lock or unlock the vehicle by inadvertently pressing the buttons on the card.


Note: if a door or the tailgate is open or not closed properly, the doors and tailgate lock then unlock quickly.

Interference

Interference by factors in the immediate vicinity (external installations or the use of equipment operating on the same frequency as the card) may disrupt its operation.

i When the battery is flat, you can still lock/unlock and start your vehicle → 22, → 107, → 33.

Distance lighting function

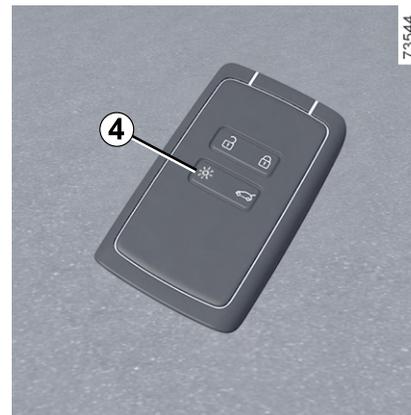

Pressing button 4 switches ON the interior lighting for approximately 20 seconds. This can be used, for example, to identify your vehicle from a distance when parked in a car park.

Note : Pressing button 4 again switches off the lighting.

i Advice
Avoid leaving the card in hot, cold or humid areas. Do not keep the card in a place where it could be bent or damaged accidentally, such as in a back pocket of a garment.

CARD



Replacement : need for an additional card

If you lose your card or require another, you can obtain one from an authorised dealer. If a card is replaced, it will be necessary to take the vehicle **and all its cards** to an approved Dealer to re-set the system. You may use up to four cards per vehicle.



Driver's responsibility when parking or stopping the vehicle


Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time.

They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or locking the doors, for example.


Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY

Fitting a strap 7

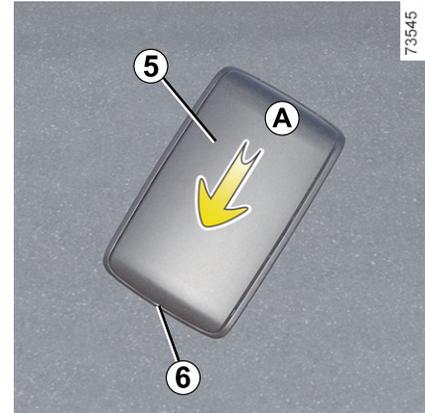

Slide the rear casing **5** downwards while pressing on zone **A**.

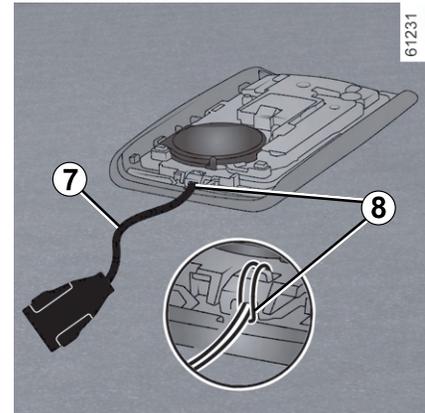

CARD

Insert the strap into the **8** component and pass the end of the strap through the buckle.

2

Position the strap at the **6** opening and close the cartridge.

Note: check that the diameter of the strap cord **7** will fit the opening **6**.

Use

There are two ways to unlock/lock the vehicle :

- the card in “hands-free” mode ;
- the card in remote control mode.



Do not store the card anywhere it may come into contact with other electronic equipment (computer, phone etc.) as this could hinder its operation.



Driver's responsibility when parking or stopping the vehicle


Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time.

They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or locking the doors, for example.

Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY

Using the card in "hands-free" mode

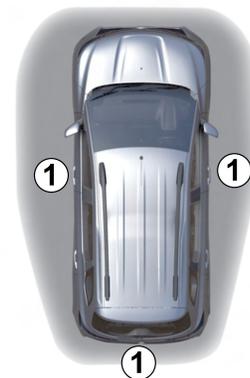

75911

In “hands-free” mode, it is possible to lock/unlock the vehicle without using any of the card buttons, as long as the card is within the access zone **1**.

"Hands-free" unlocking when approaching the vehicle

With the card in the access zone **1**, the vehicle will be unlocked.

The hazard lights and side indicator lights **flash once** to indicate that the doors have unlocked and the door mirrors fold out automatically.

"Hands-free" locking when moving away from the vehicle


CARD



With the card on you and the doors and tailgate closed, move away from the vehicle: it will lock automatically as soon as you leave the access zone **2**.

the hazard lights **flash twice** then remain illuminated for about four seconds, then a beep sounds to indicate that the doors have locked and the door mirrors fold in automatically.


Note: the distance at which the vehicle locks depends on the surroundings.

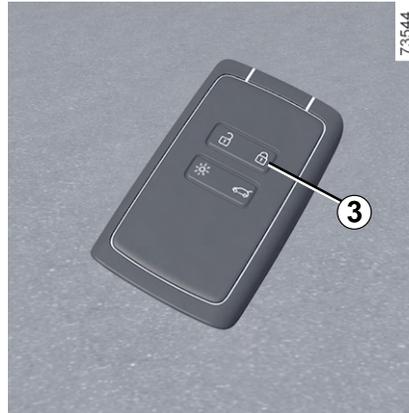

If the card has been within the detection zone **1** for approximately 15 minutes, remote locking is deactivated. To lock the vehicle, press the button **3** on the card.

The vehicle cannot be remotely locked if the card is within the zone **2**. If the vehicle is unlocked by pressing the button on the card but do not open the doors or tailgate, "hands-free" remote locking is disabled.

"Hands-free" unlocking by opening the luggage compartment

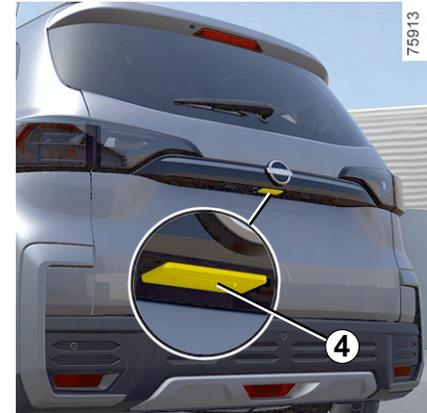

With the card in the zone **1** and the vehicle locked, press button **4** once to unlock the entire vehicle.

The side indicator lights and hazard warning lights **flash once** to indicate that the doors have unlocked.

Special features of the unlocking system

Under certain circumstances, unlocking when approaching the vehicle is deactivated:

- if the vehicle has not been used for eight days;
- if the card remains close to vehicle zone **1** during approximately five minutes **after the vehicle has been locked**;

2

CARD

2

– after several passes in the vicinity of zone **1** **without the doors having been unlocked.**


Press the tailgate opening button **4** or use the card as a remote control to unlock the vehicle and reactivate "hands-free" mode.

Special features relating to "hands-free" locking

After locking in "hands-free" mode, you have to wait approximately three seconds to be able to unlock the vehicle again. During these three seconds, the door handles can be tried to make sure that the vehicle is locked properly.

Note: if a door or the tailgate is open or not properly closed, the vehicle will not be locked. No beep sounds and the hazard warning lights, side indicators lights do not flash.

Using the card as a remote control

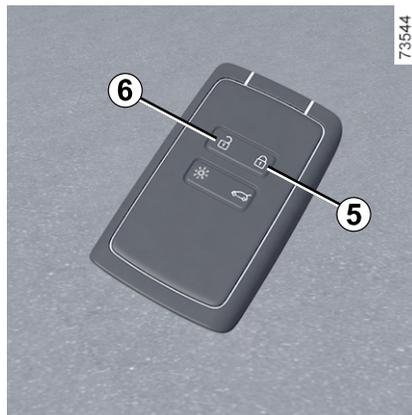

Unlocking with the card

Press button **6**.

Unlocking is indicated by **one flash** of the hazard warning lights and the indicator lights.

Locking using the card

With the doors and tailgate closed, press button **5**, the vehicle will be locked. The hazard warning lights and side indicator lights **flash twice** to indicate that the vehicle is locked and, the door mirrors fold in automatically.

Note : The maximum distance at which the vehicle locks depends on the surroundings.

Special features

If an opening element (a door or the tailgate) is open or not properly closed, the vehicle cannot be locked. The vehicle will lock/ unlock in quick succession, but the hazard warning lights and the side indicator lights will not flash.

If you press button **5** for more than 5 seconds, "hands-free" mode is disabled until the next time you unlock the vehicle by pressing button **6**.

Activation or deactivation of "hands-free" mode is indicated by a beep.



The card buttons are deactivated when the engine is running.

CARD




75912

If, **while the engine is running**, a door is opened and closed, and the card is no longer in the zone **2**, the message "Keycard Not Detected" indicates that the card is not inside the vehicle. This will, for example, prevent you from driving away after dropping off a passenger who has kept the card on them.

The warning disappears when the card is detected again.

Locking/unlocking only the tailgate

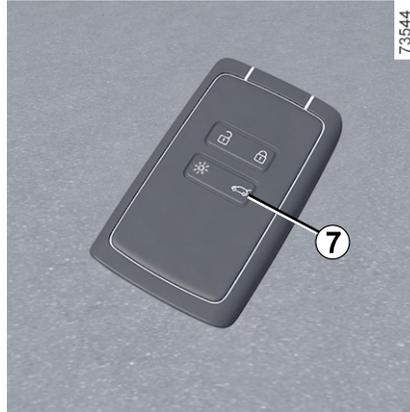

73544

Press the button **7** to lock/unlock the tailgate only.



Driver's responsibility when parking or stopping the vehicle

Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time.

They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or locking the doors, for example.

Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY


2

"Hands-free" card: battery

Replacing the battery


CARD

2

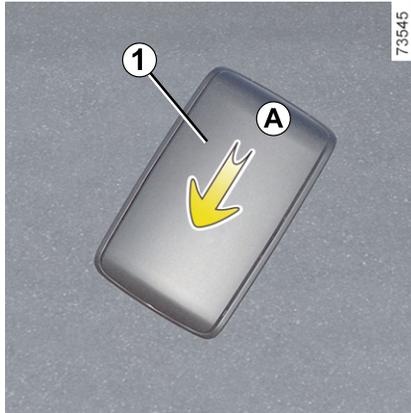

When the message “Keycard Battery Low” appears on the instrument panel, replace the battery in the card :

- slide the rear casing **1** downwards while pressing on zone **A** ;
- remove the battery cover **2** ;
- remove the battery by pressing on one side and lifting the other ;
- replace it according to the direction and template shown inside the cover.

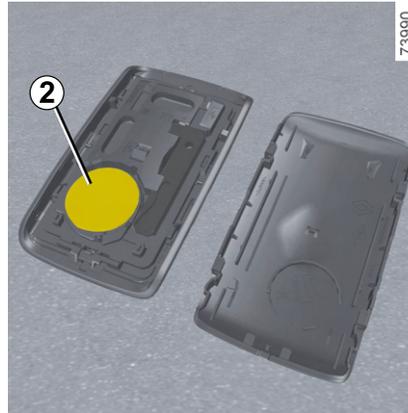

When refitting, proceed in the reverse order, then press one of the buttons on the card four times, close to the vehicle: the message will disappear.

Check that the cover is clipped shut.

Note: Do not touch the electronic circuit or contacts on the card when replacing the battery.



The batteries are available from approved dealers, and their service life approximately two years. Check that there is no dye on the battery: risk of an incorrect electrical contact.



When they need to be replaced, be sure to use the same or equivalent type of battery (consult an Approved Dealer).



When replacing :
– make sure that the batteries are correctly inserted.

Risk of explosion.

- if the flap does not close correctly, do not use and keep out of reach of children.

Operating faults

If the battery is too weak to ensure correct operation, you can still start and lock/unlock the vehicle → **33**.

CARD



73643



Precautions relating to batteries:

- keep (new or used) batteries out of reach of children;
 - do not swallow batteries;
- Risk of chemical burns which may prove fatal.
- if ingested or inserted into any part of the body, consult a doctor as soon as possible.




Do not throw away your used batteries ; give them to an organisation responsible for collecting and recycling batteries.

KEY, REMOTE CONTROL

General information


2

Key A

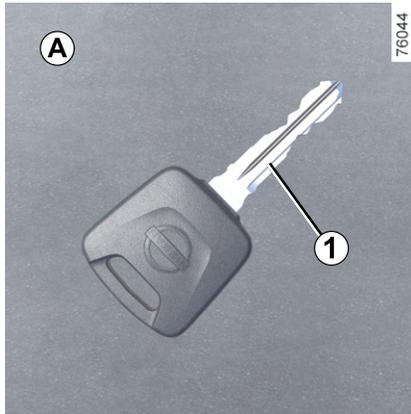

Depending on vehicle,
1. Coded key for ignition switch.

Radio frequency remote control key B

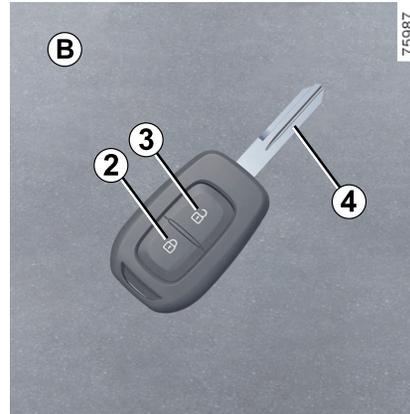

Depending on vehicle,
2. Locks all the opening elements;
3. Unlocks all opening elements;
4. Driver's door and ignition/starter key.



Driver's responsibility when parking or stopping the vehicle

Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time.

They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or locking the doors, for example.

Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY

Radio frequency remote control operating range

This varies according to the surroundings : take care not to lock or unlock the doors by inadvertently pressing the buttons on the remote control.

Note : If a door or the luggage compartment lid is open or not closed properly, the doors and luggage compartment lid lock/unlock quickly.

Interference

KEY, REMOTE CONTROL

Interference by factors in the immediate vicinity (external installations or the use of equipment operating on the same frequency as the remote control) may affect the operation of the remote control.



Advice

Avoid leaving the remote control in hot, cold or humid areas.



Replacement and additional keys or remote controls.

You must only contact an approved dealer :

- If you need to replace a key it will be necessary to take the vehicle and all of its keys to an approved dealer in order to initialise the system.
- Depending on the vehicle, you have the option of using up to four remote controls.

Remote control unit failure

Make sure that the correct battery type is being used, and that the battery is in good condition and inserted correctly. These batteries have a service life of approximately two years.

Use

Remote controls is used to lock or unlock the doors.

They are powered by a battery which can be replaced.

Locking the doors


Press locking button **1**.

Locking is confirmed by :

- the hazard warning lights and side indicator lights flashing **twice**.
- gradual dimming of the front daytime running lights.

If a door or the tailgate is open or not properly shut, the doors or tailgate lock then quickly unlock and the hazard warning lights and indicator lights do not flash.

Unlocking the doors

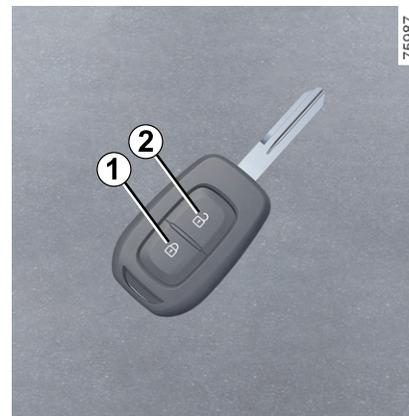

Pressing button **2** unlocks the opening elements.

Unlocking is confirmed by:

- the hazard warning lights and side indicator lights flashing **once**.

2

KEY, REMOTE CONTROL

- the rear side lights flashing **twice**;
- progressive lighting of the front day-time running lights.

2



Driver's responsibility when parking or stopping the vehicle.

Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time.

They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or locking the doors, for example.

Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY.

Radio frequency remote control: battery


Replacing the battery



Open the case at slot **1** using a flat-blade screwdriver or similar, and replace the battery **2**, observing the type and polarity shown on the back of the cover.



When they need to be replaced, be sure to use the same or equivalent type of battery (consult an approved Dealer).

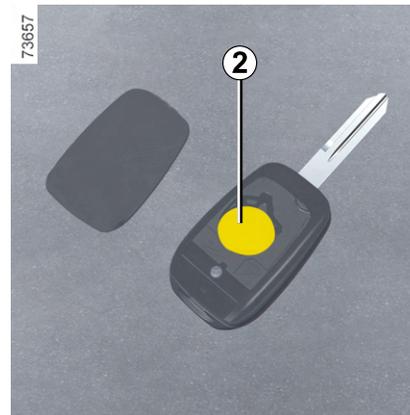

Note: It is not advisable to touch the electronic circuit in the key cover when replacing the battery.

Ensure that the cover is correctly clipped on and the screw tightened.



The batteries are available from approved dealers, and their service life approximately two years. Check that there is no dye on the battery : risk of an incorrect electrical contact.

Operating faults

KEY, REMOTE CONTROL

If the battery is too weak to ensure correct operation, you can still start and lock/unlock the vehicle → 35



 Do not throw away your used batteries ; give them to an organisation responsible for collecting and recycling batteries.



When replacing :

- make sure that the batteries are correctly inserted.

Risk of explosion.

- if the flap does not close correctly, do not use and keep out of reach of children.



Precautions relating to batteries :

- keep (new or used) batteries out of reach of children ;
- do not swallow batteries ;

Risk of chemical burns which may prove fatal.


- if ingested or inserted into any part of the body, consult a doctor as soon as possible.

DOORS AND OPENING ELEMENTS

Opening and closing the doors

2 Front doors

Opening the doors from the outside

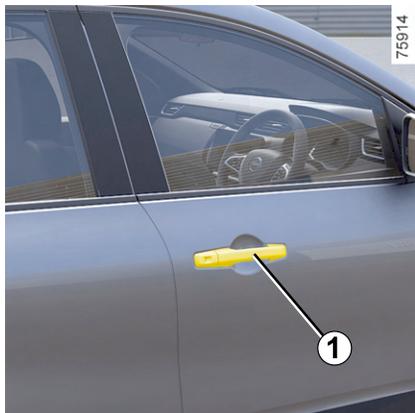


With the doors unlocked → 33, place your hand on the handle **1** and pull towards you.

Special note

Depending on the vehicle, accessories (e.g. radio) stop working either when the engine is switched off or when the doors are locked.

Opening from the inside

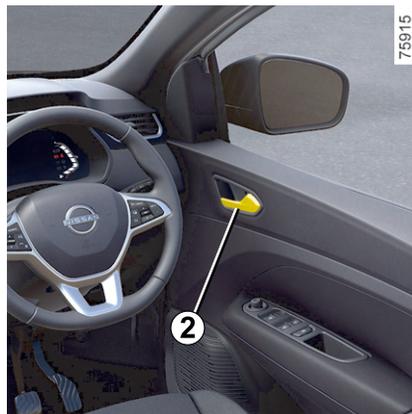

Pull handle **2**.

Lights-on reminder buzzer

If you have left the lights on after switching off the ignition, a warning buzzer will sound when a front door is opened (to prevent the battery from discharging, etc.).

Door/tailgate open buzzer

Depending on the vehicle, this alarm is fitted to the driver's side door or on all opening elements.

With the vehicle at a standstill, a warning light  will come on if a door or

the tailgate is open or not properly closed.

While driving, as soon as the vehicle reaches 20 km/h (12 mph), a warning

light  comes on with an audio beep.

Special note

Depending on the vehicle, accessories (e.g. radio) stop working either when the engine is switched off or when the driver's door is opened or when the doors are locked.

DOORS AND OPENING ELEMENTS



Driver's responsibility when parking or stopping the vehicle

Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time.

They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or locking the doors, for example.


Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY



As a safety precaution, the doors should only be opened or closed when the vehicle is stationary.

Child safety

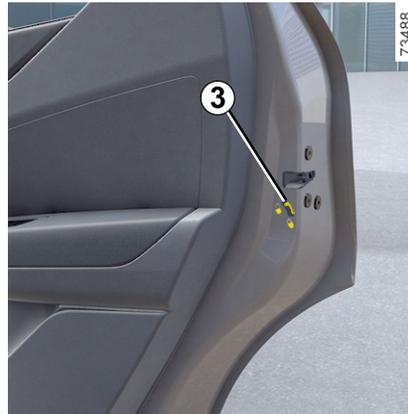

If equipped, this feature is to make it impossible for the rear doors to be opened from the inside, move lever **3** on each rear door and check from the inside that the doors are securely locked.

Locking, unlocking the opening elements and doors

If the remote control or, depending on the vehicle, the card does not work

In some cases, the radio frequency remote control or the card may not work:

- card/radio frequency remote control battery worn or run flat, vehicle battery flat etc.
- use of appliances operating on the same frequency as the card (mobile phone, etc.);
- vehicle located in a high electromagnetic radiation zone.


It is then possible:

- depending on the vehicle, use the radio frequency remote control or the emergency key integrated in the card to unlock the front right-hand door;
- to lock each of the doors manually;
- to use the interior door locking/unlocking control (refer to the following pages).


DOORS AND OPENING ELEMENTS

The card's built-in key

2

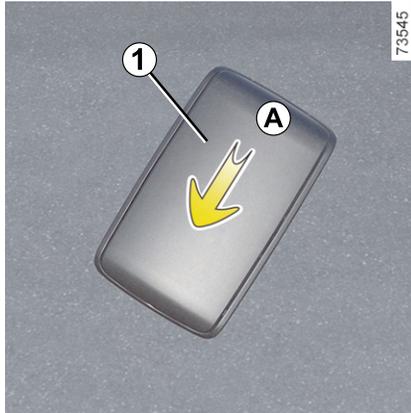


Slide the rear casing **1** downwards while pressing on zone **A**

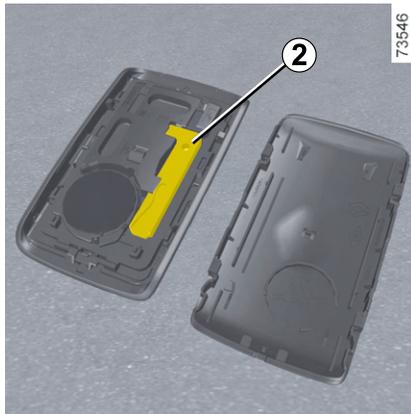

Access with key **2**

The integrated **2** key is used to lock or unlock the front right-hand door if the card does not work.


Using the key integrated in the card

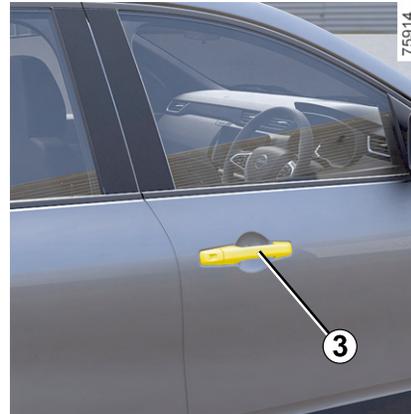

Insert the key **2** into the lock **3** and lock or unlock the front right-hand door.

Once you are inside the vehicle, put the key back in its casing in the card.

Vehicles with key/remote control

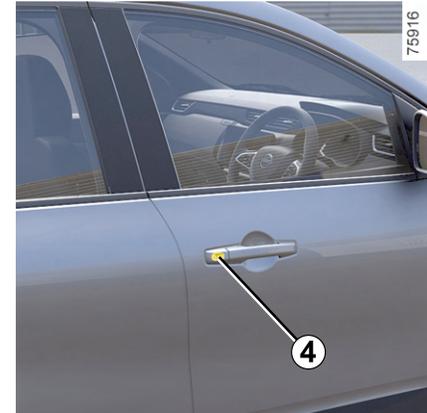

From outside

Unlock the driver door using the key **4** into key barrel integrated in the front right-hand door handle.

DOORS AND OPENING ELEMENTS




From the inside

Push in button **5** to lock and lift button **5** to unlock. It is impossible to open the door if **5** is pushed in.



Never leave your vehicle with the key inside.

Interior locking/unlocking door control

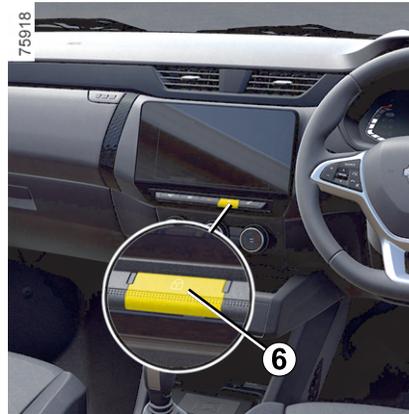

If equipped, It simultaneously locks or unlocks all the doors and tail gate. Lock or unlock the doors by pressing switch **6**.

The front door mechanism cannot be locked if the door is open.

Locking the opening elements without the card or the radio frequency remote control key

For example, in the event of a discharged battery or the card or key temporarily not working etc.

With the engine switched off and a door or tailgate open, press and hold

the **6** switch for more than five seconds.

When the door is closed, all the doors and the tailgate will be locked.

Unlocking the vehicle from the outside is only possible with the card in the vehicle access zone or by using the key.



Driver's responsibility

If you decide to keep the doors locked when you are driving, remember that it may be more difficult for those assisting you to gain access to the passenger compartment in the event of an emergency.

2

DOORS AND OPENING ELEMENTS

2



Driver's responsibility when parking or stopping the vehicle

Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time.


They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or locking the doors, for example.

Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY

Automatic locking when driving

Operating principle

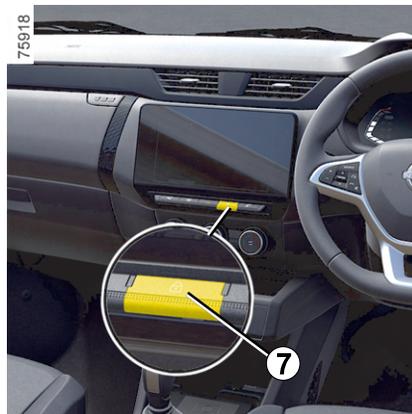

After the vehicle is started, the system automatically locks the doors when you are driving at approximately 10 km/h (6 mph) and over.

The door can be unlocked:

- by pressing the door unlocking switch **7**;
- at a standstill, by opening a front door from inside the vehicle.

Note: if a door is opened/closed, it will automatically lock again when the vehicle reaches a speed of approximately 10 km/h (6 mph).

Activating/deactivating the function

To activate:

with the vehicle stationary and the engine running, press the switch **7** for approximately 5 seconds, you will hear a warning beep along with "AUTO DOOR LOCK ON" or "AUTO LOCK ON" depending on the vehicle, message is displayed on the instrument panel.

To deactivate:

with the vehicle stationary and the engine running, press the switch **7** for approximately 5 seconds, you will hear a warning beep along with "AUTO DOOR LOCK OFF" or "AUTO LOCK OFF" depending on the vehicle, message is displayed on the instrument panel.

Operating faults

If you experience an operating fault (no automatic locking, the switch indicator light **7** does not light up when trying to lock the doors and luggage compartment, etc.), make sure that automatic locking has not been deactivated by mistake and check that all of the opening elements are properly closed. If they are properly closed, contact an approved dealer.


DOORS AND OPENING ELEMENTS



Driver's responsibility

If you decide to keep the doors locked when you are driving, remember that it may be more difficult for those assisting you to gain access to the passenger compartment in the event of an emergency.

Tailgate

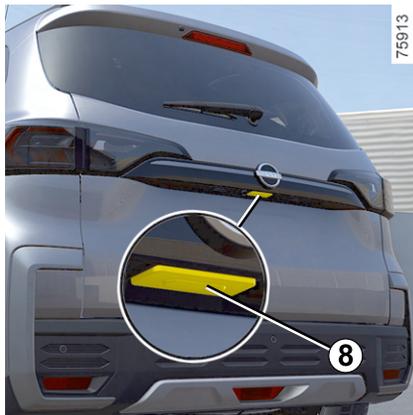

To open

With the doors unlocked, press the button **8** and lift the tailgate.



Before opening the tailgate, ensure that there is sufficient space around to allow the tailgate to open.

To close


Lower the tailgate,

When the tailgate reaches shoulder height, finish closing it by pushing down from the outside.



Never use the struts to close the luggage compartment door.

Opening manually from inside the vehicle

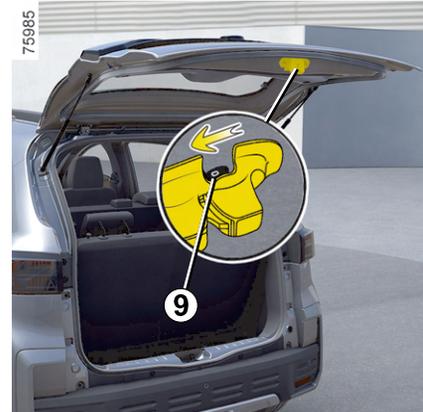

If it is impossible to unlock the tailgate from outside, it can be done manually from inside;

- access the luggage compartment by tilting the rear bench seat backs;
- insert a pencil or similar object in cavity **9** and slide the unit as shown in the illustration'
- push the tailgate to open it.

2

DOORS AND OPENING ELEMENTS

2




The attaching of any carrying device (bike rack, luggage box, etc.) resting on the luggage compartment lid is prohibited. To install a carrying device on your vehicle, contact an approved dealer.

FRONT SEATS

Front seats with manual control

Move forward or backward

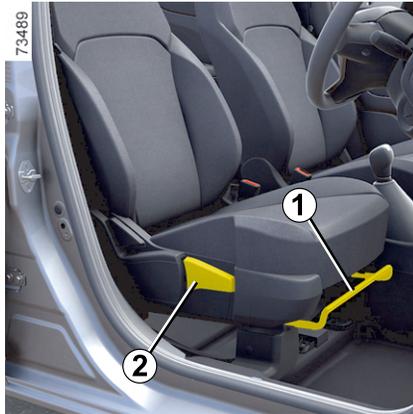

Hold the bar **1** at the centre and pull up the bar to move the seat forward or backward. Release the bar **1** in desired position of seat and ensure that the seat is fully locked into place.

To adjust the seat height

Lift the lever **2** upward/downwards to adjust the seat height and release the lever in the desired height. Ensure seat is locked properly after release.

To tilt the seatback



Lift the lever **3** upward to unlock recliner mechanism. Tilt the seat back to desired position and release the lever to lock the seatback in the desired position. Ensure seat back is locked properly by pushing/pulling the seatback.

To return the seatback to its original position, lift the lever **3** fully without applying any pressure to the seatback.

Ensure seat back is locked properly after pushing/pulling the seatback.



For safety reasons, carry out any adjustments when the vehicle is not being driven.

Nothing should be placed on the floor (area in front of driver) as such objects may slide under the pedal during braking manoeuvres, thus obstructing its use.



We would advise you not to recline the seatbacks too far to ensure that the effectiveness of the seat belts is not reduced.

REAR SEATS


Rear headrests

2

Position for use

Lift the headrest fully until it locks.
Check that it is correctly locked.

To remove the headrest

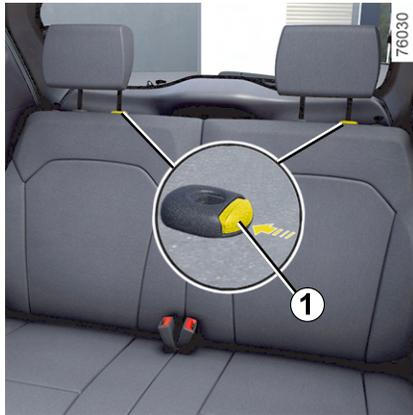

Raise the headrest as far as it will go, then press button **1** or **2** and remove the headrest.


To refit the headrest

Fit the rods into their housing and push down the headrest until it locks to set it to raised position.


lower the headrest and check that it is securely in place.

Check that it is correctly locked.

Storage position

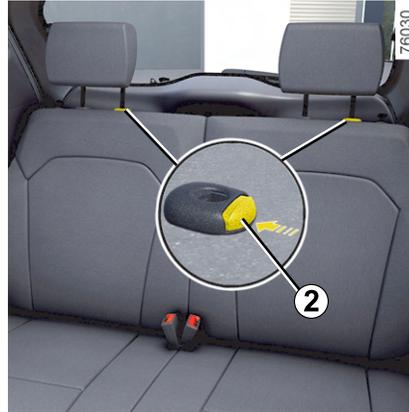

Press button **1** or **2** to lower the headrest completely.

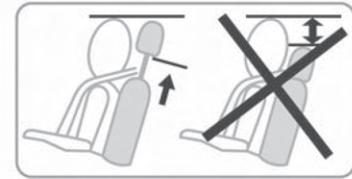

When the headrest is set at the lowest position, this is for storage only: it should not be in this position when the seat is occupied.



The headrest is a safety component. Ensure that it is fitted and in the correct position: the top of your head should be in line with the top of the headrest.

49561

REAR SEATS

Rear seats 2nd row

To slide the second row seat



- lift handle **1** to unlock and slide the seat front or back;
- Release the handle once the seat is in desired position and ensure that the seat is locked.

To recline the second row seat back rest



- turn the knob **2** to recline the seat backrest.



When refitting the seat-back, make sure it is correctly locked in place.

If seat covers are fitted, make sure these do not prevent the seatback latch from locking in.

Make sure that the seat belts are positioned correctly.

Check that the rear seat belts are positioned and operating correctly each time the rear seat is moved. Never allow anyone to ride in the luggage area or on second row seat when it is in the fold-down position. Use of these areas by passengers without proper restraints could result in serious injury in an accident or sudden stop.

Properly secure all luggage to help prevent it from sliding or shifting. Do not place luggage higher than the backrest.

When operating the backrest, be careful not to scratch or damage seat belts.

2

REAR SEATS

Rear seats 3rd row

2

To tumble the second row backrest-left side seat




- lower the headrest;
- turn the knob **3** to fold the seat backrest;
- Fold/tumble will be done simultaneously as shown in illustration **A**;
- Ensure that tumble action is fully completed by holding the tumbled seat;
- repeat the above instructions in reverse manner to return the backrest and lock the seat to its original position.



i When returning the backrest, there is a clicking sound. It is because of one-touch mechanism.

i It is recommended to tumble the rear second row seat, with the headrest in lowered condition, to avoid breakage of head rest bezel.

i It is not permitted to drive the car while second row seat is in tumbled condition as it leads to damage to the passenger in the third row.

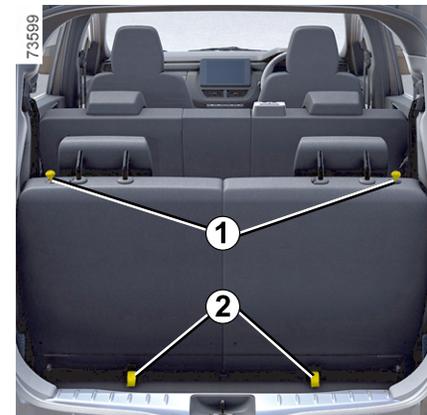

To remove the third row backrest


- Ensure the seatbelts are properly stored and lower the headrest fully;
- Pull knob **1** upwards and rotate the backrest forward to certain angle as shown in the illustration **A**;
- Lift the seat backrest slowly upwards in the same orientation to disassemble the seat backrest;

REAR SEATS

– Follow the same steps in reverse manner to assemble the seat backrest.


NOTE: Gap **3** between third row seat back and cushion will allow the customer to grab the seatback and removing them.

73654

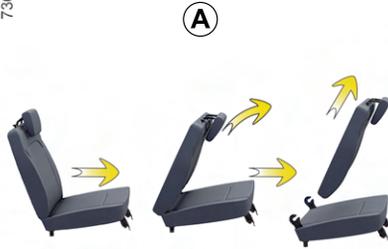

– Follow the same steps in reverse manner to assemble the seat cushion

73655

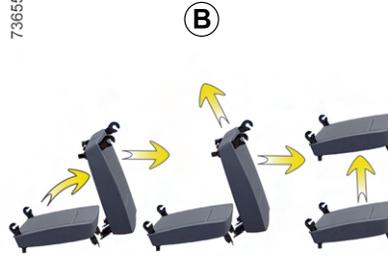

To remove the third row cushion

Follow the steps after removing the backrest;

- Pull the strap **2** and lift the cushion vertically to a certain angle as shown in illustration **B**;
- Lift the seat cushion upwards in the same orientation to disassemble the seat cushion. Ensure that the mounting brackets comes out completely from the floor on both ends;



When refitting the seat-back, make sure it is correctly locked in place. If seat covers are fitted, make sure these do not prevent the seatback latch from locking in. Make sure that the seat belts are positioned correctly. Reposition the headrests.



When refitting the third row rear seats, ensure that the seat belts are correctly positioned.

2



Make sure that the seat-back is correctly locked. If necessary, remove any obstacles behind the seats. Repeat the above until the seat is locked correctly.



It is not permitted to drive with one of the third row seats folded down if a passenger is in the other third row seat. Risk of injury



Do not attempt to remove the third row headrest when the tail gate is closed as it may break the tail gate glass.

REAR SEATS

2



Make sure the third row headrest is in lowered condition while closing the tail gate.



SEAT BELTS

Seat belts

Always wear your seat belt when travelling in your vehicle. You must also comply with the legislation of the particular country you are in.

Before starting, first adjust your driving position, then ask all occupants to adjust their seat belts to ensure optimum protection.

Adjusting your driving position

(depending on the vehicle)

- **Sit well back in your seat** (having removed your coat or jacket etc.). This is essential to ensure your back is positioned correctly.
- **adjust the distance between the seat and the pedals.** Your seat should be as far back as possible while still allowing you to depress the clutch pedal fully. The seatback should be adjusted so that your arms are slightly bent when you hold the steering wheel.



Make sure that the rear bench seat is locked in correct position so that the rear seat belts will operate efficiently.



Incorrectly adjusted or twisted seat belts may cause injuries in the event of an accident.

Use one seat belt per person, whether child or adult. Even pregnant women should wear a seat belt. In this case, ensure that the lap belt is not exerting too much pressure on the abdomen, but do not allow any slack.

Adjusting the seat belts



For correct adjustment and positioning of the seat belts at all seats:

- adjust the seats (seat position and seatback angle, if available);
- sit with your back firmly against the seatback;
- move the chest strap **1** as close as possible to the base of the neck without it actually resting against it (if necessary, adjust the height of the seat belt if available) and make sure that the chest strap **1** is in contact with the shoulder;
- position the lap belt **2** so that it lies flat on the thighs and against the pelvis.

The belt should be worn so that it is as close as possible to your body, i.e.: avoid wearing heavy clothing or keeping bulky objects under the belts, etc.

Locking

Unwind the belt **slowly and smoothly** and ensure that buckle **3** locks into latch **5** (check that it is locked by pulling on buckle **3**).

If the belt jams, allow it to return slightly before attempting to unwind it again.

If your seat belt is completely jammed, pull slowly, but firmly, so that just over 3 cm unwinds. Allow it to return slightly before attempting to unwind it again.

If there is still a problem, contact an approved dealer.

SEAT BELTS

Unlocking

Press the button **4** on latch **5** and the seat belt will be rewound by the inertia reel. Hold by the buckle to make this easier.

2

Seat belt reminder light (Driver/ Front Passenger seats)

 Depending on the vehicle, it comes on in the cluster when the ignition is ON and goes off after few seconds and if the driver's and/or passenger's seat belt is not fastened. When the vehicle is being driven, it comes on and a beep sounds for approximately 2 minutes until the driver's/ passenger seat belt is fastened.

 an object placed on the passenger seat may activate the warning light in some cases, depending on the vehicle.

Rear seat belt reminder

(Depending on the Vehicle)

The **6** graphic is displayed on the instrument panel in below two states, This informs the driver fastening status

of each of the rear seat belts every time:

- the ignition is switched on;
- Status of fastening or unfastening of a rear seat belt.



Understanding the graphic 6:

- indicator filled: seatbelt fastened;
- indicator unfilled: seatbelt unfastened.

Depending on the vehicle, the **6** symbol appears when the ignition is switched ON, if a rear seat belt is buckled state to unbuckled state or any state change. When the vehicle speed is less than approximately 20 km/h (12 mph), the **6** symbol appears for at least 65 seconds.

When the vehicle speed reaches or exceeds 20 km/h (12 mph), if one of the rear seat belts is or becomes unfastened during the journey:

- a beep is emitted for 35 seconds; and
- the **6** symbol is displayed for at least 65 seconds and the symbol for the seat concerned changes to unfilled.

Always make sure that the rear passengers are properly fastened in and that the number of seat belts indicated corresponds to the number of rear seats occupied.

Rear seat belt reminder 7

(Depending on the Vehicle)

The **7** graphic is displayed on the instrument panel in below two states, This informs the driver fastening status of each of the rear seat belts every time:

- the ignition is switched on;
- Status of fastening or unfastening of a rear seat belt.

SEAT BELTS

77102



Understanding the graphic 7:

- indicator green: seatbelt fastened;
- indicator red: seatbelt unfastened.

Depending on the vehicle, the **7** symbol appears when the ignition is switched ON, if a rear seat belt is buckled state to unbuckled state or any state change. When the vehicle speed is less than approximately 20 km/h (12 mph), the **7** symbol appears for at least 65 seconds.

When the vehicle speed reaches or exceeds 20 km/h (12 mph), if one of the rear seat belts is or becomes unfastened during the journey:

- a beep is emitted for 35 seconds;
- and

– the **7** symbol is displayed for at least 65 seconds and the symbol for the seat concerned changes to red.

Always make sure that the rear passengers are properly fastened in and that the number of seat belts indicated corresponds to the number of rear seats occupied.

Seat with armrest(s)



Ensure that the seat belt is passed underneath the armrest **8**, check that the buckle **3** is fastened in the latch **5**.

Lower the armrest **8** (movement **A**).

Unwind the belt **slowly** and **smoothly**.


Pass the shoulder strap under the armrest **8**. Make sure the buckle locks

into the latch (check that it is locked by pulling on the buckle).

Rear seat belts

Rear side seat belts

Second row rear side seat belts **9**

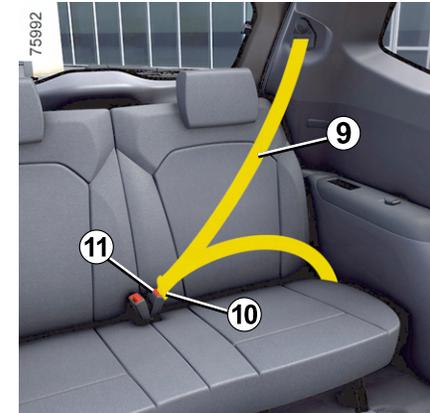

Slowly unwind belt **9** and click latch **10** into red buckle **11**. Before folding down a rear side seat, buckle the seat belt concerned in its corresponding catch.


This will prevent the seat belt becoming trapped when the seat is returned to its position for use.

In all cases, check that the seat belts are operating correctly.

2

SEAT BELTS

Second row rear centre seat belt 12

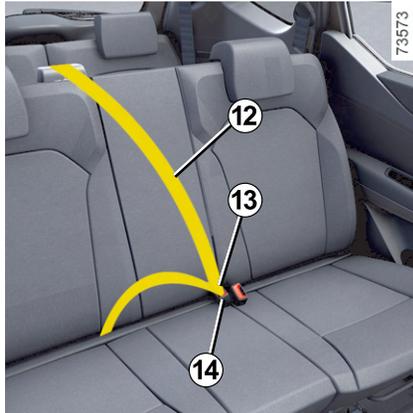

2

Slowly unwind the belt **12**.

Fasten sliding latch **13** into the red buckle **14**.

Third row rear seat belts 15



Slowly unwind the belt **15**.

Fasten latch **16** into the red buckle **17**.

Adjust the seat belt strap as indicated in the image for height adjustment.



Check that the rear seat belts are positioned and operating correctly each time the rear bench seat is moved.

SEAT BELTS

Warnings

The following information applies to the vehicle's front and rear seat belts.

2



- No modification may be made to the component parts of the originally fitted restraint system: seat belts, seats and their mountings. For special operations (e.g. fitting child seats), contact an authorised dealer.
- Do not use devices which allow any slack in the belts (e.g. clothes pegs, clips, etc.): a seat belt which is worn too loosely may cause injury in the event of an accident.
- Never wear the shoulder strap under your arm or behind your back.
- Never use the same belt for more than one person and never hold a baby or child on your lap with your seat belt around them.
- The belt should never be twisted.
- Following an accident, have the seat belts checked and replaced if necessary. Always replace your seat belts as soon as they show any signs of wear.
- When the rear bench seat is being put back, make sure that the seat belts and buckles are correctly positioned so that they can be used properly.
- Make sure that the buckle is inserted into the appropriate catch.
- Ensure that no objects are placed in the area around the seat belt catch as they could prevent it from being properly secured.
- Make sure the seat belt catch is properly positioned (it should not be hidden away, crushed or flattened by people or objects).

ADDITIONAL SAFETY DEVICES

2

Methods of restraint in addition to the front seat belts

Depending on the vehicle, they will consist of :

- **seat belt inertia reel pretensioners ;**
- **chest-level load limiters ;**
- **air bags for driver and front passenger.**

These systems are designed to act independently or together when the vehicle is subjected to a frontal impact.

Depending on the severity of the impact, the system can trigger :

- seat belt locking ;
- the seat belt inertia reel pretensioner (which engages to correct seat belt slack) ;
- airbags.

Pretensioners



The pretensioners (in driver side) hold the seat belt against the body, holding the occupant more securely against the seat, thus increasing the seat belt's efficiency.

With the ignition on, following a significant frontal impact and depending on the severity of the impact, the system may trigger the seat belt inertia reel pretensioner **1**, which instantly retracts the seat belt.



- Have the entire restraint system checked following an accident.
- No operation whatsoever is permitted on any part of the system (pretensioners, air bags, computers, wiring) and the system components must not be reused on any other vehicle, even if identical.
- To avoid incorrect triggering of the system which may cause injury, only qualified personnel from an approved Dealer may work on the pretensioner and air bag system.
- The electric trigger system may only be tested by a specially trained technician using special equipment.
- When the vehicle is scrapped, contact an approved Dealer for disposal of the pretensioner and air bag gas generators.

Load limiter

Above a certain severity of impact, this mechanism is used to limit the force of

ADDITIONAL SAFETY DEVICES

the belt against the body so that it is at an acceptable level.

Airbags for driver and front passenger

Fitted to the driver and passenger side.

The presence of this equipment is indicated by the word "Airbag" on the steering wheel and dashboard (airbag zone **A**) and, depending on the vehicle, a symbol on the lower section of the windscreen.

Each air bag system consists of:

- an air bag and gas generator fitted on the steering wheel for the driver and in the dashboard for the front passenger;
- an electronic unit for system monitoring which controls the gas generator electrical trigger system;
- a single  warning light on the instrument panel.



The air bag system uses pyrotechnic principles. This explains why, when the air bag inflates, it will generate heat, produce smoke (this does not mean that a fire is about to start) and make a noise upon detonation. In a situation where an air bag is required, it will inflate immediately and this may cause some minor, superficial grazing to the skin or other problems.



2

Operation

This system is only operational when the ignition is switched on.

In a severe **frontal** impact, the air bags inflate rapidly, cushioning the impact of the driver's head and chest against the steering wheel and of the front passenger against the dashboard. The air bags then deflate immediately so that the passengers are not in any way hindered from leaving the vehicle.

Operating faults



This warning light will light up on the instrument panel when the ignition


ADDITIONAL SAFETY DEVICES

is switched on and then go out after a few seconds.

2


If it does not light up when the ignition is switched on, or comes on when the engine is running, there is a fault in the system.

Contact your approved Dealer as soon as possible. Your protection will be reduced until this fault is rectified.


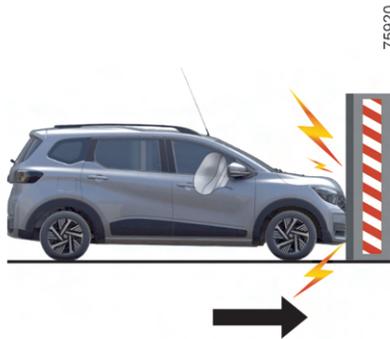


The following cases cause the pretensioners or airbags to operate.

In a frontal impact against a rigid (non-deformable) surface at an impact speed equal or greater than 25 km/h (16 mph)

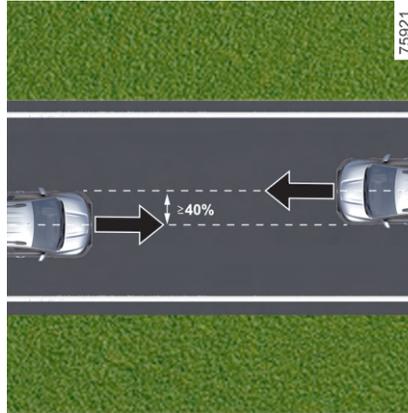

In a frontal impact with another vehicle of an equivalent or higher category, with an impact area equal to or greater than 40 %, where the speed of both vehicles is equal or greater than 40 km/h (25 mph).

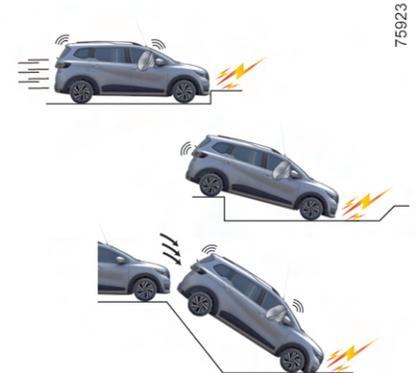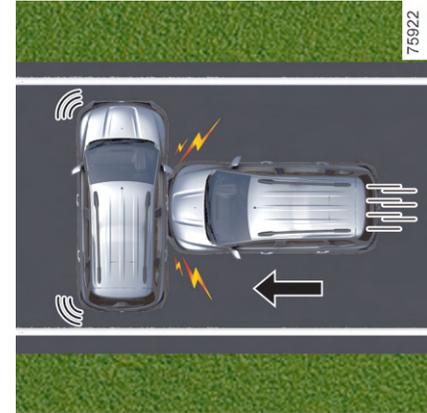

In the following examples, the pretensioners and airbags could operate:


ADDITIONAL SAFETY DEVICES

- impacts to the underside of the vehicle from kerbs, for example;
- potholes;
- a fall or a hard landing;
- stones.



In the following examples, the pretensioners and airbags might not operate:

- in the event of a rear impact, however severe;
- if the vehicle overturns.

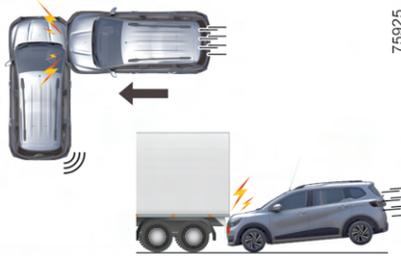

- in the event of a side impact, affecting the front of the vehicle;
- in the event of a frontal impact, under the tail of a lorry;
- in the event of a frontal impact against an obstacle with a sharp angle.

ADDITIONAL SAFETY DEVICES

Warnings

2

All of the warnings below are given so that the air bag is not obstructed in any way when it is inflated and also to prevent the risk of serious injuries caused by items which may be dislodged when the air bag inflates.



Warnings concerning the driver's airbag

- Do not modify the steering wheel or the steering wheel boss.
- Do not cover the steering wheel boss under any circumstances.
- Do not attach any objects (badge, logo, clock, telephone holder, etc.) to the steering wheel boss.
- The steering wheel must not be removed (except by qualified personnel from our Network).
- When driving, do not sit too close to the steering wheel. Sit with your arms slightly bent → 45. This will allow sufficient space for the air bag to deploy correctly and be fully effective.

Warnings concerning the passenger air bag

- Do not attach or glue any objects (badge, logo, clock, telephone holder, etc.) to the dashboard on or near the air bag.
- Do not place anything between the dashboard and the passenger (pet, umbrella, walking stick, parcels, etc.).
- The passenger must not put his or her feet on the dashboard or seat as there is a risk that serious injuries may occur. In general, parts of the body should be kept away from the dashboard (knees, hands, head, etc.).
- The devices in addition to the front passenger seat belt should be reactivated as soon as a child seat is removed, to ensure the protection of the passenger in the event of an impact.

A REAR-FACING CHILD SEAT MUST NOT BE FITTED TO THE FRONT PASSENGER SEAT → 58.

ADDITIONAL SAFETY DEVICES

Side protection devices

Side Airbags

Depending on vehicle, these airbags may be fitted at the sides of the front seats and are deployed at the sides of the seats (door side) to protect the occupants in the event of a severe side impact.

Curtain Airbags

This is an airbag fitted (depending on the vehicle) along the upper sides of the vehicle. They inflate along the front and rear door side windows to protect the passengers in the event of a severe side impact.



Depending on the vehicle, a marking on the windscreen informs you of the presence of additional means of restraint (air bags, pretensioners, etc.) in the passenger compartment.

ADDITIONAL SAFETY DEVICES

Warnings

2



Warning concerning the side airbag

- **Fitting seat covers:** seats equipped with an airbag require covers specifically designed for your vehicle. Contact an approved dealer to find out if these covers are available. The use of any covers other than those designed for your vehicle (including those designed for another vehicle) may affect the operation of the airbag and reduce your protection.
- Do not place any accessories, objects or even pets between the seatback, the door and the internal fittings. Do not cover the seatback with objects such as clothes or accessories. This may prevent the airbag from operating correctly or cause injury when the airbag is deployed.
- No work or modification whatsoever may be carried out on the seat or internal fittings, except by qualified personnel from our Network.
- The airbag is deployed through the slits in the front seatbacks (door side): never insert any objects in these slits.

ADDITIONAL SAFETY DEVICES

Additional methods of restraint

All of the warnings below are given so that the airbag is not obstructed in any way when it is inflated and also to prevent the risk of serious injuries caused by items which may be dislodged when it inflates.

2



The airbag is designed to complement the action of the seat belt. Both the airbag and the seat belt are integral parts of the same protection system. It is therefore essential to wear seat belts at all times. If seat belts are not worn, the occupants are exposed to the risk of serious injury in the event of an accident. It may also increase the risk of minor superficial injuries occurring when the airbag is deployed, although such minor injuries are always possible with airbags.

If the vehicle should overturn or suffer a rear impact, however severe, the pretensioners and airbags are not always triggered. Shocks to the underbody of the vehicle, from pavements, potholes, stones etc. can all trigger these systems.

- Work and modifications on the complete system (airbags, pretensioners, ECU, wiring harness, etc.), are **strictly prohibited** (except by qualified brand network personnel).
- To ensure that the system is in good working order and to avoid accidental triggering of the system which may cause injury, only qualified Network personnel may work on the airbag system.
- As a safety precaution, have the airbag system checked if your vehicle has been involved in an accident, or is stolen or broken into.
- When selling or lending the vehicle, inform the new purchaser of these conditions when handing over this vehicle user manual.
- When scrapping your vehicle, contact your approved dealer for disposal of the gas generator(s).

CHILD SAFETY

General information

2

Carrying children

Children, and adults, must be correctly seated and strapped in for all journeys. The children being carried in your vehicle are your responsibility.

A child is not a miniature adult. Children are at risk of specific injuries as their muscles and bones have not yet finished growing. The seat belt alone would not provide suitable protection. Use an approved child seat and ensure you use it correctly.



To prevent the doors being opened, use the childproof locks → 32.



A collision at 50 km/h is the same as falling a distance of 10 metres.

Transporting a child without a restraint is the equivalent of allowing him or her to play on a fourth-floor balcony without railings.

Never travel with a child held in your arms. In the event of an accident, you will not be able to keep hold of the child, even if you yourself are wearing a seat belt. If your vehicle has been involved in a road accident, replace the child seat and have the seat belts and fittings checked.



It is recommended that children and infants are seated in child restraint. You choose a child restraint that fits your vehicle. Always follow the manufacturer's instruction for installation and use. In addition there are many types of child restraint available for larger children that should be used for maximum protection.

CHILD SAFETY



Driver's responsibility when parking or stopping the vehicle

Never leave an animal, child or adult who is not self-sufficient alone on your vehicle, even for a short time.

They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or by locking the doors.

Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY.

Using a child seat

The level of protection offered by the child seat depends on ability to restrain child and on its installation. Incorrect installation risks the protection of the child in the event of harsh braking or an impact.

Before purchasing a child seat, check that it complies with the regulations and that it can be fitted in your vehicle. Consult an approved dealer to find out

which seats are recommended for your vehicle. Before fitting a child seat, read the manual and respect its instructions. If you experience any difficulties during installation, contact the manufacturer of the equipment. Keep the instructions with the seat.



Set a good example by always fastening your seat belt and teaching your

child :

- to strap themselves in correctly.
- to always get in and out of the car at the kerb, away from busy traffic.

Do not use a second-hand child seat or one without an instruction manual.

Check that there are no objects in the vicinity of the child seat which could impede its operation.



Never leave a child unattended in the vehicle.

Check that your child is always strapped in and that the belt or safety harness used is correctly set and adjusted. Avoid wearing bulky clothing which could cause the belts to slacken → 45.

Never let your child put their head or arms out of the window. Check that the child is in the correct position for the entire journey, especially if asleep.

CHILD SAFETY

Choosing a child seat

Rear-facing child seats

2



61260

A baby's head is, proportionally, heavier than that of an adult and its neck is very fragile. Transport the child in this position as long as possible (until the age of 2 at the very least). It supports both the head and the neck.

Choose a bucket type seat for best side protection and change it as soon as the child's head is higher than the shell.

Forward-facing child seats



61261

Up to 18 kg or 4 years, the child may travel on a forward-facing seat. Choose a seat according to the child's size: their head and abdomen are the areas which require most protection. A forward-facing child seat which is firmly attached to the vehicle will reduce the risk of impact to the head. Ensure your child travels in a forward-facing seat with a harness for as long as their size permits.

Choose a bucket type seat for optimum side protection.

Booster cushions



61262

From 15 kg or 4 years, the child can travel using a booster seat, which will enable the seat belt to be adapted to suit his size and shape. The booster seat cushion must be fitted with guides to position the seat belt on the child's thighs rather than the stomach. It is recommended that you use a seatback which can be adjusted in terms of height to position the seat belt in the centre of the shoulder. It must never rest on the neck or on the arm.

Choose a bucket type seat for optimum side protection.

CHILD SAFETY

Choosing a child seat mounting

There are two ways to attach child seats: using the seat belt or using the ISOFIX system.

Attachment via the seat belt

The seat belt must be adjusted in order to ensure it works in the event of sudden braking or impact

Ensure that the strap paths indicated by the child seat manufacturer are respected

Always check that the seat belt is correctly fastened by pulling it up, then pulling it out fully whilst pressing on the child seat.

Check that the seat is correctly held by moving it from side to side and back to front : the seat should remain firmly fixed.

Check that the child seat has not been installed at an angle and that it is not resting against a window.



Do not use the child seat if it risks unfastening the seat belt restraining it: the base of the seat must not rest on the buckle and/or catch of the seat belt.



The seat belt must never be twisted or the tension relieved.

Never pass the shoulder strap under the arm or behind the back.

Check that the seat belt has not been damaged by sharp edges. If the seat belt does not operate normally, it will not protect the child.

Consult an approved Dealer. Do not use this seat until the seat belt has been repaired.

Attachment using ISOFIX system

Authorised child seats ISOFIX are approved in accordance with current regulations if any of the 3 cases below applies:

- ISOFIX universal 3-point forward-facing seat;
- ISOFIX semi-universal 2-point seat;
- vehicle-specific.

In the latter two cases check that your child seat can be installed by consulting the list of compatible vehicles.



No modifications must be made to the component parts of the originally fitted restraint system (seat belts, ISOFIX, seats and their mountings).

Attach the child seat with the ISOFIX locks, if these are provided. The ISOFIX system allows quick, easy, safe fitting. The ISOFIX system consists of two rings and, in some cases, a third ring.




Before using an ISOFIX child seat that you purchased for another vehicle, check that its installation is authorised. Consult the list of vehicles which can be fitted with the seat with the equipment manufacturer.

CHILD SAFETY

2



The two rings **1** are located between the seatback and the seat base of the seat and are identified by a marking **ISOFIX**.

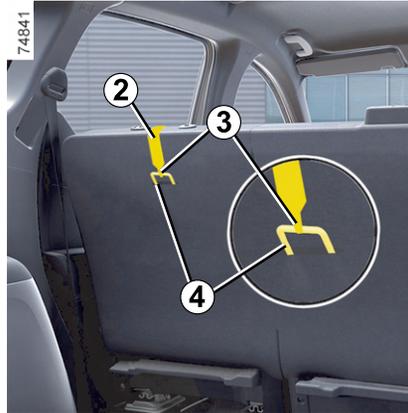

The third ring **4** is used to attach the upper strap **2** on some child seats. The upper strap **2** should be positioned between the seatback.

Attach the hook **3** to one of the rings **4**

marked by the  symbol.

Pull the upper strap **2** so that the back of the child seat comes into contact with the vehicle seatback.



The child seat strap must be attached to the corresponding ring.



The ISOFIX anchorage points have been exclusively designed for child seats with the ISOFIX

system.

Never fit a different type of child seat, seat belt or other objects to these fittings.

Check that nothing is obstructing the anchorage points.

If your vehicle has been involved in a road accident, have the ISOFIX anchorage points checked and replace your child seat.



Check that the seatback of the forward-facing child seat is in contact with the seatback of the vehicle seat. In this case, the child seat may not always rest on the seat base of the vehicle seat.

CHILD SEATS

Fitting a child, general information

Some seats are not suitable for fitting child seats.

The diagram on pages → 65 show you how to attach a child seat.



Fit the child seat in a rear seat wherever possible.

Make sure the child seat or the child's feet do not prevent the front seat from locking correctly → 39.

Check that when installing the child seat in the vehicle it is not at risk of coming loose from its base. If you have to remove the headrest, check that it is correctly stored so that it does not come loose under harsh braking or impact.

Always attach the child seat to the vehicle even if it is not in use so that it does not come loose under harsh braking or impact.

The types of child seats indicated may not be available. Before using a differ-

ent child seat, check with the manufacturer that it can be fitted.



Since front passenger airbag triggering and the position of a rear-facing child seat are incompatible, NEVER use a rear-facing child restraint on a seat with an airbag.

The airbag could cause SERIOUS OR FATAL INJURY if inflated.

In the rear side seat

A carrycot can be installed across the vehicle and will take up at least two seats. Position the child with his or her feet nearest the door.

Before installing a rear-facing child seat, move the front seat forwards as far as possible then, once the child seat is installed, move the front seat backwards as far as possible without it touching the child seat.

For the safety of the child in the forward-facing position:

- move the seat in which the child will be seated as far back as possible;
- move the seat in front of the child forwards, and set the position of the

seatback to avoid contact between the seat and the child's legs.



Make sure the child seat or the child's feet do not prevent the front seat from locking correctly

→ 39.

In all situations, remove the headrest of the rear seat on which the child seat is positioned → 40. If necessary, position the rear seat as far back as possible. This must be done before fitting the child seat. Check that the child seat is resting against the seatback of the rear seat.

CHILD SEATS

2



Installing a booster seat (group 2 or 3)

Check that the seat belt
→ 45 operates (winds)

correctly.

Adjust the seat belt by positioning:

- the shoulder strap on the child's shoulder without it touching their neck;
- the lap belt so that it lies flat on the thighs and against the pelvis.

If necessary, adjust the position of the vehicle seat.




Fit the child seat in a rear seat wherever possible. To install an

ISOFIX seat in the rear outboard positions, use your hand to move the buckle before engaging the latches.

CHILD SEATS

Attachment by seat belt

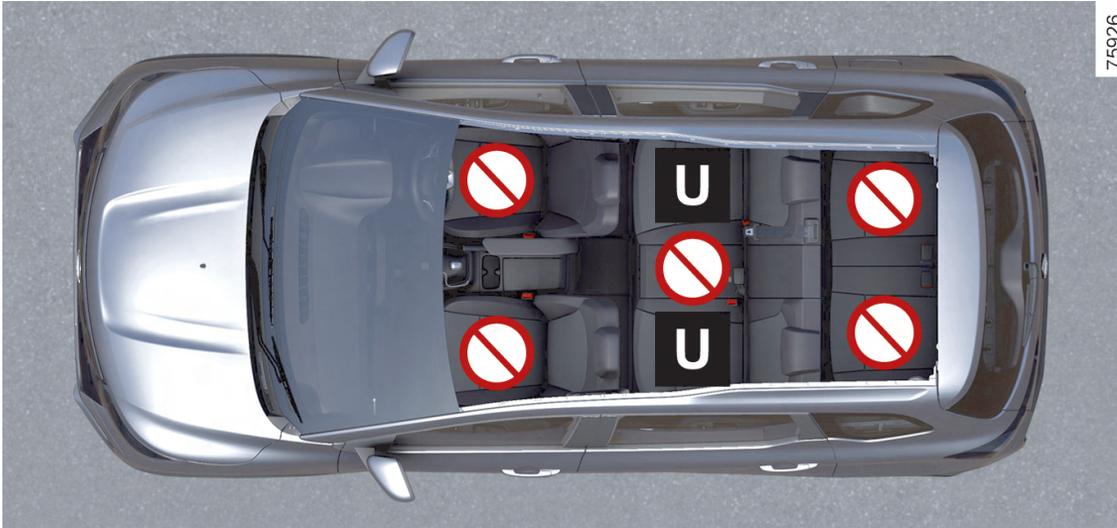

75926

CHILD SEATS

Child seat attached using the belt

2



Seat which allows a child seat with “Universal” approval to be attached by a seat belt.



Seat not suitable for fitting child seats.



Check that your child is always strapped in and that the belt or safety harness used is correctly set and adjusted → 45.
If necessary, adjust the seat position accordingly.



Using a child safety system which is not approved for this vehicle will not properly protect the baby or child. They risk serious or even fatal injury.



It is prohibited to fit a child seat in the adjacent available seat when the large seatback is folded down onto the other seats → 40.

CHILD SEATS

Installation table

The table below summarises the information shown on the installation diagram in order to ensure the regulations in force are respected.

2

Seating Position						
			Second row seats		Third row seats	
Type of child seat	Weight of the child	Front passenger seat	Lateral outboard	Central	Left	Right
Carrycot fitted across the vehicle Group 0	< 10 kg	X	U (1)	X	X	X
Rear-facing seat Groups 0 or 0 +	< 10 kg and < 13 kg	X	U (2)	X	X	X
Rear-facing seat Groups 0+ and 1	<13 kg and 9 to 18 kg	X	U (2)	X	X	X
Forward-facing seat Group 1	9 to 18 kg	X	U (3)	X	X	X
Booster seat Groups 2 and 3	15 to 25 kg	X	U (3)	X	X	X

X= Seat not suitable for fitting child seats.

U= Seat which allows a child seat with "Universal" approval to be installed using a seat belt ; check that it can be fitted.

(1) A Carrycot is installed in the transverse direction of the vehicle and uses at least two seats. Place the child's head on the opposite side of the door.

(2) If necessary, place the vehicle seat in the rear most position. Push the front seat of the vehicle forward as far as possible to install a rear-facing child seat, then back up as far as possible without touching the child seat.

CHILD SEATS

(3) In all cases, remove the headrest from the rear seat on which the child seat is installed. This action must be done before placing the child seat. Move forward the seat in front of the child and straighten the back to avoid contact between the seat and the child's legs.


2



Make sure your child is still securely fastened and that their harness or belt is properly adjusted. If necessary, adjust the seat position accordingly.

CHILD SEATS

Attachment using the ISOFIX system

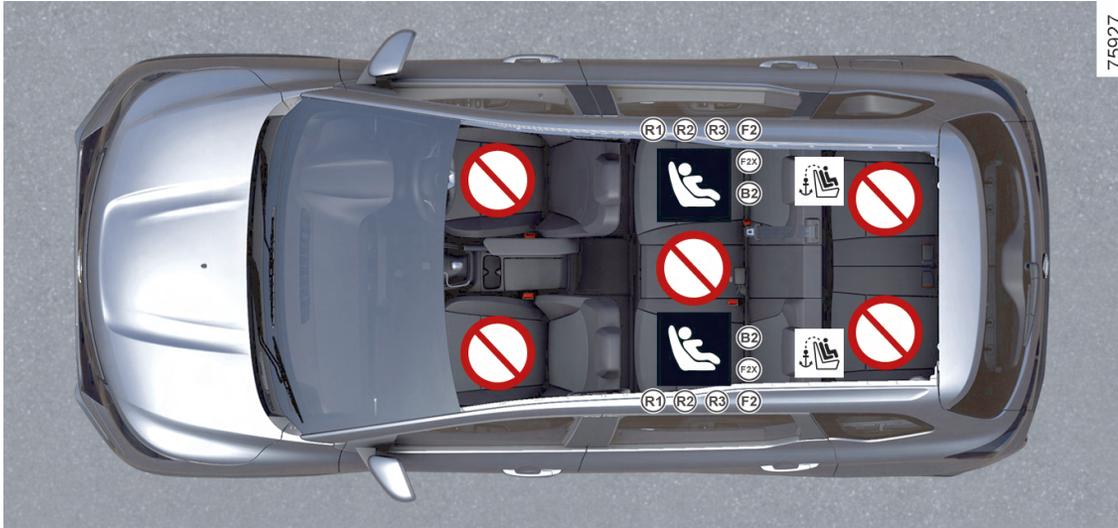

CHILD SEATS

2



Seat not suitable for fitting child seats.

Child seat attached using the ISOFIX system (depending on the vehicle)



Seat which allows an ISOFIX child seat to be attached.



The rear seats are fitted with an anchorage point which allows a forward-facing ISOFIX child seat with universal approval to be attached. The anchorage points  are located on the seat back of the rear seats.



Check that your child is always strapped in and that the belt or safety harness used is correctly set and adjusted.
→ 45
If necessary, adjust the seat position accordingly.



Using a child safety system which is not approved for this vehicle will not properly protect the baby or child. They risk serious or even fatal injury.

CHILD SEATS

Installation table

The table below summarises the information already shown on the diagram on the previous page, to ensure the regulations in force are respected.

2

Type of child seat	Weight of the child	Seat size ISOFIX	Front passenger seat	Rear side seats	Rear centre seat
Carrycot fitted across the vehicle Group 0	< 10 kg	L1 [F] L2 [G]	X	X	X
Rear-facing seat Groups 0 or 0 +	< 10 kg and < 13 kg	R1 [E]	X	IL (1)	X
Rear-facing seat Groups 0+ and 1	< 13 kg and 9 to 18 kg	R2 [D] R3[C]	X	IL (1)	X
Forward-facing seat Group 1	9 to 18 kg	F2 [B] F2X [B1]	X	IUF - IL (2)	X
Booster seat Groups 2 and 3	15 to 25 kg and 22 to 36 kg	B2	X	IUF - IL (2)	X

X= Seat not suitable for fitting child seats ISOFIX.

IUF/IL = On equipped vehicles, seat which allows a child seat with “Universal/Semi-universal or vehicle specific” approval to be fitted using the ISOFIX system ; check that it can be fitted correctly.

(1) If necessary, position the vehicle seat as far back as possible. Move the front seat as far forward as possible to install a rear-facing child seat, then move back the seat in front as far as it will go, although without allowing it to come into contact with the child seat.

(2) In all situations, remove the rear headrest of the seat on which the child seat is positioned. This must be done before fitting the child seat → 40. Move the seat in front of the child forwards, move the seatback forward to avoid contact between the seat and the child’s legs.

The size of the ISOFIX child seat is indicated by a letter:

CHILD SEATS

2

- F2, F2X [B, B1]: for forward-facing child seats in group 1 (9 to 18 kg);
- R3, R2 [C, D]: rear-facing seats or shell seats in group 0+ (less than 13 kg) or group 1 (9 to 18 kg);
- R1 [E]: rear-facing shell seats in group 0 (less than 10 kg) or 0+ (less than 13 kg);
- L1, L2 [F, G]: carrycots in group 0 (under 10 kg).
- B2: boosters in groups 2 and 3 (15 to 25 kg and 22 to 36 kg);




It is prohibited to fit a child seat in the adjacent available seat when the large seatback is folded down onto the other seats → 40.



RISK OF DEATH OR SERIOUS INJURY: never fit a child seat on the front seat if the vehicle has a passenger airbag which cannot be deactivated.

CHILD SAFETY: THE FRONT PASSENGER AIRBAG

Front passenger airbag : label

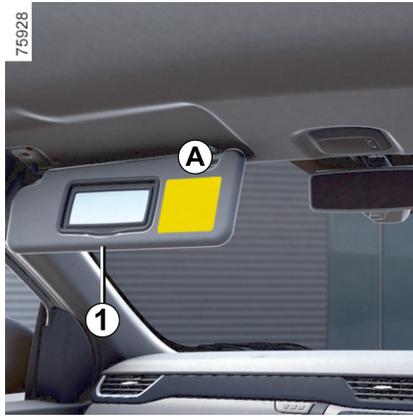

The markings on the dashboard and labels **A** on each side of the passenger sun visor **1** (example: label shown above) remind you of these instructions.




DANGER

As the operation of the front passenger airbag is not compatible with the positioning of rear-facing child seat, **NEVER fit a rear-facing child restraint system in a seat protected by an ACTIVATED front AIRBAG . This could lead to the CHILD'S DEATH or SERIOUS INJURY.**

DRIVING POSITION

Driving position, right-hand drive

2

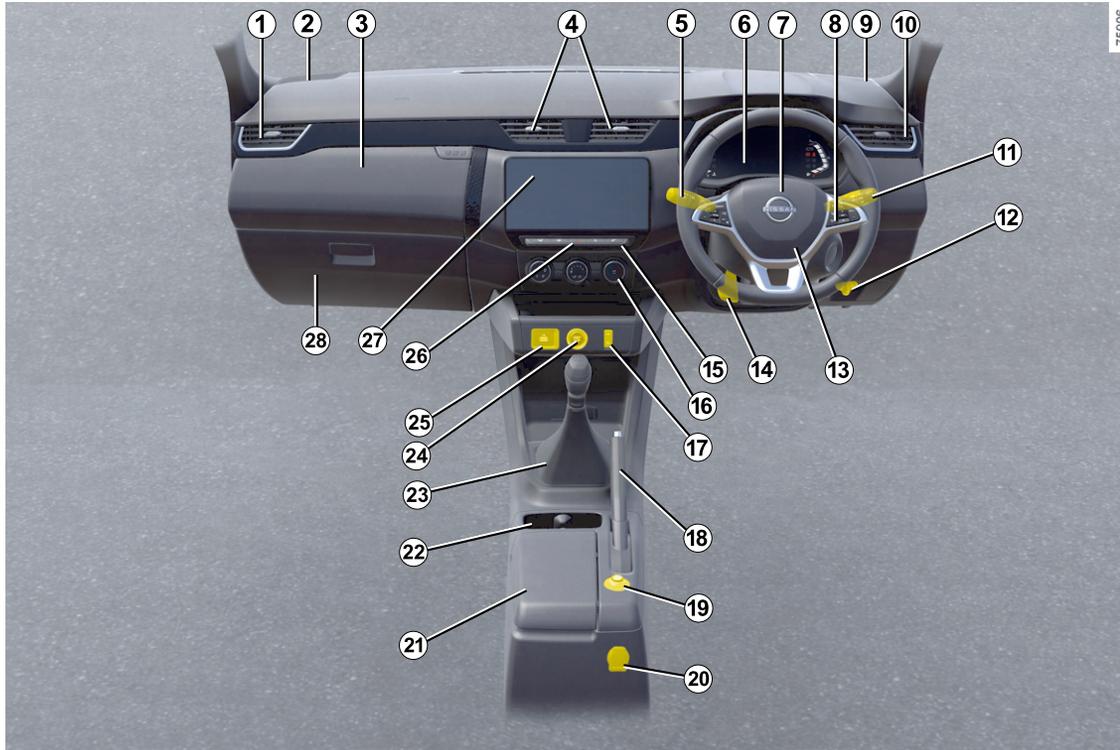

DRIVING POSITION

The presence of the equipment DEPENDS ON THE VEHICLE VERSION AND COUNTRY.

- 1.** Left side air vent
- 2.** Location for left tweeter
- 3.** Upper Glove Box
- 4.** Centre air vents
- 5.** Steering column stalk for wind-screen wash / wiper
- 6.** Instrument panel
- 7.** Location for driver's airbag
- 8.** Trip switch
- 9.** Location for right tweeter
- 10.** Right side air vent
- 11.** Steering column stalk for direction indicator lights / exterior lights,
- 12.** Head light beam height adjustment control
- 13.** Horn
- 14.** Steering wheel height adjustment
- 15.** Electronic stability control switch
- 16.** Heating and ventilation controls
- 17.** Cruise control
- 18.** Handbrake
- 19.** Rear AC switch
- 20.** 12V Accessories socket
- 21.** Rear console cooled box
- 22.** Location for cup holder
- 23.** Gear lever
- 24.** Start/Stop switch
- 25.** USB port (for changing + media connect)
- 26.** Hazard warning lights switch
- 27.** Location for radio/Navigation System
- 28.** Lower Glove Box

TRIP COMPUTER

General information

2 Trip computer *A* and *B*



Depending on the vehicle, this includes the following functions:

- mileage;
- trip settings;
- information messages;
- operating fault messages (related to

the  warning light);

- warning messages (related to the

 warning light);

Vehicle fitted with trip computer *A*

Press switch **1** as many times as required to reach the zones. then hold using switch **1** to confirm the selection.

Vehicle fitted with trip computer *B*



(the display depends on the vehicle equipment and country).

Press the switch **2** to browse between zones and select functions by repeatedly pressing switch **3** or **4**, then if necessary use switch **5** "OK" to confirm.

The functions are distributed in zone 6, 7, 8 or 9.

Selections

(the display depends on the vehicle equipment and country)

- a) total distance recorder and trip distance recorder;
- b) trip settings:
 - fuel used;

TRIP COMPUTER

- average fuel consumption;
 - current fuel consumption;
 - estimated range with remaining fuel;
 - distance travelled;
 - average speed.
- c) reset the tyre pressures;
- d) set the time;
- e) distance before service;
- f) trip log, operating fault and information message.

Resetting the trip mileage

With one of the trip parameters selected as the display, press and hold the switch **1** "OK " or depending on the vehicle switch **5** until the display resets to zero.

Automatic resetting of the journey parameters

Resetting occurs automatically when the maximum value of any of the parameters is exceeded.

Interpreting some of the values displayed after resetting

The values showing average fuel consumption, range and average speed will become more stable and reliable the further you travel after pressing the reset button.

For the first few kilometres after pressing the reset key you will notice that the range increase as you travel. This range takes into account the average fuel consumption since the last time the reset button was pressed.

Refer to the table on the following pages showing display examples.

Therefore, the average fuel consumption may decrease when:

- the vehicle stops accelerating.
- the engine reaches its operating temperature (if the engine was cold when the reset key was pressed).
- when driving from an urban area onto the open road.

TRIP COMPUTER

Journey parameters

2

The display of information shown below **DEPENDS ON THE VEHICLE EQUIPMENT AND COUNTRY.**

Examples of selections	Interpreting the display selected
88km	a) Total distance recorder
88km	Trip distance recorder
 8.0 L	b) trip Settings Fuel used since last reset
 15.2 km/L	Average fuel consumption since last reset This value is displayed after driving 400 metres. This takes into account the distance travelled and the fuel used since the last time the reset button was pressed.
 15.2 km/L	Current fuel consumption

Examples of selections	Interpreting the display selected
 15.2 km/h	Average speed since last reset
 15.2 km	Distance travelled since last reset TRIP B



TRIP COMPUTER

 85.2 km	Estimated range with remaining fuel
Tyre pressure set <Press-hold>	c) Reset the tyre pressures. → 122.
16:30	d) Set the time. → 85.

2

Examples of selections		Interpreting the display selected
SERVICE INTERVALS		e) Distance before service With the ignition switched on, the engine not running and the display set to "SERVICE INTERVALS", press the button 1 or 2 for approximately 10 seconds to display the mileage before service (distance or time to the next service). When the distance value approaches its limit, there are several possible scenarios :
		– distance/time remaining is less than 1500 km or one month : the message "Service" is displayed accompanied by the nearest term (distance or time) ; – distance equals 0 km or date of service reached : the message "Service required" is displayed and depending on the variants accompanied by warning
		light  . The vehicle requires a service as soon as possible.
<p>Resetting : to reset the distance before service, press and hold button 1 for approximately 10 seconds until the display shows the service mileage without flashing.</p> <p>NB : if a service is performed without changing the engine oil, only the mileage before the next service should be reset. In the event of an oil change, both the distance before the next service and the next oil change should be reset.</p>		

TRIP COMPUTER

Information messages

2

These can help in the vehicle starting phase, or give information about a selection or a driving status. Examples of information messages are given in the following pages.

Examples of messages	Interpreting the display selected
"BOOT OPEN"	Indicates that the boot was open.
"LIGHTS ON"	Indicates that sidelights in operation while driver is leaving vehicle.
"ADJUST TYRE PRESSURE"	Indicates that low tyre pressure in your vehicle.



TRIP COMPUTER

Operating fault messages

They appear along with the  or  (depending on the vehicle) warning light and indicate that you must drive very carefully to an approved dealer as soon as possible. If you fail to follow this recommendation, you risk damaging your vehicle. They disappear when the display selection key is pressed or after several seconds and are stored in the computer log. The  or  (depending on the vehicle) warning light stays on. Examples of operating fault messages are given in the following pages.

Examples of messages	Interpreting the display selected
"CHECK VEHICLE"	Indicates a fault in the clutch.
"CHECK ENGINE"	Indicates a fault in one of the pedal sensors
"CHECK BRAKING SYSTEM"	Indicates a fault in the braking system.

TRIP COMPUTER

Warning messages

2

They appear along with the **STOP** or  (depending on the vehicle) warning light and indicate that, for your own safety, you must stop the vehicle as soon as traffic conditions allow. Stop your engine and do not restart it. Call an approved Dealer.

Some examples of warning messages are given below. Note: the messages appear on the display either individually or alternately (when there are several messages to be displayed), and may be accompanied by a warning light and/or a beep.

Examples of messages	Interpreting the display selected
"Risk of engine failure"	Indicates an injection fault, the vehicle's engine has overheated or there is a serious engine fault.
"ENGINE FAILURE HAZARD"	Indicates a fault in the Injection control.
"GEAR BOX RISK OF BREAKAGE"	Indicates an automatic gearbox fault.
"Puncture"	Indicates that at least one wheel is punctured or severely underinflated.
"Steering fault"	Indicates a problem with the steering.

TRIP COMPUTER

Displays and indicators

Instrument panel A



This is applicable depending on the variant.

It lights up when the ignition is switched on. In some cases, the appearance of a warning light is accompanied by a message.

Instrument panel B




This is applicable depending on the variant.

It lights up when the ignition is switched on. In some cases, the appearance of a warning light is accompanied by a message.

Rev counter 1 (rpm X1000)

76964

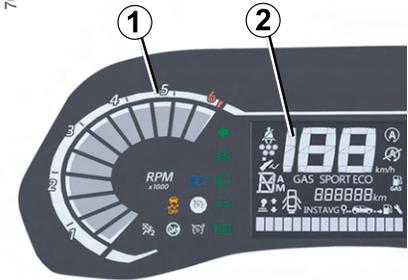

2

Trip Computer 2




Coolant temperature warning display 3

TRIP COMPUTER

Fuel level warning display 4 → 87

2

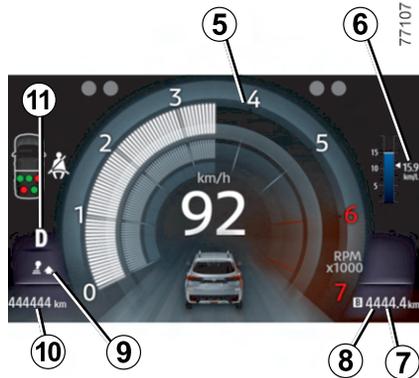

Rev counter (rpm X1000) 5

Instantaneous/Average fuel consumption 6

Trip distance recorder 7

Estimated range with remaining fuel 8


Gear change indicator 9

Total distance recorder 10

Gear shift display 11



Service due reminder display 12

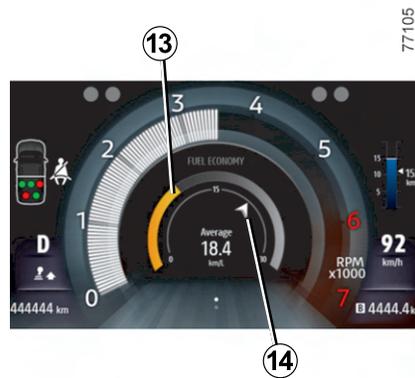

Instantaneous fuel economy 13

Average fuel economy 14



Display to change the settings 15

This display will allow you to customise the **brightness** of the display in both day and night mode.

TRIP COMPUTER



Fuel economy history display 17 Warning lights indicator 16 & 18

When driving, if multiple tell-tale lights triggered, the lights **16 & 18** will rotate for every 4 seconds.

Clock

Vehicles fitted with a multimedia screen



The time is displayed on the multimedia screen **1**.

Vehicles not fitted with a multimedia screen



To access the display **3** for setting the time, press button **2** and wait a few seconds; the hours and minutes will begin to flash. You are now in setting mode, press and hold button **2** and wait for few seconds, the minutes will flash: repeatedly press or press and hold button **2** to set the time.


When setting is complete, the hours and minutes remain displayed continuously for 2 seconds: your setting is registered.

You may change the display.

2

TRIP COMPUTER

2

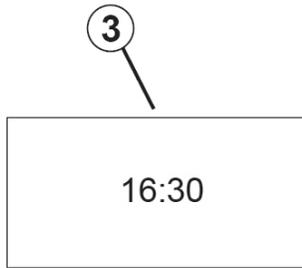

If the power supply is cut (battery disconnected, supply wire cut, etc.), the clock must be reset.

We recommend that you do not adjust these settings while driving.

WARNING LIGHTS

The presence and operation of the warning lights **DEPEND ON THE EQUIPMENT AND COUNTRY.**



Instrument Panel A



If no lights or sounds are apparent, this indicates a fault in the instrument panel. This indicates that it is essential to stop immediately (as soon as traffic conditions allow). Ensure that the vehicle is correctly immobilised and contact an approved Dealer.



Instrument Panel B



Orange warning light  comes on while you are driving, **drive carefully** to an authorised dealer as soon as possible. Failure to follow this recommendation risks damaging your vehicle.



The red warning light  requires you to stop immediately, for your own safety, as soon as traffic conditions allow. Switch off the engine and do not restart it. Contact an Authorised Dealer.



Warning light  means you should drive very carefully to an approved dealer as soon as possible. If you fail to follow this recommendation, you risk damaging your vehicle.



For your own safety, the **STOP** warning light requires you to stop immediately, as soon as traffic conditions allow. Switch off the engine and do not restart it. Call an approved Dealer.



Side light tell-tale light

WARNING LIGHTS

2

 **Main beam headlight tell-tale light.**

 **Dipped beam headlight tell-tale.**

 **Front fog light tell-tale**

 **Left-hand direction indicator tell-tale.**

 **Right-hand direction indicator tell-tale.**

 **Gear change indicator**

This lights up to advise you to change to a higher gear (up arrow) or lower gear (down arrow).

Over Speed Warning beep

Primary Warning

When vehicle speed exceeds around 80 km/h (50 MPH), a beep sounds for every 2 minutes until the driver reduces the speed less than 80 km/h (50 MPH)

Secondary Warning

When vehicle speed exceeds around 120 km/h (75 MPH), a beep sounds for every 2 seconds until the driver reduces the speed less than 120 km/h

(75 MPH), after which it will switch to the primary warning.

 **Handbrake “on” warning light and brake circuit incident warning light**

This comes on when the ignition is switched on and goes out when parking brake is dis-engaged. If it comes on during braking and is accompanied by a beep, it indicates that fluid level in circuit is low. It may be dangerous to continue driving. Contact approved dealer.

 **Variable power-assisted steering warning light**
Warning light (orange)

When engine gets off suddenly (e.g., in traffic conditions), it lits up till the engine gets started. There is no functional effect and is the normal functioning of the car.

Warning light (red)

It lights up when the ignition is switched on and goes off after a few seconds. If it lits while driving, it indicates that there is a fault in the system.

At this time, greater efforts are required to operate the steering wheel.

Contact your approved Dealer as soon as possible.

 **Variable power-assisted steering warning light**
Warning light (orange)

When engine gets off suddenly (e.g., in traffic conditions), it lits up till the engine gets started. There is no functional effect and is the normal functioning of the car.

Warning light (red)

It lights up when the ignition is switched on and goes off after a few seconds. If it lits while driving, it indicates that there is a fault in the system.

At this time, greater efforts are required to operate the steering wheel.

Contact your approved Dealer as soon as possible.

 **Anti-lock braking warning light**

This lights up when the ignition is switched on and goes out after a few seconds.

If it does not goes out after the ignition is switched on, or lights up when driving, there is a fault with the ABS. Braking will then be as normal, without the ABS system.

Contact an approved Dealer as soon as possible.

WARNING LIGHTS



Battery charge warning light

If it comes on when you are driving, it indicates that the circuit has discharged. Consult an approved Dealer as soon as possible.



Seat belt reminder warning light → 46



Air bag warning light

This comes on when the ignition is switched on and goes out after a few seconds.

If it does not go out when the ignition is switched on, or comes on when the engine is running, there is a fault in the system.

Contact your approved Dealer as soon as possible.



Door(s) open warning light → 32

Depending on the variants, if any of the door is opened, warning light will come ON indicating the exact door location in open condition accompanied by a warning message, "DOOR OPEN" in the instrument panel.



Warning light malfunction (red or orange)

Warning light (orange)

This lights up when the ignition is switched on and goes out after 3 seconds. It may come on in conjunction with other warning lights on the instrument panel. It means you should **drive very carefully** to an authorised dealer as soon as possible. If you fail to follow this recommendation, you risk damaging your vehicle.

Urgent stop warning light (red)

This lights up when the ignition is switched on and goes out as soon as the engine is started and is accompanied by a beep. It requires you to stop immediately, for your own safety, as soon as traffic conditions allow. Switch off the engine and do not restart it. Contact an approved Dealer.



Stop light

This lights up when the ignition or engine is switched on and goes out as soon as the engine is running. It comes on with other warning lights and/or messages on the instrument panel.

It requires you to stop immediately, for your own safety, as soon as traffic conditions allow. Switch off the engine and do not restart it.

Contact an approved Dealer.



Warning light

This lights up when the ignition or engine is switched on and goes out as soon as the engine is running. It can light up in conjunction with other warning lights and/or messages on the instrument panel.

It means you should **drive very carefully** to an approved dealer as soon as possible. If you fail to follow this recommendation, you risk damaging your vehicle.



Oil pressure warning light

This comes when ignition is ON and goes out after few seconds. If it comes on when you are driving accompanied and a beep, it is essential to stop and switch off the ignition. Contact an approved Dealer.



Warning light for monitoring exhaust gas → 117

It comes on when the ignition is switched on and then goes out.

- If it lights up continuously, consult an approved dealer as soon as possible.
- If it flashes, reduce the engine speed until the light stops flashing. Contact your approved Dealer as soon as possible.

WARNING LIGHTS

2



Warning light for the electronic stability program (ESC) and traction control system

There are several reasons for the warning light to come on : see “Electronic Stability Program ESC with under-steer control and traction control” in → 129



Indicator light ESC → 130



Low fuel level warning light

This warning light gets ON when ignition is ON and remains lit permanently (or) depending on the variant, the warning light goes off after few seconds.

Depending on the variants,if it blinks (or) gets ON when driving and accompanied by a beep, it indicates the fuel level is getting low. Fill up with fuel as soon as possible.

Depending on the variants, if the fuel last bar starts blinking, fill up with fuel as soon as possible.

Before starting the vehicle, always check the fuel level indicator in the instrument panel.



Cruise control indicator (if equipped)

The cruise control indicator indicates the activation of the cruise control system in → 135.



Coolant temperature warning display

This bar display comes ON when ignition is ON and remains lit permanently (or) depending on the variant, the warning light goes off after few seconds

Depending on the variants,if it blinks (or) gets ON when driving, this means the engine is overheating. Stop and allow the engine to run at idle speed for a minute or two. The temperature should drop. If not, stop the engine. Let it cool down. Contact an authorised dealer if necessary.



Oil pressure warning light

This comes when ignition is ON and goes out after few seconds. If it comes on when you are driving accompanied and a beep, it is essential to stop and switch off the ignition. Contact an approved Dealer



Tyre under-inflation warning light

This lights up when the ignition is switched on or when the engine starts,

then disappears after a few seconds → 122.

STEERING

Steering wheel, power-assisted steering

Steering wheel height adjustment



Raise the lever **1** and place the steering wheel in the required position ; lower the lever to lock the steering wheel.

Make sure that the steering wheel is correctly locked.

Power Assisted Steering

Never drive with an inadequately charged 12V battery.

Variable power assisted steering

The variable power-assisted steering system is equipped with an electronic control system which alters the level of assistance to suit the vehicle speed.

Steering is made easier during parking manoeuvres (for added comfort) while the force needed to steer increases progressively as the speed rises (for enhanced safety at high speeds).

 Never leave the steering wheel on full lock when the vehicle is stationary.

 With the engine switched off, or if there is a system fault, it is still possible to turn the steering wheel. The force required will be greater.

 For safety reasons, only adjust the steering wheel when the vehicle is stationary.



Never switch off the ignition when travelling downhill, and avoid doing so in normal driving (power steering and brake servo will not function).

2

REAR VIEW

Rear view mirrors

2

Exterior rear view mirror



(depending on the version)

Electric adjustment

With ignition ON, turn rotary knob **1** to position :

- position **A** to adjust the right-hand door mirror;
- position **C** to adjust the left-hand door mirror;
- **B** is the inactive position.

Folding door mirrors

(depending on the vehicle)

Turn knob **1** to position **D** to fold the door mirrors **2**. To reset them for driv-

ing, return to position **B**. If the door mirrors are folded manually, turn the knob **1** to position **D** and then to position **B** to reset.



For safety reasons, carry out any adjustments when the vehicle is not being driven.



Manual Adjustment

Adjust the door mirror according to rear vision by adjusting the knob **3**.

Foldable door mirrors

The door mirrors can be folded: simply fold them manually against the door window.



Objects observed in the door mirror glass are actually closer than they appear. For your safety, take this into account in order to correctly assess the distance before any manoeuvre.

Welcome and goodbye function

(depending on the vehicle)


The door mirrors fold IN automatically, when the vehicle is locked → 22. The door mirrors fold OUT automatically, when the vehicle is unlocked.



Welcome and goodbye function will work if the switch **D** is in un pressed condition.

REAR VIEW

Interior rear view mirror

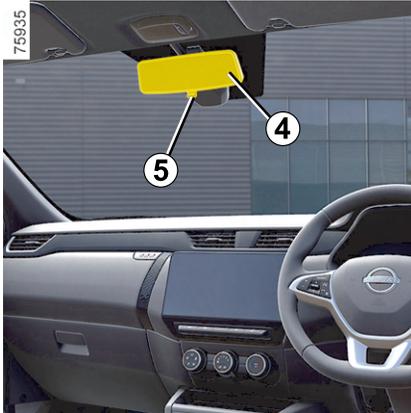


The interior rear-view mirror **4** is manually adjustable. When driving at night, tilt the mirror by lever **5** or by hand to avoid being dazzled by the headlights of the vehicle behind.

LIGHTING AND SIGNALS

Exterior lighting and signals

2

73864

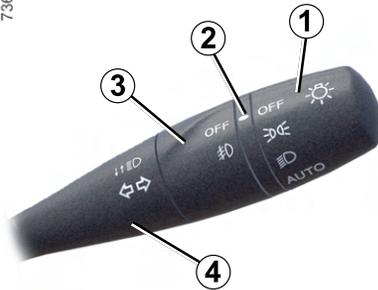

Side lights

 Turn the end of stalk **1** until the symbol is opposite mark **2**.

Daytime running lights function

(front lights only)

If fitted on the vehicle, the daytime running lights come on automatically with no action on stalk **2**, when the engine is started and they go off once the engine is switched off. When the position function is ON, the daytime running lights are switched off.

Dipped beam headlight

 Depending on the vehicle, turn the end of stalk **1** down until the symbol is opposite mark **2**.

Main beam headlights

 With the engine running and the dipped beam headlights on, push the stalk **4**. This indicator light on the instrument panel comes on.

To return to the dipped beam headlights position, pull the stalk **4** towards you again.

Headlight flasher: Pull stalk **4** towards you to flash the headlights.

Automatic operation

(depending on the vehicle)

Turn the ring **1** until the AUTO symbol is opposite the mark **2**: with the engine on, the dipped beam headlights switch on or off automatically according to the exterior light level, without any action on the stalk **4**.

-  Always make sure that:
- the windscreen is not obscured (dirt, mud, snow, condensation, etc.);
 - the rain light sensor is not obscured (by dirt, objects, etc.).

Operating faults

When the "Check Automatic Lighting" message appears on the instrument panel, the system is deactivated. Consult an approved dealer.

Switching off the dipped beam headlights

There are two possibilities:


– manually, move the **1** ring to position

 or, depending on the vehicle, to position OFF;

– the lights will go out automatically when the engine is switched off, the driver's door is opened or the vehicle is locked. In this case, when you start the engine the lights will be switched back on according to the position of the ring **1**, taking into account the exterior light level, without moving the stalk **4**.

LIGHTING AND SIGNALS

73664

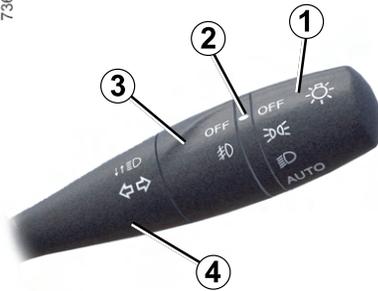

"Follow-me-home lighting" function

This function enables you to briefly switch on the side lights and dipped beam headlights (e.g. to provide light when opening a gate).

With the engine and lights switched off and the ring **1** in the AUTO position or, depending on the vehicle, in the OFF position, pull the stalk **4** towards you: the side lights and dipped beam headlights illuminate for approximately

30 seconds along with the  and  warning lights on the instrument panel.

To increase this duration, you may pull the stalk up to four times (total time restricted to approximately two minutes). You can then lock your vehicle.

To switch off the lights before it is done automatically, rotate the ring **2** to any position, then return it to the AUTO position or, depending on the vehicle, to the OFF position.

Front fog lights

(depending on the vehicle)

Turn centre ring **3** on the stalk **4** until the symbol faces mark **2**, then release it.

Depending on the vehicle, the stalk returns to the initial position or stays in position.

Operation of the fog lights depends on the exterior lighting selected, and an indicator light will light up on the instrument panel.

 When driving in fog or snow, or when transporting objects which are higher than the roof, the headlights do not come on automatically. The fog lights are controlled by the driver: indicator lights on the instrument panel inform you whether they are on (indicator light on) or off (indicator light off).

2

Turning off the fog lights

There are two possibilities:

- manually, depending on the vehicle, turn centre ring **3** again until mark **2** is aligned with the symbol for the fog light that you wish to switch off. The corresponding indicator light will go out on the instrument panel;
- the lights will go out automatically when the engine is switched off or the vehicle is locked, and the fog lights when the driver's door is opened.

The front fog lights switch off when the exterior lights are switched off.

Lights-on reminder audible alarm

A warning beep sounds when the driver's door is opened to warn you that the lights are still on.

LIGHTING AND SIGNALS

2



Before driving at night, check that the electrical equipment is operating correctly and adjust the headlight beams (if your vehicle is not carrying its normal load). As a general precaution, check that the lights are not obscured (by dirt, mud, snow or objects being transported).

the beams and clockwise to raise them.

Headlight beam adjustment



Control **A** is used to adjust height of the headlight beam according to load. Turn control **A** anticlockwise to lower

LIGHTING AND SIGNALS

Table of adjustment position examples


	Examples of positions for adjusting the control A according to the load
Driver alone or with front passenger	Zero
Driver with one front passenger and three rear passengers	o
Driver only and with luggage (or load) reaching the maximum authorised load weight	o
Driver with one passenger in the front, three passengers in the back, and baggage (or load) reaching the maximum permissible all-up weight	oo
The table below gives some examples. In all cases, adjust the control A according to the vehicle load so that the road can be seen and other drivers are not dazzled.	

2

LIGHTING AND SIGNALS

Temporary adjustment

2

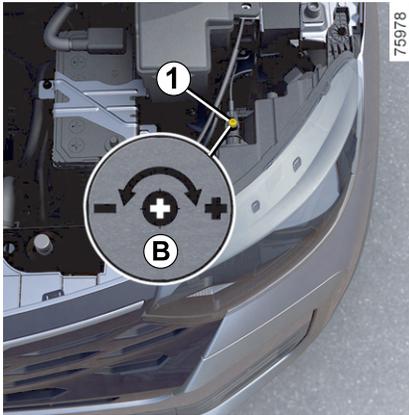

Open the bonnet and identify the marking **B** next to one of the front headlight projectors.

For each headlight, use a screwdriver to turn the screw **1** a quarter of a turn towards the "-" symbol to lower the beams.

Return to the original position once your trip is over: turn the screw **1** a quarter of a turn towards the "+" symbol to raise the beams.


AUDIBLE AND VISUAL SIGNALS

Horn



Press on the centre or sides of the highlighted (horn pad) **1** to use the horn.

Hazard warning lights

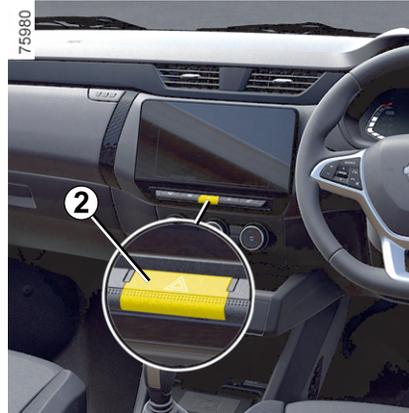

 Press switch **2**.

This switch activates all four direction indicators and the side indicator lights simultaneously.

It must only be used in an emergency to warn drivers of other vehicles that you have had to stop in an area where stopping is prohibited or unexpected, or that you are obliged to drive under special conditions.

Direction indicators



Move stalk **3** parallel to the steering wheel and in the direction you are going to turn it.

When driving on motorway, the steering is not usually turned sufficiently to enable the stalk to return automatically to home position. There is intermediate position where the stalk will not be held for lane change indication and there will be 3 blinks of indicator lights in dedicated direction.

If it does not return back automatically, release the stalk manually and it will return to its home position.

2

WIPER

Windscreen washing, wiping

2



Front windscreen wiper



With the ignition on, move the stalk **1** around the steering wheel (depending on the version):

A. Single sweep.

A short push will trigger one sweep of the wipers.

B. Off.

C. Intermittent wiping.

The wipers will pause for several seconds between sweeps.

D. Continuous normal wipe.

E. Continuous fast wipe.

Windscreen washer



With the ignition on, pull the stalk **1** towards you.

A brief pull will trigger a single sweep of the wipers, in addition to the windscreen washer.

A longer pull will trigger three sweeps of the wipers, in addition to the windscreen washer.



When working in the engine compartment, ensure that the windscreen wiper stalk **1** is in the **B** position (park). **Risk of injury.**



Before any action on the windscreen (washing the vehicle, de-icing, cleaning the windscreen, etc.), return stalk **1** to position **B** (park). **Risk of injury and/or damage.**



Efficiency of a wiper blade

Check the condition of the wiper blades. How long they last depends on you:

- it must remain clean: clean the blade and the screen regularly with soapy water;
- do not use it when the screen is dry;
- free it from the screen when it has not been used for a long time.

In all cases, replace it as soon as it begins to lose efficiency : approximately once a year.

Precaution for using the wipers

- In freezing or snowy weather conditions, clear the screen before starting the wipers (risk of wiper motor overheating);
- ensure that no objects are obstructing the travel of the blade.

WIPER

Vehicle fitted with front windscreen wiper rain sensor




The rain sensor is located on the windscreen, in front of the interior rear view mirror.

A. a single sweep of the wipers

A short push will trigger one sweep of the wipers.

B. stopping

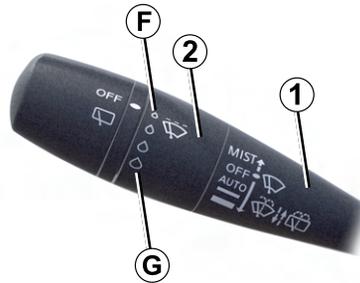

C. automatic wiper function (depending on the vehicle)

2. When this position is selected, the system detects water on the windscreen and triggers the wipers at a suitable wiping speed. It is possible to change the triggering threshold and the time duration between sweeps by rotating the ring:

- **F:** minimum sensitivity;
- **G:** maximum sensitivity.

The higher the sensitivity, the quicker the wipers will react and the faster the wipe.

When activating automatic wiping or when increasing sensitivity, one sweep of the blades is performed.

Note:

- the rain sensor is only intended as a driving aid. In the event of reduced visibility, the driver should manually activate the wipers. In foggy weather or during snowfalls, wiping is not automatically triggered and remains under the driver's control;
- in the event of temperatures below zero, automatic wiping is not activated when the vehicle is started. It is automatically activated as soon as the vehicle exceeds a certain speed (approximately 8 km/h (5 mph));
- do not activate automatic wiping in dry weather;
- fully de-ice the windscreen before activating automatic wiping;
- when washing the vehicle under a roller type car wash, set the stalk **1** to position **B** to deactivate automatic wiping.

Operating faults

In the event of a malfunction of the automatic wiping, the wiper is set to intermittent wiping. Call an approved dealer.

The rain sensor operation may be interrupted in the event of:

- damaged windscreen wipers: a film of water or traces left by a blade in the sensor's detection zone may increase the response time of the automatic

WIPER

wiper, or increase the wiping frequency;

– a windscreen with any chip or crack near the sensor, or a windscreen covered in dust, dirt, insects, ice, the use of washing wax and water repellent chemicals. The windscreen wiper will be less sensitive or may even not react at all.



D. slow continuous wiping

E. fast continuous wiping

Special feature

When driving the vehicle, the wiping speed slows down whenever the vehicle stops. For example, fast wiping speed will slow to normal wiping speed. As soon as the vehicle moves


off, wiping will return to the speed originally selected.

Any action on the stalk **1** overrides and cancels the automatic function.

Precautions

– In the event of ice, check whether the blades are stuck to the windscreen before operating the wiping mechanism. If you activate the wipers while the blades are stuck down with ice, you may risk damaging both the blade and the wiper motor.

– Do not activate the wipers on a dry screen. This will lead to premature wear or damage to the blades.

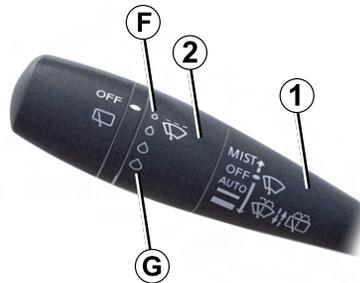

Rear windscreen wash, wiper

Rear windscreen wiper

 With the ignition on, rotate the end of the stalk **1** until the symbol is aligned with the mark **2**.

Rear screen washer, wiper

 With the ignition on, push and hold the stalk **1** then release it.

A longer action will trigger three sweeps of the wipers followed, a few seconds later, by a fourth, in addition to the windscreen washer.



Do not use the wiper arm to open or close the tailgate.



Before taking any action involving the rear screen (washing the vehicle, de-icing, cleaning, etc.) return the stalk **1** to the off position.

Risk of injury and/or damage.

WIPER



Efficiency of a wiper blade

Check the condition of the wiper blades. How long they last depends on you:

- it must remain clean: clean the blade and the screen regularly with soapy water;
- do not use it when the screen is dry;
- free it from the screen when it has not been used for a long time.

In all cases, replace it as soon as it begins to lose efficiency : approximately once a year.

Precaution for using the wipers

- In freezing or snowy weather conditions, clear the screen before starting the wipers (risk of wiper motor overheating);
- ensure that no objects are obstructing the travel of the blade.

FUEL TANK

2




Opening the Fuel Flap

- Stop the Engine.
- Pull up the fuel filler flap release lever **1** located on the floor, right front side of driver's seat which unlocks the fuel filler flap **A**.
- Turn the fuel filler cap **2** counter clockwise slowly and completely unscrew the cap.
- Remove the cap.



Do not wash the filler area with a high-pressure washer.

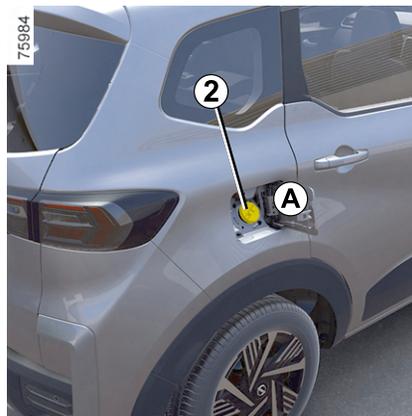

- After refuelling, replace cap. Turn it clockwise and screw completely.
- Push the fuel filler flap **A** closed until it latches.

For details on filling the tank, refer to the information on "Filling with fuel".

NOTE: In cold weather, if the fuel flap does not open, tap the door lightly. Then try to open it again.



Fuel filler cap: this is a specific type. If you

have to replace it, make sure the new cap is of

the same type as the original.

Contact an approved Dealer. Never place the cap near a source of heat or flame.

Do not add any additives to the fuel, you risk damaging the engine.

Do not wash the filler area with a high-pressure washer.

Fuel grade

Use a high-grade fuel that complies with the legislation in force in each country and which must comply with the specifications given on the label on fuel flap **A** → 230.

Petrol version

It is essential to use unleaded petrol. The octane rating (RON) must comply with the information provided under → 230.

FUEL TANK



Fuels that comply with the Indian standards with which vehicle engines marketed in India are compatible → 230.



To fill up with fuel, the engine must be stopped (and not only in standby for the vehicle fitted with the Stop and Start function): you must switch off the ignition → 107.
Fire hazard.



Do not use ethanol-based fuel if your vehicle is not compatible with this fuel.
Do **not** add reagent to the fuel otherwise you risk damaging the engine. If you wish to add an additive to the fuel, use a product approved by our Technical Department.
Consult an approved Dealer.



No modifications whatsoever are permitted on any part of the fuel supply system (electronic unit, wiring, fuel circuit, injector, protective covers, etc.) as this may be dangerous (unless undertaken by qualified Network personnel).

Filling up with fuel

With the ignition off, insert the nozzle **fully** before turning it on to fill the fuel tank (risk of splashing).

Keep the nozzle in this position throughout the entire filling operation. When the pump cuts out automatically at the end of the filling procedure, a maximum of two further filling attempts may be made, as there must be sufficient space in the fuel tank to allow for expansion.

Make sure that no water enters the fuel tank during filling.

After filling, refit the cap **2** and close the fuel flap **A** to avoid any water or foreign bodies from entering the system.

Always make sure that the cap **2**, the flap **A** and its perimeter remain clean and free of dust, mud, dirt, etc.

Petrol version

It is **essential** to use unleaded petrol. Using leaded petrol will damage the antipollution system and may lead to a loss of warranty.

Capacity of the fuel tank: 40 litres approximately.



Persistent smell of fuel

If you notice a persistent fuel odour you should:

- stop the vehicle as soon as traffic conditions allow it and switch off the ignition;
- switch on the hazard warning lights and ask your passengers to leave the vehicle and stay clear of the traffic.
- contact an authorised dealer.

2

RUNNING IN

Petrol version

For the first **1,000 km**, do not exceed 80 km/h in the highest gear.

You may only expect top performance from your vehicle after approximately **3,000 km**.

3

Oil change frequency: Please refer to your vehicle's maintenance schedule.

NOTE: During the running in period, do not accelerate hard while the engine is still cold and do not let the engine to run in higher rpm.

Service intervals: refer to your vehicle's maintenance document.

STARTING, STOPPING THE ENGINE

Ignition-starter switch on a vehicle with key

Stop and steering lock position St



To lock : remove the key and turn the steering wheel until the steering column locks.

To unlock : turn the key and the steering wheel slightly.

Accessories position A

When the ignition is switched off, any accessories (radio, etc.) will continue to function.

Ignition on position M

The ignition is switched on :
– the engine may be started.

Start position D

If the engine fails to start at the first attempt, turn the key back to home position before activating the starter again.

Release the key as soon as the engine starts.

i NOTE :

- Do not attempt to start/ crank the engine in running/ geared condition ;
- Do not attempt to crank the engine more than 5 times repeatedly, if the vehicle doesn't start. Wait for sometime and crank the engine. If the vehicle didn't start, contact the nearby authorised dealer ;

Starting the engine

In cold condition: switch on the ignition for several seconds **before** starting the engine, so that it is easier to start the engine.

Petrol injection

- Activate the starter **without pressing the accelerator**.
- Release the key as soon as the engine starts.

i Once switching on the ignition, wait for three seconds then crank the engine.

3

Vehicles with an automated manual transmission → 111.

Stopping the engine

With the engine idling, turn the key back to "Stop" position **St**.

Special note

Depending on the vehicle, accessories (e.g. radio) stop working either when the engine is switched off or when the doors are locked.

STARTING, STOPPING THE ENGINE



Driver's responsibility when parking or stopping the vehicle

Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time. They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or locking the doors, for example. Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY

Starting problems

To avoid damage, **do not keep trying to start the engine (by pushing or towing the vehicle) without having identified and corrected the cause of the fault.**

If the fault cannot be identified, do not continue to try and start the engine, but contact an approved dealer.

The following operating conditions should be avoided :

- driving for long periods when the low fuel level warning light is lit.
- using leaded petrol.
- using fuel or lubrication additives which are not approved.

Operating faults such as :

- faulty ignition, running out of fuel or disconnected spark plugs resulting in the engine misfiring or cutting out when driving.
- loss of power.

may cause overheating, reducing efficiency **which may irreparably damage vehicle components and also the vehicle.**

If you notice any of the above operating faults, have the necessary repairs carried out as soon as possible by an approved dealer.

These faults may be avoided by regularly taking your vehicle to an approved Dealer at the intervals specified in the Maintenance Schedule.



Do not park the vehicle or run the engine in locations where combustible substances or materials such as grass or leaves can come into contact with the hot exhaust system.

Starting, stopping the engine - vehicle with card



75912

The card must be in detection zone **1**.

To start :

- vehicles with an automatic gearbox, place the lever in position **N**, press brake pedal and press button **2**;
- vehicles with a manual gearbox, depress the brake or clutch pedal and press the button **2**. If a gear is engaged, the vehicle may only be started by depressing the clutch pedal.

STARTING, STOPPING THE ENGINE



Special features

- If one of starting conditions is not applied, the message “BRAKE + START” or “CLUTCH + START” or “Select **NEUTRAL**” is displayed on the instrument panel;
- in some cases, it will be necessary to move the steering wheel whilst pressing the start button **2** to help unlock the steering column ; the message “TURN+ START” will warn you of this;

Starting with tail gate open in hands-free mode.

In this case, hands free card must not be located in the luggage compartment.

Accessories function

(switching on the ignition)

Once you have gained access to your vehicle, you may use some of its functions (radio, navigation, wipers, etc.).

To use the other functions, with the card in the passenger compartment, press the **2** button without pressing the pedals.



Operating faults

In certain cases, the hands-free card may not work :

- when the card battery is drained, flat battery, etc.,
- near to appliances operating on the same frequency as the card (monitor, mobile phone, video game, etc.) ;

– vehicle located in a high electromagnetic radiation zone.

The message, “**KEY NOT DETECTED**” appears on the instrument panel.

Press the brake or clutch pedal, then place the hands free card in contact with position **3** around 2 seconds. Press **2** to start the vehicle, the message goes out.

3



Driver's responsibility when parking or stopping the vehicle

Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time.

They may pose a risk to themselves or to others by starting the engine, activating equipment such as the electric windows or locking the doors, for example.

Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY

STARTING, STOPPING THE ENGINE

3



Conditions for stopping the engine

The vehicle must be stationary, with the lever positioned in **N** for vehicles with an automatic gearbox.

With the card in the vehicle, press button **2** : the engine stops. The steering column is locked when the driver's door is opened or the vehicle is locked.

If the card is no longer in the passenger compartment when you try to switch the engine off, the message "PRESS HOLD START" appears on the instrument panel : press button **2** for longer than two seconds. If the card is no longer in the passenger compartment, make sure you can retrieve it before pressing and holding the but-

ton. Without the card, you will not be able to restart the vehicle.

With the engine switched off, any accessories being used (radio, etc.) will continue to function for approximately 10 minutes.

When the driver's door is opened, the accessories stop working.



When you leave your vehicle, especially if you have your card with you, check that the engine is completely switched off.



Do not park the vehicle or run the engine in locations where combustible substances or materials such as grass or leaves can come into contact with a hot exhaust system.



Never switch off the ignition before the vehicle has stopped completely. Once the engine has stopped, the brake servo, power-assisted steering, etc., and the passive safety devices such as the airbags and pretensioners will no longer operate.

GEAR CONTROL

Gear lever

Selecting reverse gear



(vehicle in stationary condition)

Vehicles with manual gearbox: refer to the grid on the gear lever knob **1**.


Depending on variants, pull the release knob **A** in upward direction and then engage the reverse gear. Shifting the reverse gear should not be done quickly. Wait for three seconds approximately and shift the reverse gear.

Vehicles with an automated manual transmission → 111.

The reversing lights will come on as soon as reverse gear is selected with the ignition on.

Automated manual transmission

Gear Shifter 1

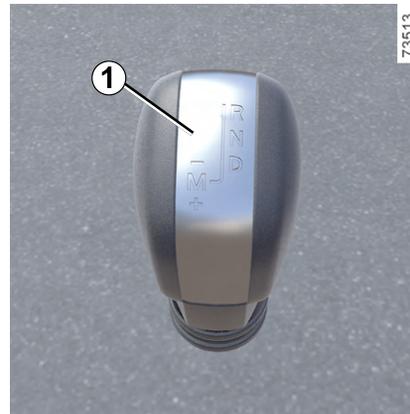


This allows you to engage forward gear, reverse and neutral.



For safety reasons, do not switch off the ignition before the vehicle has come to a complete standstill.

Gear shift pattern

73575

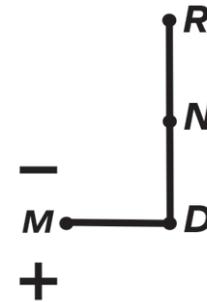

(see the marking on the lever)

+ : Manually moving up a gear

- : Manually moving down a gear

M : manual mode

D : automatic mode


N : neutral

R : reverse

GEAR CONTROL

Instrument panel Display

73663

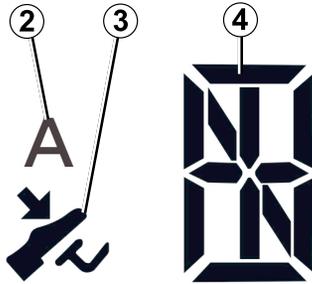

2 : automatic mode.

3 : brake pedal press indicator light.

4 : current gear display.

The current gear (1, 2..., 5, or D, N, R) is indicated on the display **4** on the instrument panel. In automatic mode, A and the engaged gear are displayed.

Operation

Switch on the ignition.

The display on the instrument panel switches on.

If neutral (**N**) is displayed, start the engine but do not press the accelerator.

If any gear other than neutral is engaged, **N** flashes on the display ; press the brake pedal and place the lever in position **N**. Start the engine.

NB: Do not attempt to start the engine by pushing the vehicle if the battery is flat (the display remains OFF when the ignition is switched ON).

Under certain conditions, the engine starter may take some time. Keep the key in the starting position.




Exactly like a vehicle equipped with a manual gearbox, a vehicle equipped with a sequential gearbox is unable to prevent the vehicle from rolling on a slope if the handbrake is not applied or the brake pedal constantly not pressed. The vehicle can be in stationary place on an incline for two seconds (Giving Driver enough time to take his foot off the brake & press the accelerator)



Once the vehicle is switched to ignition ON position, the gearbox initializes. This produces a light sound. This is normal. Crank the engine after three seconds.

Starting

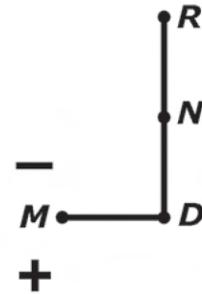

Moving forwards (starting in neutral)

The gear display shows Neutral

With the brake pedal pressed, position the selector lever to **D**. The letter **A** (**Automatic**) appears on the cluster.

Release the brake pedal :

3

36131

GEAR CONTROL

- The engine's idle speed is sufficient for parking manoeuvres.
- Accelerate gently to move forwards.

 Start the engine, wait for three seconds before selecting D/R gears. Avoid shifting reverse gear immediately after starting the engine.

Reverse gear (from neutral, with the vehicle stationary)

With the brake pedal pressed, position the selector lever to **R**. The letter **R** appears on the display.

Release the brake pedal:

- The engine's idle speed is sufficient for parking manoeuvres.
- Accelerate gently to reverse.

There is a beep when reverse gear is engaged.

You may shift from reverse gear to a forwards gear by pushing the lever to **D** once the vehicle is stationary.

Note : When the vehicle is stationary, you must depress the brake pedal to engage a gear. Otherwise, warning

light  will come on.

 Avoid selecting D/R mode after switching off the engine.

If reverse gear not engaged properly, once the gear shifted from "**N**" to "**R**" position. Then the system will retry to shifting automatically. This will take some time, noise may be heard from gears. This however does not indicate any malfunction.

If still reverse gear not working, and warning buzzer sound along with "CHECK AUTO GEARBOX" and depending on the vehicle "CHECK GEARBOX" message appears on the cluster, then follow below steps:

With the vehicle stationary,

Pressing the brake pedal, shift the gear shifter lever:

- shift towards "**N**" position; and

- again, shift towards "**R**" position.

Now, the reverse gear engaged. once brake pedal released then the vehicle will move in reverse direction.

If any warning light/ message appears in the instrument panel, please contact an approved dealer.

Creeping

It is a function that enables the vehicle to move slowly without pressing accelerator pedal. Follow the steps:

- Start the engine as instructed in "Starting the engine" section.
- With brake pedal pressed, shift the lever to D position.
- Release the parking brake and brake pedal to activate creeping.

Driving in manual mode

This mode can be activated at any time when driving by pushing the lever to position M.

To shift up a gear, simply push the selector lever backwards without necessarily releasing the accelerator.

To shift down a gear, simply push the selector lever forwards without necessarily releasing the accelerator.

The system will not tolerate a series of up or down changes that cause the engine to underrev or overrev.

By pushing the lever backwards twice, you can move up two gears at a time (except if under-revving). By pushing the lever forwards twice, you can move down two gears at a time (except if over-revving).

When decelerating with the foot off the pedal, the gears will automatically drop

GEAR CONTROL

to the low engine speed limit to avoid stalling. The vehicle may be kept stationary (stop, red light etc.) by depressing the brake pedal without shifting into neutral N.

3

The vehicle will move off again :

- either slowly, if you release the brake without accelerating (e.g. when in a traffic jam),
- or quickly, if you release the brake and accelerate.

Note : Neutral N may only be selected when the vehicle is being driven or is stationary or without touching the brake pedal.

If the engine speed is too high or too low, the system will choose the optimum gear.

Manual mode can be deactivated and reactivated at any time with the engine running by moving the lever to position D and respectively to M.

Driving in automatic mode

Each time the ignition is switched on, starting in neutral, shift the lever to D with brake pedal pressed condition to be able to shift directly to automatic mode.

The letter A appears on the display. The vehicle is controlled using the accelerator and the brake. Gears will change automatically at the correct

moment and at a suitable engine speed because automatic mode takes into consideration the road surface and the chosen driving style.

Note :

Automatic mode takes account of :

- the position and speed of pressing the accelerator pedal to assess driving style and select the optimum gear,
- the position and speed of pressing the brake pedal to start engine braking in preparation for a downshift.

If the engine is being overrevved or underevved, the system will select the optimal gear.

When stopped at traffic lights, with the gear engaged, you can keep the vehicle stationary by pressing the brake pedal without changing to neutral N.

The vehicle will move off again :

- either slowly, if you release the brake (Creeping) without accelerating (e.g. when in a traffic jam),
- or quickly, if you release the brake and accelerate.

Economical driving

When driving, always leave the lever in position D, keeping the accelerator pedal lightly pressed to ensure automatic gear changes at a lower engine speed.

It is recommended to shift to Manual mode from Auto mode with most adopted gear, to have quick acceleration during overtaking.

Accelerating and overtaking

- slowly press the accelerator pedal to accelerate gradually,
- **to obtain maximum vehicle performance regardless of the mode selected (automatic or manual), quickly press the accelerator pedal beyond the kickdown point.**

The speed with which you press the pedal will allow you to upshift according to the vehicle's capabilities.

Depending on the variant, if the warning message, " GEARBOX OVERHEAT" appears on the cluster when driving, it means the clutch gets overheated and creeping gets deactivated.

To avoid getting the message,

- use parking brake to move the vehicle in slope ;
- do not press the brake pedal/accelerator pedal simultaneously for long time ;
- do not keep vehicle in standstill in slope using accelerator pedal ;

If you are not doing any of above mentioned manoeuvres but the warning message, "GEARBOX OVERHEAT" appears, then contact your dealer

PARKING BRAKE

Handbrake



To release

Pull lever **3** up slightly, press button **2** and then lower the lever to the floor.

The red warning light on the instrument panel will come on and a sound if you are driving with an incorrectly released handbrake at speeds over 8 km/h (5 mph).

To apply

Pull lever **3** upwards and make sure the vehicle is immobilised.



An impact to the underside of the vehicle while manoeuvring (e.g. : striking a post, raised kerb or other street furniture) may result in damage to the vehicle (e.g. : deformation of an axle). To avoid any risk of accident, have your vehicle checked by an approved dealer.



Make sure that the handbrake is properly released when driving (red indicator light off), otherwise overheating, or even damage, may occur.



Depending on the gradient and/or vehicle load, it may be necessary when stationary to apply the handbrake by at least a further two notches and engage a gear (1st gear or reverse gear).

SPECIAL FEATURES OF PETROL VERSIONS

The following operating conditions :

- driving for long periods when the low fuel level warning light is lit ;
- using leaded petrol ;
- using fuel or lubrication additives which are not approved.

3

Or operating faults such as :

- faulty ignition system, running out of fuel or disconnected spark plugs resulting in the engine misfiring or cutting out when driving ;
- loss of power.

as they may cause the catalytic converter to overheat and thus reduce its efficiency, **or damage it irreparably and cause heat damage to the vehicle.**

If you notice any of the above operating

faults, have the necessary repairs carried out as soon as possible by an approved Dealer.

These faults may be avoided by regularly taking your vehicle to an approved

Dealer at the intervals specified in the Maintenance document.

Starting problems

To avoid damaging the catalytic converter, **do not keep** trying to start the

engine (using the start button, or by pushing or towing the vehicle) **without having identified and corrected the starting fault.**

If the fault cannot be identified, do not keep trying to start the engine, but contact an approved dealer.



Do not park the vehicle or run the engine in locations

where combustible substances or materials such as grass or leaves can come into contact with the hot exhaust system.

MAINTENANCE AND ANTIPOLLUTION ADVICE

Your vehicle complies with criteria for recycling and recovering vehicles at the end of their service life, which entered into force in 2015.

Some of the parts on your vehicle have been designed to be recycled later. These parts are easily removable in order to be collected and reprocessed in recycling networks.

Furthermore, by virtue of its design, moderate fuel consumption and initial settings, your vehicle also conforms to current anti-pollution regulations. The manufacturer is actively striving to reduce pollutant exhaust gas emissions and to save energy. However, the fuel consumption of your vehicle and the level of pollutant exhaust gas emissions are also your responsibility. Ensure that it is maintained and used correctly.

Maintenance

It is important to remember that failure to respect anti-pollution regulations could lead to legal action being taken against the vehicle owner.

In addition, replacing engine, fuel supply system and exhaust components with parts other than those originally recommended by the manufacturer may alter your vehicle so that it no

longer complies with anti-pollution regulations.

Have your vehicle adjusted and checked by an authorised dealer, in accordance with the instructions given in your maintenance schedule : they will have all the equipment necessary for ensuring that your vehicle is maintained to its original standard.

Engine adjustments

- **Spark plugs** : for optimum conditions of use, output and performance the specifications laid down by our design department must be strictly applied. If the spark plugs have to be changed, use the make, type and gap specified for your vehicle's engine. Contact an authorised dealer for this.
- **Air filter, fuel filter** : a choked element will reduce efficiency. It must be replaced.
- **Ignition and idle speed** : no adjustment is needed.

Exhaust gas monitoring system

The exhaust gas monitoring system will detect any operating faults in the vehicle's antipollution system.

If this system malfunctions, toxic substances may be released into the atmosphere or damage may occur.



This warning light on the instrument panel will indicate if there are any faults in the system :

This lights up when the ignition is switched on and goes out when the engine is started.

- If it lights up continuously, consult an approved dealer as soon as possible ;
- if it flashes, reduce the engine speed until the light stops flashing. Contact an authorised dealer as soon as possible.

DRIVING ADVICE AND ECO DRIVING

Fuel consumption is accredited in accordance with a standard regulatory method. Identical for all manufacturers, this enables vehicles to be compared with one another.

3

Consumption in real time depends on vehicle usage conditions, the equipment fitted and the user's driving style. To optimise fuel consumption, please refer to the following advice.

Depending on the vehicle, you have different functions to help you reduce your fuel consumption:


- the rev counter;
- the gear change indicator;

On the multimedia screen (for more information, see the multimedia system user manual):

- scores based on your driving style;
- advice for ECO driving;
- the journey record and eco-driving advice via the multimedia screen;

Gear change indicator 1

76966

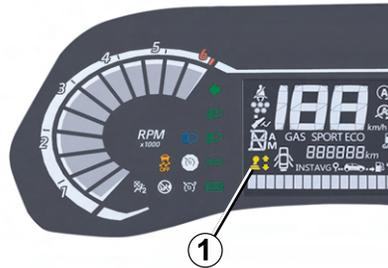

77107

Depending on the vehicle, to obtain optimum consumption levels, a warning light on the instrument panel lets you know the best time to move up or down a gear:



shift up a gear;



downshift a gear.

If you regularly follow this indicator, you will reduce your vehicle's fuel consumption.

On the multimedia screen



75931

Journey record

Once the engine is switched off,

DRIVING ADVICE AND ECO DRIVING

From the multimedia screen 2 enabling you to view information on your last journey.

This indicates:

- Trip Report;
- ECO Scoring;
- ECO Coaching.

An overall rating from 0 to 100 is displayed to let you assess your ECO driving performance.

The higher the rating, the lower the fuel consumption.

ECO advice is given to help improve your performance.

With your favourite journeys saved, you can compare your performance between trips and the performance of other vehicle users.

Please refer to the multimedia instructions for further information.

Driving advice, Eco-driving



Behaviour

- Drive carefully until the engine reaches its normal operating temperature, rather than let it warm up while the vehicle is stationary;
- High speeds significantly affect the vehicle's fuel consumption;

Examples (at a steady speed):

- reducing the speed from 130 km/h (80 mph) to 110 km/h (68 mph) approximately saves up to 20% of fuel approximately;
- reducing the speed from 90 km/h (56 mph) to 80 km/h (50 mph) approximately saves up to 10% of fuel approximately.

- Dynamic driving involving heavy and frequent acceleration and braking is expensive on fuel in comparison to the time saved;
- Do not over rev the engine in the intermediate gears. You should always use the highest gear possible;
- Avoid sudden acceleration;
- Brake as little as possible. If you anticipate an obstacle or bend in advance, you may then simply release the accelerator pedal;
- Do not try to maintain the same speed up a hill, accelerate no more than you would on level ground. Keep your foot in the same position on the accelerator pedal;
- Double declutching and accelerating before switching off the engine are unnecessary in modern vehicles;
- On versions with an sequential gearbox, it is preferable to keep the gear lever in position **D**;
- Bad weather, flooded roads:



Do not drive through water if it is higher than the lower edge of the wheel rim.

DRIVING ADVICE AND ECO DRIVING

3




Driver obstruction

On the driver's side, only use mats suitable for the vehicle, attached with the pre-fitted components, and check the fitting regularly. Do not lay one mat on top of another. **There is a risk of wedging the pedals.**


Heating levels

It is normal to notice an increase in the vehicle's fuel consumption when using the heating (particularly when the outside temperature drops below zero) or air conditioning.

Tyres

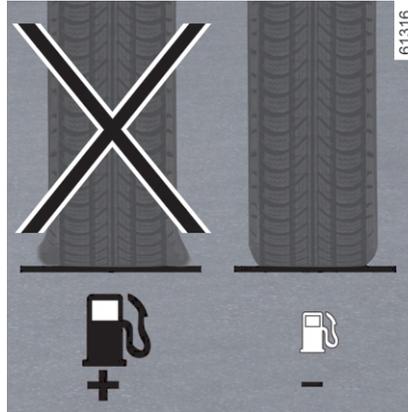

- An underinflated tyre increases fuel consumption;
- To optimise fuel consumption, set the highest speed tyre pressure or the recommended pressure indicated on the edge of the driver's door → **200**;
- The use of non-recommended tyres can increase fuel consumption.

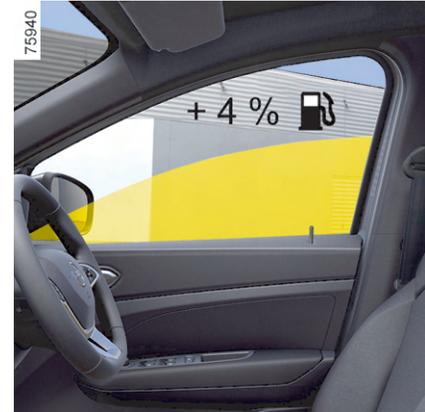

Advice on use

- Electricity is fuel – switch off all the electrical components which are not really needed. **However** (safety first), keep your lights on when the visibility is bad (“see and be seen”);
- Use the air vents. Driving with the windows open at 100 km/h (62 mph) will increase fuel consumption by 4% approximately;
- Never fill the fuel tank right to the brim to avoid overflow;
- **On vehicles equipped with non-automatic air conditioning**, switch off the air conditioning when it is not required.

DRIVING ADVICE AND ECO DRIVING

Advice for reducing consumption and helping to preserve the environment:

If the vehicle has been parked in the sun, open the doors for a few moments to let the hot air escape before starting the engine.

- Do not leave an empty roof rack fitted to the vehicle;
- Avoid using the vehicle for "door-to-door" calls (short journeys with long waits in between) because in such conditions the engine never reaches its optimal operating temperature.

TYRE PRESSURE MONITORING SYSTEM

3



75941



75930

(Depending on the vehicle)

If the vehicle is equipped with the function, this system monitors the tyre pressure.

Operating principle

Each wheel (except for the emergency spare wheel) has a sensor in the inflation valve which periodically measures the tyre pressure.

The system displays the current pressures on the instrument panel **1** or **2** and alerts the driver in the event of insufficient pressure.

Resetting the standard level for the tyre pressures

This should be performed:

- when the standard tyre pressure needs to be changed to adapt to usage conditions (empty, carrying a load, motorway driving, etc.);
- after swapping a wheel (however, this practice is not recommended);
- after changing a wheel.

It should always be done after checking the tyre pressure of all four tyres when cold.

Tyre pressures must correspond to the current usage of the vehicle (empty, carrying a load, motorway driving, etc.).



If the wheels are swapped, the system must be reinitialised. Consult an approved Dealer.

Resetting procedure via the instrument panel **1**



77256

Resetting procedure

Ignition on, **vehicle stopped**:

- briefly press switch **3** several times to reach the function " SET TYRE PRESSURE " screen.
- press and hold (around 3 seconds) on the switch **3** to launch the reset.

TYRE PRESSURE MONITORING SYSTEM

The "SET  " warning light flashes or the "TPMS ONGOING " message indicates that the request to reset the tyre pressure has been acknowledged. Reset can take several minutes of driving.

If the reset is followed by short journeys, the step 4 display in the table → 124 may remain displayed after several successive restarts.

Note: the tyre pressure reference value cannot be less than that recommended and indicated on the door frame.

Resetting procedure via the instrument panel 2



Ignition on, **vehicle stopped:**

- briefly press switch **4** several times to reach the " TYRE PRESSURE SET " screen.
- press and hold (around 3 seconds) on the switch **5**, confirm reset tyre pressure will be displayed.
- select the " RESET " option by pressing the switch **6** or **7** then press switch **5** to launch reset.

The  warning light will disappear and "PRESSURE REF ONGOING" message indicates that the request to reset the tyre pressure has been acknowledged.

Reset can take several minutes of driving.

If the reset is followed by short journeys, the step 4 display in the table → 125 may remain displayed after several successive restarts.

Note: the tyre pressure reference value cannot be less than that recommended and indicated on the door frame.



For your safety, the warning light **STOP** requires you to stop immediately as soon as traffic conditions allow.

TYRE PRESSURE MONITORING SYSTEM

Possible messages in instrument panel 1

The table below shows the possible messages related to the tyre resetting procedure.

Steps	Messages	Readings
1	SET TYRE PRES-SURE	With the ignition on and the vehicle stopped, start resetting the pressure of all four tyres by pressing and holding the switch 3 .
2	TPMS ONGOING	The message displayed to indicate that the system has registered the tyre pressure reset for all four wheels.
3		This system resets the tyre pressure of all four tyres. You can now drive. Note: during the reset, tyre pressure monitoring remains in operation.
4		The resetting procedure is complete and successful.

3

TYRE PRESSURE MONITORING SYSTEM

Possible messages in instrument panel 2

The table below shows the possible messages related to the tyre resetting procedure.

Steps	Displays (depending on the vehicle)	Messages	Readings
1		TYRE PRES-SURE SET	With the ignition on and the vehicle stopped, start resetting the pressure of all four tyres by pressing and holding the switch 5 .
2		Confirm Reset Tyre Pressure	selecting the " RESET " option by pressing the switch 6 or 7 and then press switch 5 to launch reset.
3		PRESSURE REF ONGOING	The message displayed to indicate that the system has registered the tyre pressure reset for all four wheels.
4			This system resets the tyre pressure of all four tyres. You can now drive. Note: during the reset, tyre pressure monitoring remains in operation. The resetting procedure is complete and successful.

TYRE PRESSURE MONITORING SYSTEM

Readjustment of tyre pressures

The pressure of the four tyres must be set when cold (refer to the label located on the edge of the driver's door). If the tyre pressures cannot be checked when they are cold, the recommended pressures should be increased by 0.2 to 0.3 bar (3 PSI). Never deflate a hot tyre.

Emergency spare wheel

If the vehicle is equipped with an emergency spare wheel, it will not have a sensor.



This function is an additional driving aid. The function does not take the place of the driver. It cannot, therefore, under any circumstances replace the vigilance or the responsibility of the driver. Check the tyre pressures, including the emergency spare wheel, once a month.

3

Replacing wheels/tyres

This system requires specific equipment (wheels, tyres, wheel rims, etc.) → 202.

Contact an approved dealer to replace the tyres and to find out about accessories compatible with the system that are available from the brand's network: using any other accessory could affect the correct operation of the system.



Changing a wheel

The system may take several minutes depending on use for the new wheel positions and pressures to be recognised; check the tyre pressures after all operations.

1 or 2 when the system detects a tyre pressure fault.

Tyre repair product and inflation kit

Because the valves are specially designed, only use equipment approved by the approved network.

Tyre pressure faults

The table lists the warning messages which appear on the instrument panel

TYRE PRESSURE MONITORING SYSTEM

Warning messages in instrument panel 1

The information on the instrument panel signals any potential tyre pressure faults (e.g. deflated or punctured tyre).The



warning light requires that, for your own safety, you stop the vehicle as soon as traffic conditions allow.

3

Indicator lights	Messages	Readings
 lights up and stays on	RR TYRE PR.LOW RL TYRE PR.LOW FR TYRE PR.LOW FL TYRE PR.LOW	This indicates that tyre under-inflation has been detected. Check and adjust the pressure of the four tyres when cold and reset the system.
 light up and stay on	RR TYRE PUNCTURE RL TYRE PUNCTURE FR TYRE PUNCTURE FL TYRE PUNCTURE	This indicates that the tyre concerned is punctured or severely underinflated. Adjust the pressure of the four tyres while cold and reset the system if the tyre is deflated. Replace the tyre (or have it replaced) if it is punctured.
 lights up and stays on	CHECK RR TPMS CHECK RL TPMS CHECK FR TPMS CHECK FL TPMS	This indicates that at least one wheel is not fitted with a sensor or that the sensor is faulty. Consult an approved dealer.

TYRE PRESSURE MONITORING SYSTEM

Warning messages in instrument panel 2

The information on the instrument panel signals any potential tyre pressure faults (e.g. deflated or punctured tyre).The

STOP warning light requires that, for your own safety, you stop the vehicle as soon as traffic conditions allow.

3

Indicator lights	Messages	Displays (depending on the vehicle)	Readings
 light up and stay on	Adjust Tyre Pressure		The wheel is displayed in yellow. This indicates that tyre under-inflation has been detected. Check and adjust the pressure of the four tyres then reset the system.
 + STOP lights up and stays on	Puncture		The wheel is displayed in red. This indicates that the tyre concerned is punctured or severely underinflated. Adjust the pressure of the four tyres while cold and reset the system if the tyre is deflated. Replace the tyre (or have it replaced) if it is punctured.
 flashes, +  lights up and stays on.	Check Tyre Pressure Sensors		This indicates that at least one wheel is not fitted with a sensor (e.g. emergency spare wheel) or that the sensor is faulty. Consult an approved Dealer.

DRIVER CORRECTION DEVICES, AIDS

Depending on the vehicle, this is composed of :

- the **ABS (anti-lock braking system)** ;
- the **emergency brake assist** ;
- **electronic stability program ESC with understeer control and traction control.**



These functions are an additional aid in the event of critical driving conditions, enabling the vehicle behaviour to be adapted to suit the driving conditions. However, the functions do not take the place of the driver. They do not increase the vehicle's limits and should not encourage you to drive more quickly. Therefore, they can under no circumstances replace the vigilance or responsibility of the driver when manoeuvring the vehicle (the driver must always be ready for sudden incidents which may occur when driving).

ABS (anti-lock braking system)

Under heavy braking, the ABS prevents the wheels from locking, allowing the stopping distance to be managed and keeping control of the vehicle. Under these circumstances, the vehicle can be steered to avoid an obstacle whilst braking. In addition, this system can increase stopping distances, particularly on roads with low surface grip (wet ground etc.).

You will feel a pulsation through the brake pedal each time the system is activated. The ABS does not in any way improve the vehicle's physical performance relating to the road surface and roadholding. It is still essential to follow the rules of good driving practice (such as driving at a safe



In an emergency, apply firm and continuous pressure to the brake pedal. There is no need to pump it repeatedly. The ABS will modulate the force applied in the braking system.



Under some driving or climatic conditions, occasional brake squeaks, squeals or other noises may be heard. Occasional brake noise during light to moderate stops is normal and does not affect the function or performance of the brake system.

Operating faults

- If the  warning light on the instrument panel comes on while you are driving, **the brakes will still work normally without ABS** ;
 - If the  and  warning lights on the instrument panel come on while you are driving, **there is a fault in the braking system.**
- In both cases, consult an approved Dealer.

Emergency brake assist with electronic brake distribution

(depending on the vehicle)

This system supplements the ABS and helps reduce vehicle stopping distances.

Operating principle

DRIVER CORRECTION DEVICES, AIDS

The system is for detecting an emergency braking situation. In this case, the braking assistance immediately develops maximum power and may trigger ABS regulation.

ABS braking is maintained as long as the brake pedal is applied.

3



Your braking systems are partially operational. However, it is **dangerous to brake suddenly** and it is essential to stop immediately, as soon as traffic conditions allow. Contact an approved dealer.

Electronic stability program ESC with understeer control and traction control



Electronic Stability Program ESC (depending on the vehicle)

This system helps you to keep control of the vehicle in critical driving conditions (avoiding an obstacle, loss of grip on a bend, etc.).

Understeer control

This system optimises the action of the ESC in the case of pronounced understeering (loss of front axle road holding).

Traction control

This system helps to limit wheel spin of the drive wheels and to control the

vehicle when pulling away accelerating or decelerating.

Deactivating the ESC function

In some situations (driving on very wet ground : snow, mud, etc. or driving with snow chains fitted), the system may reduce the engine output to limit wheelspin.

If this is not required, it is possible to deactivate the function by pressing switch 1.



The warning light on the instrument panel comes on to warn you of this.

If you deactivate this function, the traction control system will also be deactivated.

With the Electronic Stability Program ESC with understeer control and traction control providing additional safety, you are advised not to drive with the function disabled. Correct this as soon as possible by pressing the switch 1 again.

Note : The function is automatically reactivated when the ignition is switched on, or when the speed exceeds (30 mph) 50 km/h.

Operating principle

DRIVER CORRECTION DEVICES, AIDS

A sensor in the steering wheel detects the direction selected by the driver.

Other sensors throughout the vehicle measure the actual direction. The system compares driver input to the actual trajectory of the vehicle and corrects the trajectory if necessary by controlling the braking of certain wheels and/or engine power. In the event that the system is engaged, the indicator

light  flashes on the instrument panel.

Operating faults

When the system detects an operating fault the warning lights  and

 appear on the instrument panel.

In this case, the Electronic Stability Program ESC with understeer control and traction control are deactivated.

Please consult an authorised dealer if these warning lights remain displayed on the instrument panel after the ignition is switched off and on again

Hill start assistance

This function assists the driver when starting on hills. It prevents the vehicle from rolling forwards or backwards by automatically applying the brakes when the driver lifts their foot off the

brake pedal to depress the accelerator pedal.

System operation

It only operates when the gear selector is in a position other than neutral (other than **N**) and the vehicle is completely stationary (brake pedal depressed).

The system holds the vehicle for approximately **2 seconds**. The brakes are then gradually released (the vehicle will move according to the slope).



The hill start assistance system cannot completely prevent the vehicle from rolling back-

wards in all situations (extremely steep gradients, etc.).

In all cases, the driver may depress the brake pedal to prevent the vehicle from rolling forwards or backwards.

The hill start assistance function should not be used for prolonged stops : use the brake pedal.

This function is not designed to immobilise the vehicle permanently.

If necessary, use the brake pedal to stop the vehicle.

The driver must remain particularly vigilant when driving on slippery or low-grip surfaces and/or on hills.

Risk of serious injury.


TAKE A BREAK REMINDER

The take a break reminder lets you set a reminder to take a break **1**, when the driver tends to drive for long without a break which would cause drowsiness otherwise stressed driving leading to high chances of accident.

It takes into account indicators such as:

- Travel distance
- Travel time
- Customer rest time

3

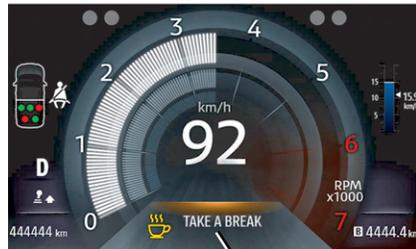

76039



This function is an additional driving aid in case of risk of fatigue or impaired attention. The function does not take the place of the driver. Under no circumstances should this function replace the driver's care or responsibility whilst driving.

Switching ON / OFF Function:

When the vehicle stationary,



- Press switch **2** as many times as necessary to position yourself on the setting tab.

- By pressing the switch **3** or **4** "Take A Break" function will appear on the display.
- Press the switch **5** **OK** to ON/ OFF the "Take A Break" function.

77108



TAKE A BREAK REMINDER

77109



77111



77112



3

77113



- Once switching ON the “Take A Break” function and it will enter to the Feature options.
- By pressing the switch **3** or **4** “SET DISTANCE” function will appear on the display.
- By pressing the switch **5**, it will enter to the set distance KM selection.
- Customer can SET driving distance (150km/ 200km/ 250km) by using the switch **3** and **4**.
- Press the switch **5** OK to select the driving distance km.

SET Time:

- Once switching ON the “Take A Break” function and it will enter to the Feature options.
- By pressing the switch **3** or **4** “SET Time” function will appear on the display.
- By pressing the switch **5**, it will enter to the set time mins selection.
- Now you can SET driving time (90Mins/ 120Mins/ 150Mins) by using switch **3** or **4**.
- Press the switch **5** OK to select the driving time mins.


SET Rest Time:

Operation:

SET Distance:

TAKE A BREAK REMINDER

3

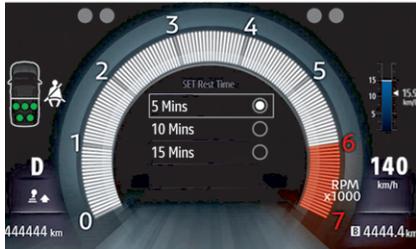

- Once switching ON the “Take A Break” function and it will enter to the Feature options.
- By pressing the switch **3** or **4** “SET Reset Time” function will appear on the display.
- By pressing the switch **5**, it will enter to the set reset time mins selection.
- Now you can SET rest time (5Mins/10Mins/15Mins) by using switch **3** or **4**.
- Press the switch **5 OK** to select the Rest time.
- If any one of the setting parameters (Distance/Time) threshold value meets, by the time “TAKE A BREAK” message displayed on the instrument panel continue for 30 seconds (alert will disappear if user acknowledge with

in 30 seconds or vehicle speed reaches 0 km/h (0 mph)) and with 3 seconds chime.

- It is advisable to stop as soon as possible for a selected break time.
- If user not taken break after alert message, this message will reappear in every 30 minutes or 50km.
- The Take A Break warning continuously monitors the parameters and can provide several warnings per journey.
- The system resets every time the engine is started.

The system resets when it exceeds the rest time based on following conditions.

- Engine idle condition, Vehicle speed 0 km/h (0 mph)
- Engine OFF.



- User need to ON the function and by default the function is OFF state
- Once the function ON, Remains ON until OFF by user

CRUISE CONTROL



The Cruise control function helps you to maintain your driving speed at a speed that you choose, called **cruising speed**.

Depending on the engine variant, The cruising speed may set at any speed above 40 Km/h (25 mph)

Push the Cruise control main switch **1** and the cruise control indicator will be displayed in the speedometer.



This function is an additional driving aid. The function does not take the place of driver

Therefore it can under no circumstances replace the driver's responsibility to respect the speed limits and to be vigilant (the driver must always be ready to brake) Cruise control must not be used in heavy traffic on undulating or slippery roads and during bad weather (fog, rain, side winds etc.)

There is a risk of accidents



The cruise control function is nowhere linked to the braking system

Please note that you should keep your feet close to the pedals in order to react in an emergency

Controls



2. Cruise cancel button

3. Press function with " - "

4. "RES +" button

The cruise control allows driving at speeds above 40 Km/h (25 mph) without keeping your foot on the accelerator pedal.

Depressing the clutch/brake pedal (for manual transmission (MT) vehicle) will cancel the cruise control and the set speed indicator will turn off.

The cruise control switches are located on the steering wheel and the centre console area.

CRUISE CONTROL

3



Turning ON the Cruise control

Press the cruise control main switch **1** and the cruise control indicator **5** will be displayed on the instrument panel. Now the vehicle is in cruise control inhibition mode.

At the same time, set speed indicator **6** will also be displayed on the instrument panel.

When the cruise control main switch **1** is off, cruise control function **5** and set speed indicator **6** will be disabled.

Pressing the switch **3** and **4** will set the cruise speed at the same it will be displayed in the instrument panel.

Pressing the "RES +" switch **3** will increase from the current set speed and

pressing the cruise control "CANCEL" switch **2** will cancel the cruise speed. When the cruising speed is cancelled, the cruise control indicator **5** and set speed indicator **6** remains faded out until the next cruise speed set by the user.

Pressing again the "RES +" switch **3** will set to the previous cruise speed as it will be in the memorized speed.

Setting the cruising speed

- accelerate to the desired speed.
- push the switch " - " **4** and release it.
- the set speed indicator **6** is displayed in the instrument panel.
- take your foot off from the accelerator pedal, the vehicle will maintain the set speed.

Passing another vehicle

Depress the accelerator pedal to accelerate. if the vehicle speed overrides the cruise control set speed, the cruise control set speed indicator **6** on the instrument panel will blink. After releasing the accelerator pedal, the vehicle will return to the previously set speed.

The vehicle may not maintain the set speed when going up or down steep hills, in such cases drive without the cruise control.

Resetting to slower speed

Use any one of the following methods to reset to a slower speed.

- lightly tap the foot brake pedal. when the vehicle reaches the desired speed, press & release the "-" switch **4**.
- keep the "-" switch **4** pressed till the vehicle reaches the desired speed and then release the switch **4**.

Resetting to faster speed

Use any one of the following methods to reset to a faster speed.

Depress the accelerator pedal to reach the desired speed. To set the desired speed as set point speed, hold the pedal and then press "RES +" switch **3** or "-" switch **4**. After the cruise control set speed indicator **6** in the instrument panel changes to the new speed, release the accelerator pedal.

Keep the "RES +" switch **3** pressed till the vehicle reaches the desired speed and then release the "RES +" switch **3**.

CRUISE CONTROL



On MT (manual transmission) model do not shift to the "N" (neutral) position without depressing the clutch pedal when the cruise control is operated should this occur, depress the clutch pedal and turn the cruise control main switch OFF immediately. Failure to do so may cause engine damage.



If the cruise control is no longer available (after several attempts), contact an approved dealer.

- press the cancel switch **2**.
- press the brake pedal.
- press the clutch pedal for (MT vehicle).



This function is an additional driving aid. The function does not take place of driver.

Therefore it can under no circumstances replace the driver's responsibility to respect the speed limits and to be vigilant (the driver must always be ready to brake). Cruise control must not be used in heavy traffic on undulating or slippery roads and during bad weather (fog, rain, side winds etc.)

There is a risk of accidents

3

Resuming at preset speed

Press and release the "RES +" switch **3**.

The vehicle will set at last set cruising speed when the vehicle speed is over 40 Km/h (25 mph).

Cancelling cruising speed

Driver can come out of cruise control by any of the following option.

ENVIRONMENT

Your vehicle has been designed with respect for the **environment** in mind for its entire service life : during production, use and at the end of its life.

This commitment is illustrated by the manufacturer eco² signature.

3

Manufacture

Your vehicle has been manufactured at a factory which complies with a policy to reduce the environmental impact on the surrounding areas (reduction of water and energy consumption, visual and noise pollution, atmospheric emissions and waste water ; sorting and re-using waste).

Emissions

For the usage phase, your vehicle was designed to emit fewer greenhouse gases (CO₂) and therefore to consume less fuel.

Our vehicles are also equipped with a particle filter system including a catalytic converter, an oxygen sensor and an active carbon filter (the latter prevents vapour from the fuel tank being released into the open air).

Please make your own contribution towards protecting the environment too

- Worn parts replaced in the course of routine vehicle maintenance (vehicle battery, oil filter, air filter, batteries, etc.) and oil containers (empty or filled with used oil) must be disposed of through specialist organisations.
- In all cases, comply with local legislation.

Recycling

Your vehicle is at least 85% recyclable and at least 95% recoverable.


To achieve these objectives, many of the vehicle components have been designed to enable them to be recycled. The materials and structures have been carefully designed to allow these components to be easily removed and reprocessed by specialist companies.

In order to preserve raw material resources, this vehicle incorporates numerous parts made from recycled plastics or renewable materials (vegetable or animal-derived materials such as cotton or wool).

PARKING AIDS

Reversing camera

Operation

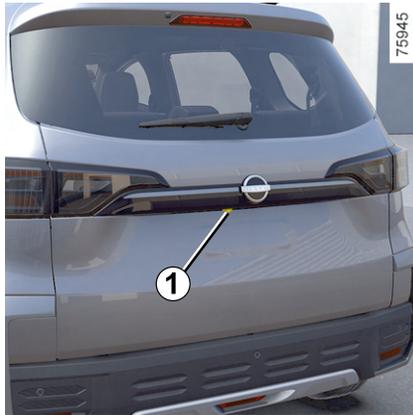


Depending on the variants, when using reverse gear, the camera **1** sends a view of the area behind the vehicle to the multimedia display **2** together with a static guide line.

This system is used with the aid of a fixed distance gauge. When the red zone is reached, stop the vehicle.



Note: make sure that the reversing camera is not obscured (by dirt, mud, snow, etc.).

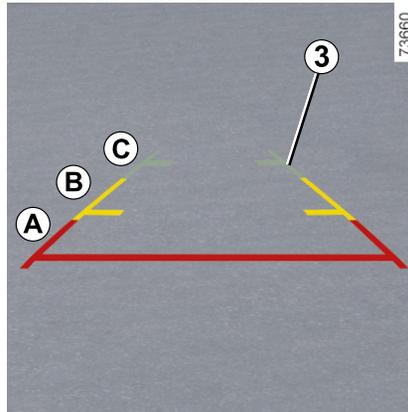

This function is an additional aid. It cannot, therefore, under any circumstances replace the vigilance or the responsibility of the driver.

The driver should always pay attention to sudden incidents during driving : always ensure that there are no moving obstacles (such as a child, animal, pram, bicycle, etc.) or small, narrow objects such as stones or posts in your path when manoeuvring.

Static guide line **3**:

The static guide line **3** has coloured markers **A**, **B** and **C** showing the distance behind the vehicle :

- **A** (red) approximately 30 centimetres from the vehicle;
- **B** (yellow) approximately 70 centimetres from the vehicle;
- **C** (green) approximately 150 centimetres from the vehicle.

PARKING AIDS

3



The screen shows a reverse image.

The frames are a representation projected onto flat ground; this information must not be taken into account when superimposed on a vertical object or an object on the ground.


Objects which appear on the edge of the screen may be deformed.

In very bright light (snow, vehicle in sunshine etc.), the camera vision may be adversely affected.

This gauge remains fixed and indicates the vehicle trajectory if the wheels are in line with the vehicle.

Parking distance control

Introduction

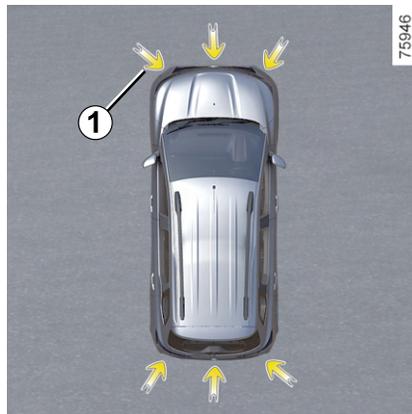

Ultrasonic sensors, indicated by arrows **1**, are fitted in the bumpers to detect obstacles near the vehicle.

The function alerts the driver via audible signals and a display representing the area where the obstacle was detected.

Depending on the equipment, the system detects obstacles behind and front of the vehicle.

The parking distance control system is only activated when the vehicle is driven at a speed below approximately 10 km/h (6 mph).

The function does not take into account towing or carrying systems that are not recognised by the system.



This function is an additional driving aid. Under no circumstances should it replace the driver's care or responsibility whilst reversing.

The driver should always be ready for sudden incidents while driving: always ensure that there are no small, narrow moving obstacles (such as a child, animal, pushchair, bicycle, stone, post, etc.) in the blind spot when manoeuvring.

PARKING AIDS




An impact to the underside of the vehicle while manoeuvring (e.g. striking a post, raised kerb or other street furniture) may result in damage to the vehicle (e.g. deformation of an axle). To avoid any risk of accident, have your vehicle checked by an approved dealer.

Location of the ultrasonic sensors **1**

Ensure that the area around the ultrasonic sensors indicated by the arrows **1** is not obscured (by dirt, mud, snow, a badly fitted/attached number plate), impacted, modified (including paintwork) or obstructed by any accessory fitted to the rear and/or, depending on the vehicle, to the front of your vehicle.


Operation

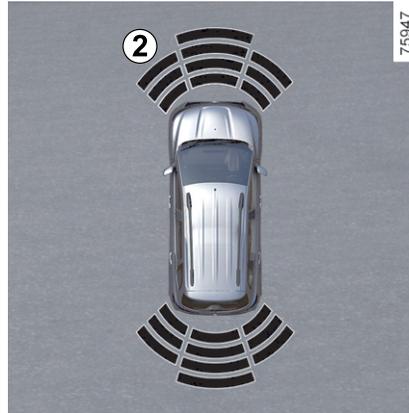

Depending on the vehicle, the display **2** shows the vehicle surroundings, accompanied by beeps.



In the event of a change in trajectory during a manoeuvre, the risk of collision with an obstacle may be signalled late.

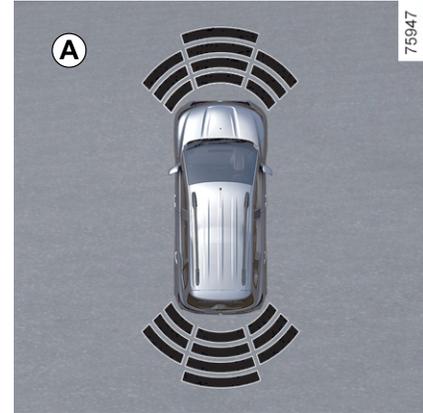

Most obstacles located near the rear and, depending on the equipment, the front of the vehicle are detected.


The frequency of the beep will increase as the obstacle approaches and will become a continuous beep at around 30 cm from an obstacle detected to the front or rear.

Depending on the vehicle, the area where the obstacle has been detected is shown (display **A**). Depending on the vehicle, the area is displayed in green, orange (or yellow depending on the vehicle) or red, depending on the proximity of the detected obstacle.

PARKING AIDS

Activation/deactivation

Activation/deactivation of front parking system manually.

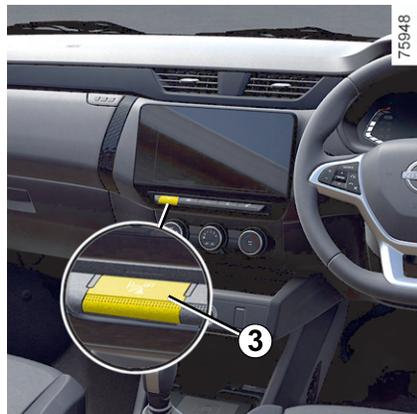

3

Temporary activation/deactivation:

Press the switch **3**, to deactivate the system.

The deactivated system can be reactivated by pressing the switch **3**.

NOTE: Once vehicle gets restarted, the system will be reactivated again.

Permanent activation/deactivation:

By long pressing the switch **3**, approximately more than 2 seconds, the system will be deactivated permanently.

To reactivate the system long press the switch **3**.

Special case for permanent deactivation:

Once the vehicle is restarted, the system remains deactivated until the system is activated.

 The warning light above the switch **3** remains permanently illuminated to remind you system is deactivated.

Parking distance control automatic deactivation

The system is deactivated:

- when the vehicle speed is above approximately 10 km/h (6 mph);
- depending on the vehicle, when the vehicle is stationary for more than approximately five seconds and an obstacle is detected (such as when in a traffic jam, etc.);
- when you are in **N** position.

 The rear detection zone cannot be deactivated.



For safety reasons, carry out any adjustments while the vehicle is stationary.

Operating faults

When the system detects an operating fault:

- depending on the vehicle, the warning light above switch **3** will blink continuously;
- either a beep sounds for approximately three seconds when the reverse gear is engaged;
- or the system does not produce any sound (unless deliberately deactivated) or there is no display when the reverse gear is engaged.

Check that your ultrasonic sensors are clean. If the fault persists, consult an approved dealer.

 When the vehicle is traveling at a speed below approximately 10 km/h (6 mph), some noises (motorcycle, lorry, pneumatic drill, etc.) may trigger the Park Assist system audible warnings.

PARKING AIDS

Advice



System servicing/repairs

- In the event of an impact, the alignment of the sensors may be altered and their operation may consequently be affected. Deactivate the function and consult an authorised dealer.
- Any work in the area where the sensors are located (repairs, replacements, etc.) must be carried out by a qualified professional.

Only an authorised dealer is qualified to service the system.

System disturbance

Some conditions can disrupt or damage the system operation, for example:

- poor weather conditions (rain, snow, hail, black ice, etc.);
- in the event of exposure to strong electromagnetic waves (under high-voltage lines, etc.);
- some types of noise (motorcycle, lorry, pneumatic drill, etc.);
- fitting a non-compatible towing ball or hook;

Risk of false alarms or absence of warnings

In the event of the system behaving abnormally, deactivate it and consult an authorised dealer.

Limitation of the system operation

- The area around the sensors must be kept clean and free of any modifications in order to ensure the proper operation of the system.
- Small objects moving close to the vehicle (motorcycles, bicycles, pedestrians, etc.) may not be recognised by the system.
- The system may not detect objects that are too close to the vehicle.
- The system may not provide a warning when the other vehicles or objects are travelling at a significantly different speed.
- When there is a change in trajectory during a manoeuvre, the system may be slow in reporting obstacles.
- When the vehicle is towing a trailer, the rear Park Assist system must be deactivated.

Deactivating the function

You must deactivate the function if:

- the area around the sensors has been damaged;

PARKING AIDS


- the vehicle is equipped with a towing device that is not recognised by the system (electrical adapter, ball, hook, etc.).

3

AIR VENTS, HEATING AND AIR CONDITIONING

Air vents: air outlets

Air outlets

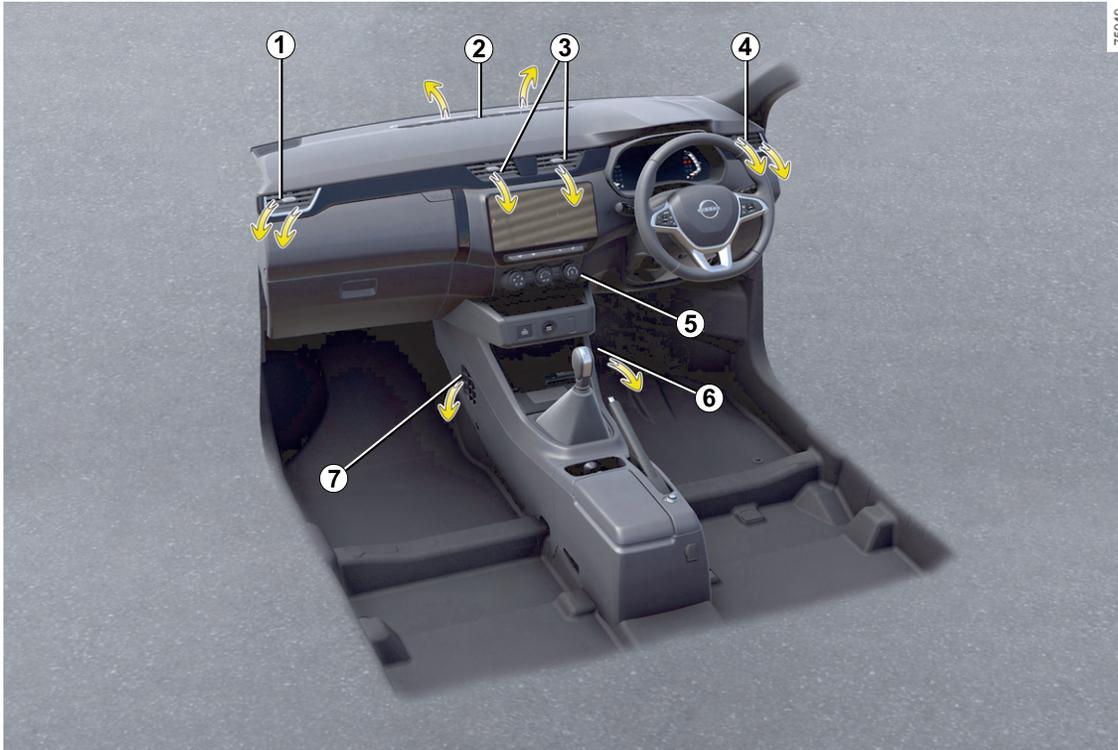

4

AIR VENTS, HEATING AND AIR CONDITIONING

1. Left side air vents
2. Windscreen demisting vents
3. Centre air vents
4. Right side vents
5. Control panel
6. Driver footwell outlets
7. Front passenger footwell outlets

4

AIR VENTS, HEATING AND AIR CONDITIONING

Air flow



Lateral Air vents(Left and Right)

- To move the front vanes up/down, move the centre knob **8** upwards/ downwards;
- To open/close the side vanes (inside the centre knob), move the centre knob **8** towards outside/inner side respectively;

Air vents are having rear fixation. To service air vents, complete Instrument panel assembly had to be disassembled.

Centre Air Vents



(depends on the vehicle)

- To move the front vanes up/down, move the centre knob **9** upwards/ downwards;
- To open/close the centre vanes (inside the centre knob), move the centre knob **9** towards outside/inner side respectively;

Air vents are having rear fixation. To service air vents, complete Instrument panel assembly had to be disassembled.

Rear Air Vents



Depending on variants, rear air vents **10** is fitted on the second row pillar trim.

AIR VENTS, HEATING AND AIR CONDITIONING

Rear roof Air Vents



Depending on variants, roof air vents **11** is fitted on the roof rear side of the vehicle.




Do not add anything to the vehicle's ventilation circuit (for example, to remove bad odours).

There is a risk of damage or of fire.

Heating, ventilation, air conditioning

Controls

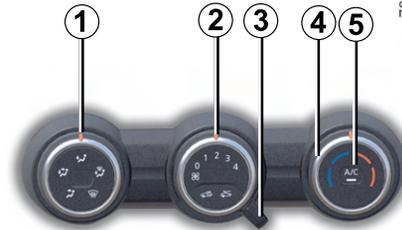

The controls will depend on the vehicle equipment level.

1. Distribution of Air.
2. Adjusting the ventilation fan speed.
3. Switching passenger compartment to isolation mode / air recirculation mode.
4. Air temperature adjuster
5. Switching air conditioning on/off (if light gets ON, it indicates the air conditioning system is ON).

Adjusting the air temperature

Turn control **4** to obtain the desired temperature. The further towards the red the slide is, the higher the temperature will be.

Adjusting the ventilation fan speed.

Turn control **2** from 0 to 4. The further to the right it is positioned, the more air is blown into the passenger compartment. If you want to shut off the flow of air completely and stop the system, set control **2** to 0.

The system is deactivated : the ventilation speed for the passenger compartment air is zero (vehicle stationary), you can however still feel a slight flow of air when the vehicle is moving.



Leaving this control in position 0 for prolonged periods can lead to condensation forming on the side windows and windscreen and problems due to the use of non-renewed air in the passenger compartment.

AIR VENTS, HEATING AND AIR CONDITIONING

Switching passenger compartment isolation mode/air recirculation mode on.

Bring lever **3** to position .

Under these conditions, air is taken from the passenger compartment and is recirculated, with no air being taken from outside the vehicle.

Air recirculation is used to :

- to isolate the passenger compartment from the external atmosphere.
- to bring the passenger compartment to the desired temperature as quickly as possible.

Rapid demisting

- Turn control **4** on full hot position.
- Turn control **2** on max speed position **4**.
- Turn control **1** to full defrost mode




- move slider knob **3** to fresh air mode.

Using the climate control increases the speed of demisting.



Prolonged use of air recirculation can lead to condensation forming on the windscreen, and discomfort due to the use of non-renewed air in the passenger compartment. You are therefore advised to pick-up external air as soon as the air recirculation function is no longer required, by sliding control **3** to the right.

Heated rear screen

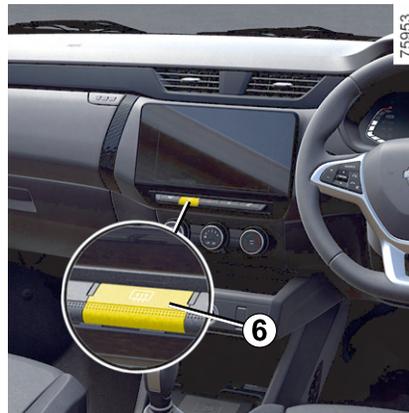

with the engine running, press button **6** (the warning light comes on instrument panel).

This function de-ices/demists the rear screen.

The function is stopped:

- after a period of time set by the system (warning light goes out);
- by pressing button **6** again (the warning light goes out).

Air conditioning: information and advice on use

Fuel consumption

You will normally notice an increase in fuel consumption (especially when driving in town) when the air conditioning is operating.

Advice for reducing consumption and helping to preserve the environment.

Drive with the air vents open and the windows closed.

If the vehicle has been parked in the sun, open the doors for a few moments to let the hot air escape before starting the engine.

AIR VENTS, HEATING AND AIR CONDITIONING

Maintenance

Refer to the Maintenance Document for your vehicle for the inspection frequency.

Operating faults

As a general rule, contact your approved dealer in the event of an operating fault.

– **Reduction in de-icing, demisting or air conditioning performance.**

Contact an approved dealer.

– **No cold air is being produced.**

Check that the controls are set correctly and that the fuses are sound. Otherwise, switch off the system.

Presence of water under the vehicle

After prolonged use of the air conditioning system, it is normal for water to be present under the vehicle. This is caused by condensation.



Do not open the refrigerant fluid circuit. The fluid may damage eyes or skin.

MULTIMEDIA EQUIPMENT



The presence and location of this equipment depends on the vehicle's version and multimedia equipment.

1. Radio or navigation system.
2. Multimedia port.
3. Microphone.

Multimedia port

The multimedia port USB **2** can be used to charge accessories with a maximum power of 12 Watts (5 Volts) per socket.

Note: the multimedia port USB **2** can also be used the transfer data.


i – In all cases, it is very important to follow the manufacturer's instructions carefully.

– The specifications of the brackets and wires (available from our network) vary depending on the equipment level of your vehicle and the type of radio.

Consult your approved Dealer to find out the correct part number.

– No work may be carried out on the vehicle's electrical or radio circuits, except by approved Dealers: an incorrectly connected system may result in damage being caused to the electrical equipment and/or the components connected to it.

Hands-free telephone integrated control

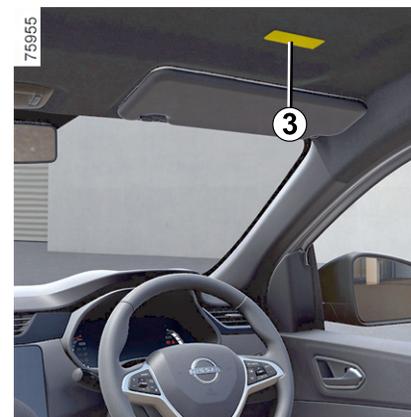

On equipped vehicles, use microphone **3**.

If your vehicle is not fitted with an audio system, one can be fitted and locations have been provided for the radio **1**.

To install any equipment, please consult an authorised dealer.

4

MULTIMEDIA EQUIPMENT

4



Using the telephone

We remind you of the need to conform to the legislation in force concerning the use of such equipment.



To use this equipment, consult the instructions for the equipment which should be kept with the other vehicle documentation.

Steering wheel controls



On equipped vehicles, use:

- **4** select the audio source.
- **5** Mute.
- **6** Answer the call/call attend.
- **7** Scroll to navigate the list with press function.
- **8** Volume decrease “-”.
- **9** Volume increase “+”.



- **10** Cruise control.

General description

Introduction

If the vehicle is equipped, the multimedia system provides the following functions:

- radioRDS;

- management of external audio sources;
- hands-free telephone;
- voice recognition;
- Park Assist (reversing camera);
- information on your driving style and driving advice in order to optimise your fuel consumption.

Radio functions

The multimedia system can be used to listen to FM (frequency modulation) and AM (amplitude modulation) radio.

The RDS system displays the name of some stations or messages sent by the FM radio stations:

- general traffic information (TA);
- emergency message(s).

Auxiliary audio function

You can listen to your personal stereo directly through your vehicle's speakers. There are several ways to connect your portable audio player, depending on the type of device you have:

- USB audio;
- Bluetooth® connection;
- smartphone replication.

For more information on the list of compatible devices, please contact an authorised dealer or visit the manufacturer's website if available.

MULTIMEDIA EQUIPMENT

Hands-free phone function

The hands-free system Bluetooth® allows you to use the following functions without having to handle your phone:

- send/receive/suspend a call;
- consult the list of contacts from the phone memory;
- access the call logs for calls which have come through the system;
- dial emergency numbers.

Telephone compatibility


Some phones are not compatible with the hands-free system, and do not enable you to use all of the available functions or do not provide the best possible sound quality.

For more information on compatible phones, contact an authorised dealer or visit the manufacturer's website if available.



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

Displays

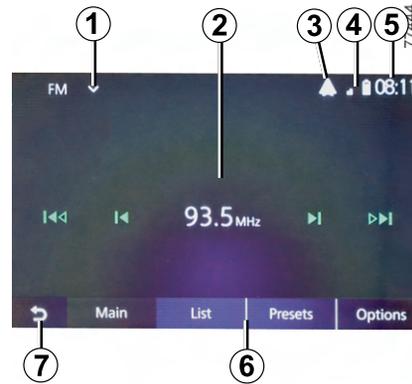

Menu screen

1. Mode selection area.

Displays the selected mode. When the mode selection area is touched, a drop-down menu will appear.


2. Table of contents area.

Shows the contents of a menu item and related information.

3. Shortcut to Android Auto™/Car-Play™.

4. Telephone information area.

If the Bluetooth® system or smart-phone replication is activated, your connected device's reception and battery level will be displayed.

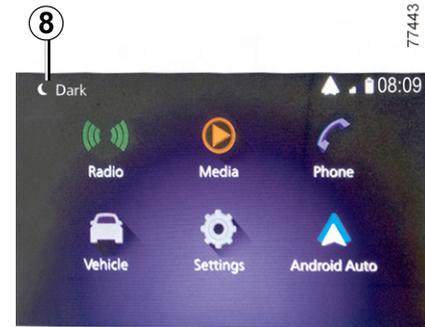

5. Time area.

6. Menu area:

- display subordinate menu of mode;
- shows current menu as highlighted.

7. Area Home or return to navigation.

Depending on the mode you are in, this area displays:

- the "Home" button: to return to the home menu;
- the "Back" button: to return to the previous screen.

8. Night mode.

MULTIMEDIA EQUIPMENT

Reversing camera

Operation


When shifting into reverse gear (and up to approximately five seconds after shifting to another gear), a view of the surroundings behind the vehicle is displayed on the multimedia system screen accompanied by the guide, a silhouette of the vehicle and a sound signal.

Ultrasonic sensors installed in your vehicle "measure" the distance between the vehicle and an obstacle. When the red zone is reached, use the bumper image to stop accurately.

Note:

- ensure that the reversing camera is not obscured (dirt, mud, snow, etc.);
- once the reverse gear is engaged, the multimedia screen displays a view of the area behind the vehicle for several seconds.

Activation/deactivation

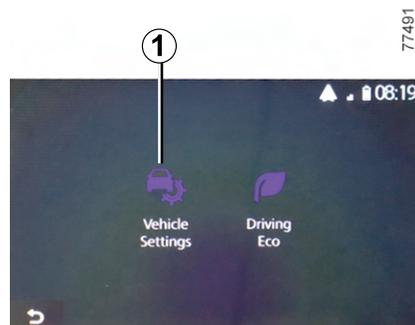

Reversing camera

You can activate/deactivate the reversing camera. To do this, from the home screen select "Vehicle", "Vehicle Settings", **1**.

Note: the reversing camera display is no longer available (it is replaced by a black screen) when the vehicle speed is above approximately 6 mph (10 km/h), depending on the local legislation.




Display settings

You can access the display settings with the **2** button.

From this menu you can activate/deactivate the fixed **3** or mobile **4** (depending on the vehicle) guide lines that indicate the distance behind the vehicle, and you can adjust the screen settings.

Press "+" or "-" to adjust the contrast **5**, brightness **6** and colours **7**.

MULTIMEDIA EQUIPMENT

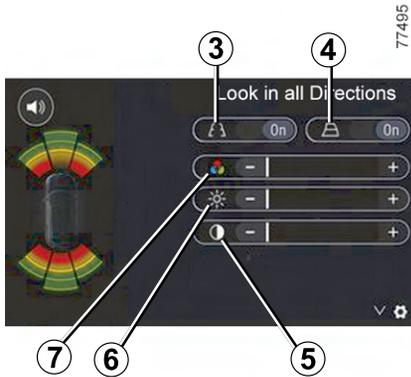

For safety reasons, carry out these operations when the vehicle is stationary.



This function is an additional aid. It cannot, therefore, under any circumstances replace the vigilance or the responsibility of the driver.

The driver should always be ready for sudden incidents while driving: always ensure that there are no small, narrow moving obstacles (such as a child, animal, pushchair, bicycle, stone, post, etc.) in the blind spot when manoeuvring.



The screen shows a reverse image.

The gauges are a representation projected onto flat ground. This information must not be taken into account when superimposed on a vertical object or an object on the ground. Objects which appear on the edge of the screen may be deformed.

In very bright light (snow, vehicle in sunshine, etc.), the camera vision may be adversely affected.

MULTIMEDIA EQUIPMENT

Switching on, off


Switching on



Press and hold the **A** button (until a black screen appears) to restart the multimedia system.

i For safety reasons, if the temperature is too low or too high inside the vehicle, the multimedia system will not start or will switch off automatically. Wait a few moments for the temperature to return to a more suitable level for the multimedia system to operate properly.

Standby screen

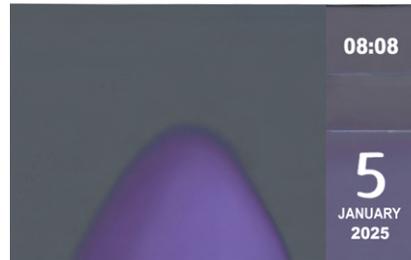

The multimedia system switches on automatically when the ignition is switched on. In other cases, press button **A** to switch on the multimedia system.

With the ignition off, you can use your system for a limited time.

Switching off

The multimedia system may take a few minutes to update and deactivate after the ignition is switched off, depending on the applications in operation.


The standby screen mode allows the display screen to be switched off.

When in standby clock mode, the radio or guidance system does not operate.

Depending on the vehicle, the standby screen displays the time.

Briefly press **A** to activate/deactivate the standby screen.


Night mode

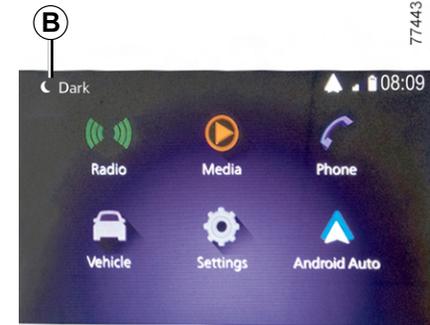

Activating night mode will deactivate the screen backlighting.

To access the night mode, press **B** from the home screen.


MULTIMEDIA EQUIPMENT

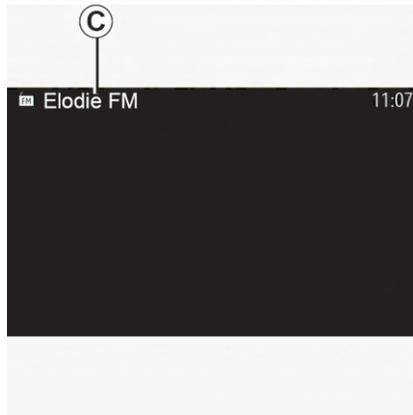

In this mode, the media source or radio station currently playing appears on the screen **C**.

Press the screen to exit dark mode.

Selecting a wavelength

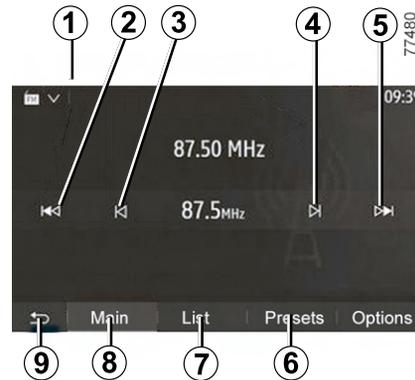

To choose a waveband:

- Press **1**;
- Select the "FM", "AM" band (digital radio, on equipped vehicles) by pressing the band desired.

Choose a radio station "FM", "AM"

There are different modes for choosing a radio station.

After selecting the waveband, select the mode by pressing the tabs **6**, **7** or **8**.

Several search methods are provided:

- "Frequency" mode (**8** tab);
- "List" mode (tab **7**);

- "Presets" mode (tab **6**).

These modes can be changed using the steering column control.

"Frequency" Mode

This mode enables you to search for stations either manually or automatically by scanning the selected frequency range. Select "Frequency" mode by pressing **8**.

To scan the frequency range:

- manually run through the frequencies in steps by repeatedly pressing **3** or **4**;
- automatically go to the next station by pressing **2** or **5**;


Repeat the operation each time the search stops if necessary.

You can also move the control knob on the steering column control to move to the next station.

Note: to go back to the welcome screen, press the **9** button.

MULTIMEDIA EQUIPMENT

4

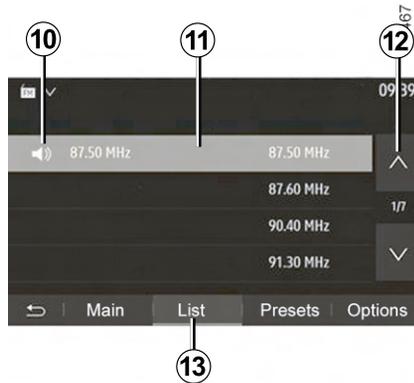

"List" mode

Select "List" mode by pressing **13**.


This operating mode allows you to find a station easily by name from an alphabetical list (on "FM").

Select the station required by pressing zone **11**.

Press **12** to scroll through all the stations.

Note: the symbol **10** indicates the station you are currently listening to.


The names of the radio stations that do not use RDS will not appear on the screen. Only their frequency is displayed and sorted at the end of the list.

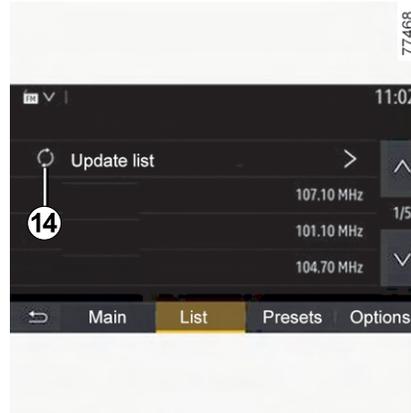

Updating the list

From "List" mode, press **14** to update the list of available radio stations.

The **14** symbol appears on the first page in the "List" mode.

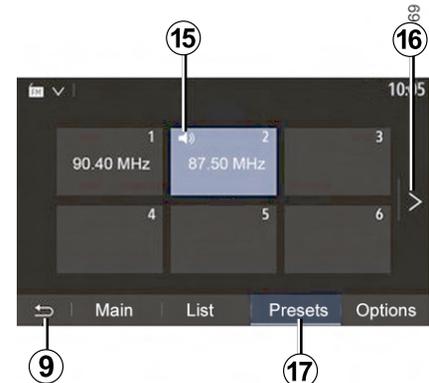

"Presets" mode

Select "Presets" mode by pressing **17**.

This mode allows you to recall on demand those stations which you have already stored (refer to information on "Saving a station" in this section).

Press one of the buttons in zone **A** to choose the saved stations.

Note: to go back to the welcome screen, press the **9** button.

Storing a station

Select a radio station by using one of the modes described above. Press and hold one of the buttons on the zone **A**.

MULTIMEDIA EQUIPMENT

You can save up to twelve stations per waveband. If you change the region via the "RDS" function, the stored stations are not automatically updated. You must again store the station currently playing.

Note: the symbol **15** indicates the station you are currently listening to.

To move to the next page, press button **16**.

Radio settings



Display the settings menu by pressing **18**. You can activate or deactivate functions by pressing "ON" or "OFF" (the configuration menu changes according to the band).

The available functions are as follows:

- « RDS » ;
 - « AF » ;
 - "TA" (traffic information);
 - « Region » ;
 - "Info";
 - « AM » ;
 - ...
- « RDS »

The "RDS" function receives information transmitted by the radio station currently playing.

Your system may display the name of the radio station and text messages as well as receive traffic warnings or other information.

When the "RDS" function is activated, frequency retuning (AF) is automatically activated.

Traffic information is generally sent via "RDS".

Note: not all radio stations offer this possibility.

Poor reception can sometimes cause erratic and annoying changes in frequency. In this case you should deactivate the automatic frequency retuning.

"AF" (depending on the country)

The frequency of an FM station changes according to the geographical area. Some stations use the RDS sys-

tem, mainly for automatic retuning of the AF frequency during car trips.

"TA" (traffic information)

When this feature is activated, your multimedia system searches for and plays traffic bulletins automatically as new reports are issued by "FM" radio stations.

Note: the automatic broadcasting of traffic information is deactivated when the audio system is set to the "AM" band.

Select a radio station which broadcasts traffic information. If you are listening to music from another source (USB flash drive, Bluetooth® etc.), the system automatically switches to the radio if a traffic announcement is received.

Traffic information is broadcast automatically and has priority over the source being listened to at the time.

Select "ON" to activate this function or "OFF" to deactivate it.

« Region »

This setting enables the reception of specific regional programs. It temporarily deactivates automatic frequency retuning (AF) on a radio which uses regional frequencies.

MULTIMEDIA EQUIPMENT

The listener can keep listening to their program even if receiving a lesser signal.

Note:

- the "Region" setting only applies to the radio station currently playing;
- some radio stations broadcast on regional frequencies. In this case:
- with "Region" activated: the system will not switch to the transmitter for the new region, but the system will switch normally between the transmitters of the initial region;
- "Region" deactivated: the system will switch to the transmitter for the new region, even if the broadcast program is different.

"Info"

When this function is activated, it is possible to automatically listen to news as it is broadcast by "FM" radio stations.


If you then select the other sources, when a broadcast of the selected programme type is made, it will interrupt the other sources.

Select "ON" to activate this function or "OFF" to deactivate it.

« AM »

You can activate or deactivate the "AM" band.

Select "ON" to activate this function or "OFF" to deactivate it.

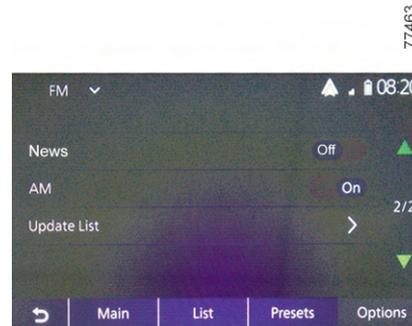

"Updating the list"

To update the list of stations and obtain the most recent ones, press "Start".

Auxiliary audio sources


Your system has two types of auxiliary inputs:

- for connecting an external audio source (MP3 player, portable music player, USB key, phone, etc);
- with Bluetooth® (Bluetooth® audio player, Bluetooth® phone).

Operating and connection principles

Connect your portable digital audio player to the USB port. Once it is connected, the system automatically detects the auxiliary source.

Note: the USB drive used must be FAT32 or NTFS formatted and have a maximum capacity of 32 GB. Some formats may not be compatible with the system.

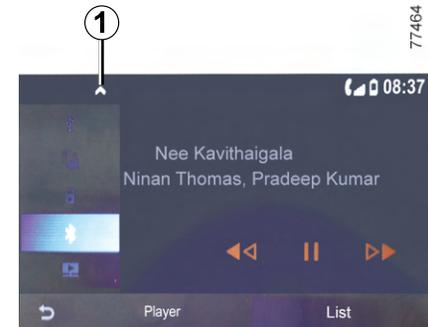

Selecting an auxiliary source

From the "Media" menu, select an input source by pressing **1**.

A list of available input sources is displayed instantly:

MULTIMEDIA EQUIPMENT

- USB: USB key, MP3 player, telephone, etc.
- audio devices ;
- BT: devicesBluetooth®;
- "Video": key USB(filesMP4, 3GP, AVI, MPG and MPEG).

Note: for your video files to be played using a USB flash drive, the following conditions must be met:

- video display format limited to a maximum definition of 800 x 480;
- frame rate limited to a maximum of 30 frames per second.

In navigation mode or when listening to the radio, select your auxiliary audio source by pressing "Home", then "Media".


The system starts playing the last audio track played.



Only handle the portable audio player when traffic conditions permit.

Store the portable audio player while you are driving.

Risk of it being thrown forward in the event of sudden braking.

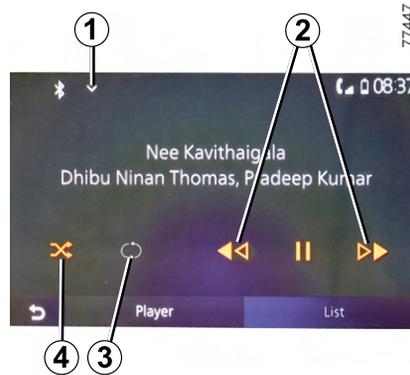

Audio formats

Only MP3, WMA and FLAC formats are recognised by the multimedia system.

Fast winding

Long press **2** to fast forward or rewind. Playback resumes when the button is released.

Repeat

This function enables you to repeat one or all tracks. Press **3** one or more times to repeat track(s).

Shuffle

This function lets you play all songs in shuffle mode. Press **4** to shuffle playback.

Auxiliary input: USB, Bluetooth® port

Connection: USB and portable digital audio player

Connect the jack of your portable digital audio player to the multimedia jack

input socket .

Once the USB socket of the portable digital audio player is connected, the "USB" menu is displayed. The model or menu of the portable digital audio player may be displayed.

Note: it may not be possible to connect some types of portable digital audio player.

Use

Select the portable digital audio player from the drop-down list **1**, then press the desired playlist or audio track.

Once connected, on some models you will no longer be able to directly control your portable digital audio player. Use the buttons on the front panel of your multimedia system to select audio files.

Charging using the USB port

Once your portable digital audio player's USB connector is plugged into the system's USB socket, you can charge or maintain the battery during use.

MULTIMEDIA EQUIPMENT

Note: some devices do not recharge or maintain battery charge level when they are connected to the USB port on the multimedia system.

 The use of USB cables recommended by the phone manufacturer are advisable for correct functioning of the application.

4

Connection: Bluetooth®

➔ 163.

Once the Bluetooth® is connected, the "BT" menu is displayed.

Use

Select "BT" from the drop-down list **1**, then press on the playback list or the desired audio track on the multimedia system screen.

All the audio tracks on your Bluetooth® device can be selected directly from the multimedia system screen.

Note: once connected, you can no longer directly control your portable digital audio player. You must use the keys on the system's front panel.



Selecting a track

To select an audio track within a folder, press "List", then select a track **A** from this list.

To go back to the previous level in the folder hierarchy, press **5**.

By default, albums are listed in alphabetical order.

Depending on the type of digital portable audio player, you can refine your selection by using folders or files.

Note: it is best to use a USB connection for easier music searches.

Audio setting

Volume adjustment according to speed ("Volume/Speed")


When your vehicle speed exceeds approximately 25 mph (40 km/h), the volume level increases in relation to the original volume level.

Adjust the volume/speed ratio by pressing "+" or "-" in area **1**.

You can deactivate this function by pressing "-" until "OFF" appears.

"Loudness"

Press "ON" or "OFF" to activate/deactivate the loudness function, which increases the bass and treble.

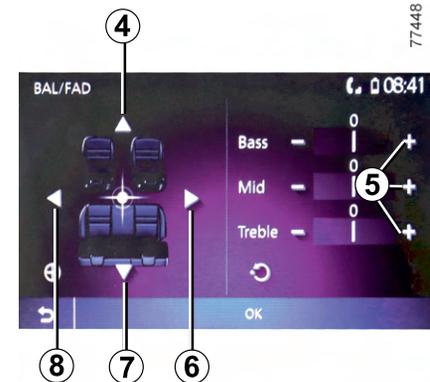

MULTIMEDIA EQUIPMENT

Right/left and front/rear balance

Press **6** or **8** to adjust the sound the left/right balance.

Press **4** or **7** to adjust the sound the front/rear balance.


After setting balance, press "OK" to confirm.

Bass, Mid, Treble

Press areas **5** "+" or "-" to adjust the bass, medium and treble.

Once the adjustments have been made, press "OK" to confirm.

Audio preferences

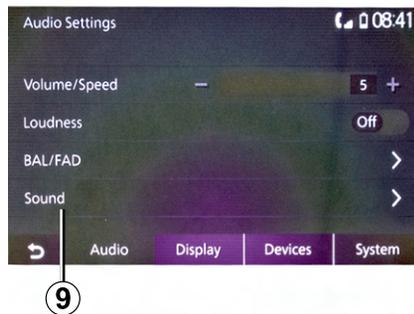


Display the audio preferences menu by pressing **9**.

You can adjust the volume of each sound independently:

- « Audio » ;
- "TA";
- "Nav";
- « Phone » ;
- "Ringtone" (phone);
- « VR ».

To do this, press "+" or "-".

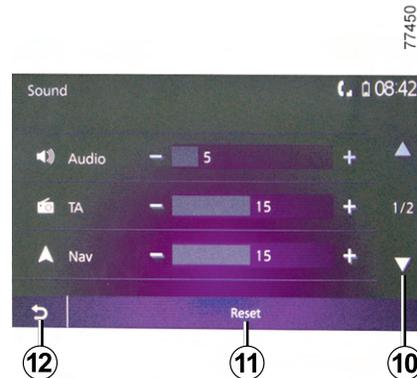

Press **10** to move to the next page.

Press **11** to reset all the audio preferences.

Press **12** to go back to previous screen.

Pair and connect a phone

Pairing, unpairing devices Bluetooth®

Pairing another phone Bluetooth®

To use your hands-free phone system, you must pair your Bluetooth® mobile to your vehicle before using it for the first time.

Pairing will enable the system to recognise and store a Bluetooth® phone. You can pair up to five smartphones, but only one can be connected to the hands-free system at a time.

Pairing is carried out directly via the multimedia system or via your phone.


Ensure that the system and your smartphone are switched on and that Bluetooth® on your smartphone is activated, visible and identifiable by other devices (refer to the instructions for your phone for further information).



Depending on the brand and model of your phone, the hands-free functions may be partially or fully incompatible with your vehicle system.


MULTIMEDIA EQUIPMENT

4

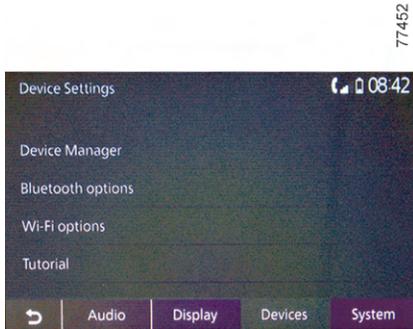

Pairing a telephone Bluetooth® from the multimedia system

- Activate your phone's Bluetooth® connection;
- from the home screen, press "Settings" "Devices" "Device Manager" "Add" **1**, "OK" "Find a device";
- make sure your phone is activated and visible on the Bluetooth® link;

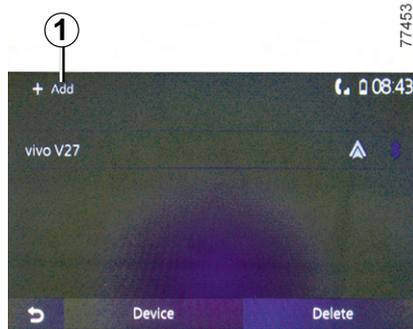

- select your phone from the list of devices found by the system;
- A message is displayed on your phone screen.




For safety reasons, carry out these operations when the vehicle is stationary.

- Depending on the telephone, you may either press "Twin", "Pair" or "Connect" to authorise the pairing.
- Depending on your telephone, enter the code displayed on the multimedia system screen on your telephone keypad;

- A second message appears on your phone screen offering to automatically pair to the multimedia system for future uses. Accept this authorisation to avoid the need to redo all these steps.

Transferring the phonebook

Depending on the type of phone, the system may prompt you to confirm the transfer of the phonebook and call log to the multimedia system during pairing.

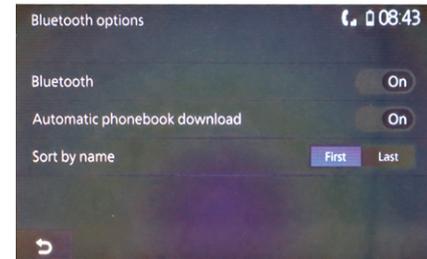

You can also authorise automatic sharing of the phonebook and the call log:

- from the home screen, press "Settings", "Devices", "Options Bluetooth";
- choose between ON and OFF for the "Automatic phonebook download".

MULTIMEDIA EQUIPMENT

If you selected ON the system will automatically transfer your phonebook during your next pairings.

Note: your multimedia system memory is restricted and it is possible that all your contacts may not be imported.

Your smartphone is now paired to your multimedia system.

Note: the pairing time varies based on the make and model of your telephone.

If pairing fails, redo the operation. If your phone is not visible by the system while searching for Bluetooth® devices then please consult your telephone manual.

Pairing a telephone Bluetooth® to the multimedia system from the phone

- Activate the Bluetooth® connection of your phone and the system;
- from the home screen of your multimedia system, press "Settings", "Devices", "Device manager", "Add" **1** "OK". You thereby make the system visible for the other Bluetooth® phones;
- a message appears on the screen displaying a password and the time left during which the system remains visible;
- from your telephone, display a list of available Bluetooth® devices;

– select the multimedia system from the available devices in the time given and use your telephone keypad to enter the password displayed on the system screen (depending on the telephone).

A message appears on your telephone screen to notify you that it is now paired with the multimedia system.

Note: the pairing time varies based on the make and model of your telephone.


If pairing fails, redo the operation.



Your hands-free system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.



When switching on the multimedia system, the last paired device will be automatically connected to the system.

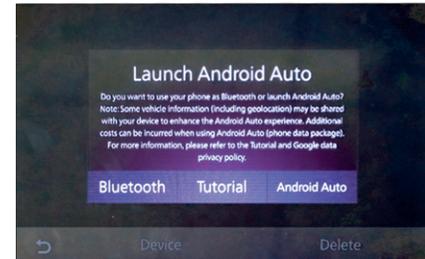

4

Pairing via WIFI (Android Auto™ / CarPlay™)

To access pairing via WIFI, during the first Bluetooth® connection with your telephone you will be given the option to use your telephone as a Bluetooth® device or to connect via WIFI (Android Auto™, CarPlay™) in order to use replicas of the apps on your smartphone. Tutorials are available to guide you when pairing via WIFI. For more information, see ➔ 172.

Unpair a Bluetooth® telephone from the multimedia system

Unpairing erases a phone from the hands-free system memory.

77456


MULTIMEDIA EQUIPMENT

From the home screen, press "Settings", "Devices" and then press "Device Manager". Press the "Delete" tab **4**, then the "Recycle bin" icon **3** opposite the name of the smartphone you wish to delete from the list. Confirm your choice by pressing "OK".

4


Unpair all Bluetooth® telephones from the multimedia system

You can also delete all phones previously paired from the hands-free system memory. From the main menu, press "Settings", "Devices", "Device Manager", then press the "Delete" tab and press "All", **2**. Confirm the deletion of all paired telephones by pressing "OK".

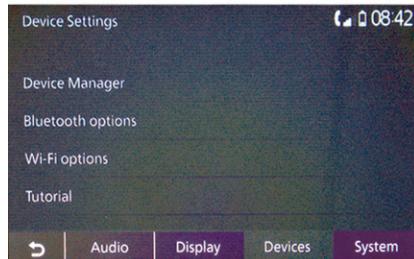

"Wi-Fi Options"

To activate or deactivate WIFI, select the country frequency or reset your password WIFI.

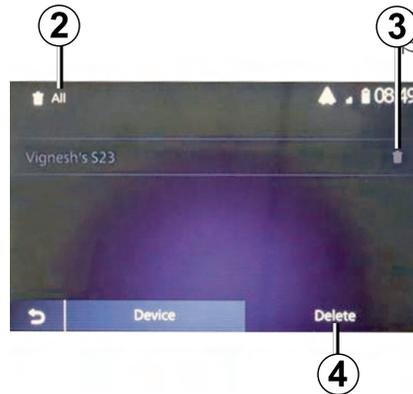

"Tutorial"

Access smartphone integration tutorials for Android Auto™ or CarPlay™ as well as voice guidance for the voice recognition feature.

Connecting, disconnecting devices Bluetooth®

Connecting a Bluetooth® paired phone

A phone must be paired before it can be connected to the hands-free phone system → **163**.

Your phone must be connected to the hands-free phone system in order to use all its functions.

Automatic connection

Once the system is switched on, the hands-free phone system will search for any paired phones present in the vicinity (the search may take a minute). It automatically connects to the last connected phone if:

- the Bluetooth® connection of the telephone has been activated;
- at the time of pairing, you previously authorised automatic connection for your telephone to the system.

Note:

- If a call is in progress at the time the connection is made, the sound is automatically transferred to the vehicle speakers;
- it is recommended to accept and authorise all messages which appear on your telephone while pairing with the system so that the automatic device recognition function operates smoothly.

Manual connection

From the main menu, carry out the following operations:

- press "Phone";
- press "Display Bluetooth devices";
- select the name of the telephone to which you wish to connect.

MULTIMEDIA EQUIPMENT

Your telephone is connected to the multimedia system.

Connection failure

If connection fails, check that:

- your device is switched on;
- the device is configured to accept the system's automatic connection request;
- your device battery is not flat;
- your device has been paired to the hands-free system;
- the Bluetooth® for your device and the system are activated.

Note: Using your hands-free system for prolonged periods of time will discharge your device's battery more quickly.


Changing a connected telephone

You can connect or disconnect a Bluetooth® device at any time.

From the main menu, press "Smartphone Integration", then select the device to connect and confirm by pressing "OK".

The Bluetooth® **1** icon appears in white opposite the name of your telephone to indicate that the connection has been established.

Disconnecting a connected telephone

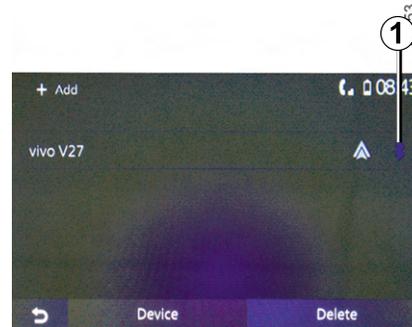


To disconnect a telephone from your multimedia system, select the Bluetooth® **1** icon, then "OK".

If a call is in progress when the phone is disconnected, the call will automatically switch to your phone.

Call management

Phonebook

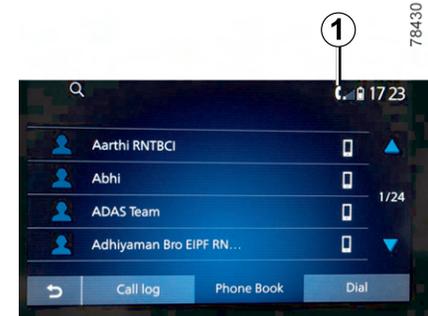

From the main menu, press "Telephone" then "Contacts list" to access the system's phonebook.

Using your Phone Book

You can use the Phone Book entries stored on the memory of phone.

After connecting your system and your Bluetooth® phone using Bluetooth® wireless technology, your phonebook numbers are automatically transferred into the system if the contacts are stored in the telephone memory of your device.

MULTIMEDIA EQUIPMENT

Note: on some phones, the system may ask you to confirm the transfer of the phonebook to the system during pairing.

Calling a number in the Phone Book

After finding the contact in the phonebook you want to call, select the number to place the call.

Searching for a contact in the phonebook

Press **1** then enter the surname or first name of the contact you are seeking, using the digital keypad.




Depending on the make and model of your phone, transferring your contacts to the multimedia system may not work.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

Making, receiving a call

Making a call from the phonebook

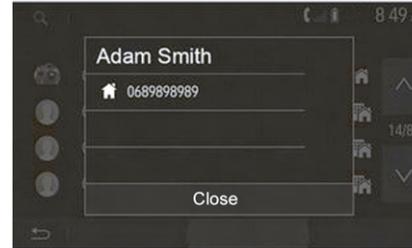

With the telephone connected, from the "Phone" menu, select "Contacts" from drop-down menu **1**.

Select the contact (or the suitable number of the contact has more than one). The call is made automatically by pressing the contact's number.

Note: you can make a call from the multimedia system using the voice recognition from your smartphone → **170**.

Dialling a number from the call history



You can use the call list stored on the phone memory to make a call.

After connecting your unit and Bluetooth® phone via Bluetooth® wireless technology, the numbers in your phone's "All Calls", "Outgoing Calls", "Incoming Calls", and "Missed Calls" lists are transferred automatically into the call list on your multimedia system.

From the "List of calls" tab **5** press **1** to filter the call log by call type and a drop-down list will appear:


- press the **2** icon to access the list of missed calls;
- press the **3** icon to access the list of outgoing calls;

MULTIMEDIA EQUIPMENT

- press the **4** icon to access the list of incoming calls;
- press the **1** icon to return to the list of all calls.

For each list, the contacts are listed from the most recent to the oldest. Select a contact to make the call.

Dial number

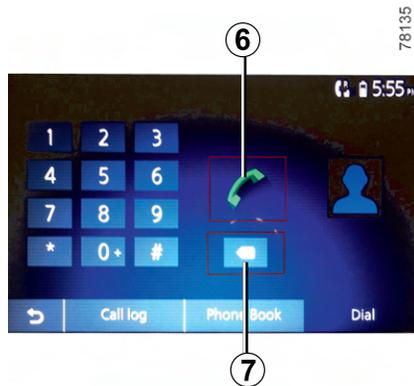


From the welcome screen, press "Phone" then "Dial".

Press the numbered buttons to dial the number, then press **6** to place the call.

To delete a number, press **8**. Press and hold **7** to delete all the numbers at once.



Receiving a call

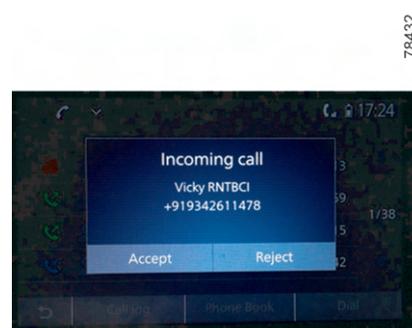


When receiving a call, a message is displayed on the multimedia system screen with the following information on the caller:

- the name of the contact (if the number is present in the phonebook list);
- caller's number;
- "Private number" (if the number cannot be shown).

Note: when the incoming call message appears on the screen during navigation, accept or reject the call to return to the navigation screen.

Note: you can answer or reject an incoming call by pressing the button on your vehicle's steering column.

During a call

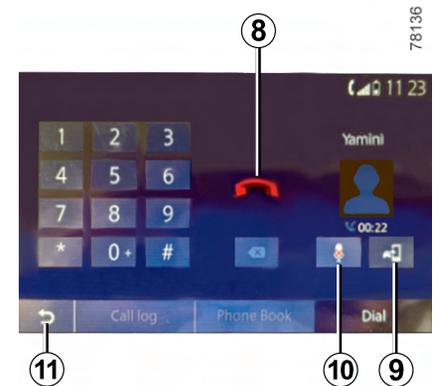

During a call you can:

- hang up by pressing **8**;
- toggle between the telephone loud speakers or the vehicle loud speakers by pressing **9**;
- deactivate or activate the microphone by pressing **10**;

MULTIMEDIA EQUIPMENT

– press **11** to return to the previous screen (the navigation screen, for example) or the welcome screen.

Using voice recognition

Introduction

Your vehicle's multimedia system uses your telephone's voice recognition system to:

- control some of the vehicle multimedia system functions and some of your telephone functions by voice;
- enable you to use your multimedia system or your phone while keeping your hands on the steering wheel.

Note:


- the position of the voice recognition button may vary (steering wheel control, steering column control or multimedia system front panel);
- When using voice recognition, the language set on your telephone will be the language used by your system;
- if your smartphone is not equipped with voice recognition, a message will be displayed on the multimedia system.

Activating the phone's voice recognition with the multimedia system

To activate your phone's voice recognition system you should:

- get a 3G, 4G or WIFI connection with your smartphone;
- activate Bluetooth® on your smartphone and make it visible to other devices (please refer to your telephone manual for instructions);
- pair and connect your smartphone to the multimedia system ➔ **163**.


Note: marks **1** and **2** in the "Settings", menu "Devices" then "Device manager" indicates that your smartphone is paired and connected to your multimedia system. This is necessary in order to use voice recognition.

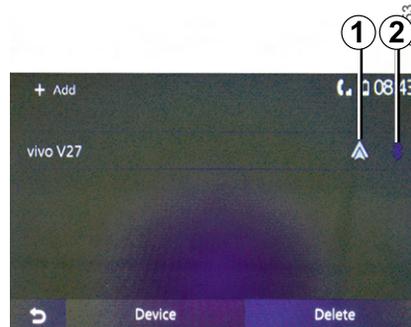

Press and hold the voice recognition button  in order to activate.

 When using your phone's voice recognition with the multimedia system, the transfer of cellular data required for its operation may generate additional costs not included in your phone service contract.

A

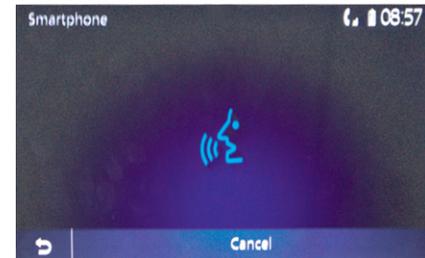

77483

Depending on the vehicle, a beep sounds and the display on screen **A** indicates that voice recognition is activated.


Speak loudly and clearly.

Note: your smartphone's voice recognition system only enables you to use certain functions of your telephone. It

MULTIMEDIA EQUIPMENT

does not enable you to interact with the other functions of your multimedia system such as the radio, the Driving Eco, etc.

Use

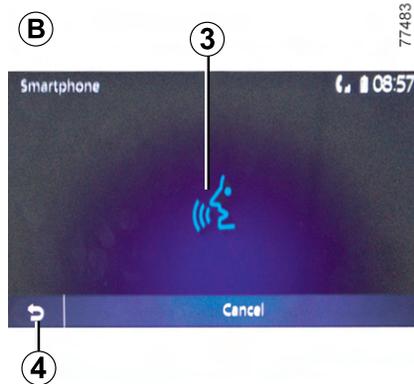

Once activated, to restart the voice recognition system, tap on the steering wheel control, on the steering column control or on your multimedia system, or on the button **3** on your multimedia system screen.


You can return to the welcome screen at any time by pressing **4**.



To return to screen **B** press **5** in the main menu of your multimedia system.

Note: when using voice recognition, the "Media" and "Radio" functions will not be available or accessible from the main menu of your multimedia system.

Deactivation

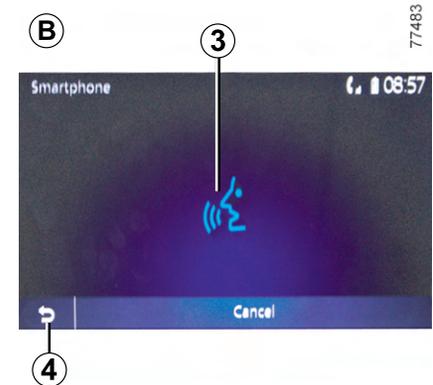

4


Press button **3** on the **B** screen or press and hold the voice recognition

button  in your vehicle. An audible signal indicates that voice recognition is deactivated.

MULTIMEDIA EQUIPMENT


Help

4

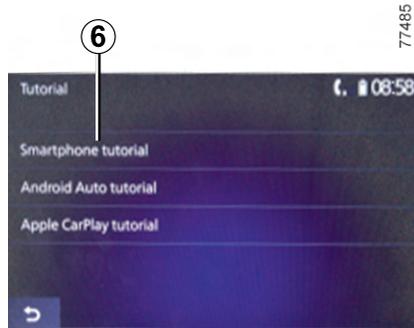

You can get additional help on the operation and usage conditions of the voice recognition system.

To do this, from the home screen tap on "Settings", "Devices", "Tutorial", "Voice guidance" **6**.

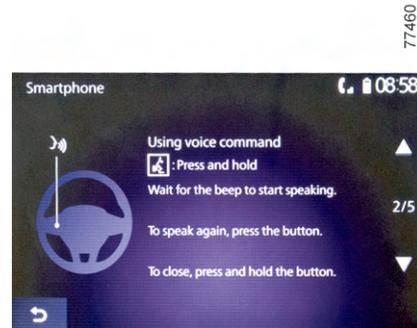

This function is presented in the form of screens explaining how to use voice recognition, alongside the:

- conditions of use;
- compatible telephones;
- the activation and deactivation of the function using the voice recognition

button  in your vehicle;

- method for interacting with the screen;
- available functions;
- extent of the functions.

Android Auto™, CarPlay™

Android Auto™

Introduction

"Android Auto™" is an application that can be downloaded (from the application download platform on your smartphone) enabling you to use some of your phone applications and functions on your multimedia system screen.

Note:


- to determine if your smartphone is compatible with the "Android Auto™" application, please consult the official website of your telephone's operating system;
- the "Android Auto™" application functions when your smartphone is connected to your vehicle's USB port or via WIFI (availability depends on whether your vehicle and smartphone are equipped). The voice recognition service must be activated. The "Android Auto™" application must be visible on the welcome screen **1**.



The use of USB cables recommended by the phone manufacturer are advisable for correct functioning of the application.

MULTIMEDIA EQUIPMENT

77443

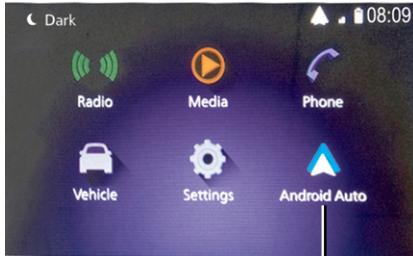


1

First use

You can connect your telephone to the USB port on your multimedia system or connect to the multimedia system via the WIFI connection on your smartphone (depending on the equipment):

- accept the requests on your smartphone in order to use the "Android Auto™" application;
- Confirm by pressing "Accept" on your phone.

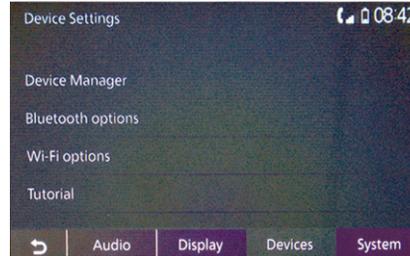

77452

The "Android Auto™" application is launched on the multimedia system.

If the procedure described above fails, repeat the operation. From the welcome screen, select "Settings", "Devices", "Device manager", you can manage the devices connected to your multimedia system at any time.

Note: the first connection with "Android Auto™" is made when the vehicle is stopped for the sole purpose of activating the multimedia system voice recognition.

CarPlay™

Introduction

"CarPlay™" is a native service available on your smartphone which en-

ables you to use some applications on your phone from your multimedia system screen.

Note:

- if your smartphone is not equipped with the "CarPlay™" service, please consult the official website of your telephone's operating system;
- the "CarPlay™" service functions when your smartphone is connected to your vehicle's USB port or via WIFI (availability depends on whether your vehicle and smartphone are equipped). The SIRI service must be activated. The "CarPlay™" service should be visible from the button 2 on the welcome screen.



The use of USB cables recommended by the phone manufacturer are advisable for correct functioning of the application.

4

MULTIMEDIA EQUIPMENT

4




First use

You can connect your telephone to the USB port on your multimedia system or connect to the multimedia system via the WIFI connection on your smartphone (depending on the equipment).

The CarPlay™ service is launched on the multimedia system.

If the procedure described above fails, repeat the operation.

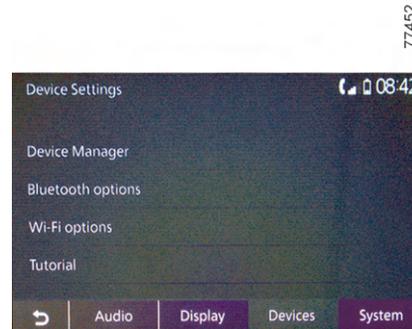

From the welcome screen, select "Settings", "Devices", "Tutorial", you can access a tutorial on connecting your smartphone to your multimedia system.



Once the "Android Auto™" application or the "CarPlay™" service is activated, you can use the voice recognition button in your vehicle to activate some of your smartphone functions by voice. To do this, press button **3** on the steering wheel of your vehicle ➔ 170.

Note:

– you may use "Android Auto™" or "CarPlay™" to access your smartphone's navigation and music applications. These applications will replace similar applications integrated into your multimedia system which are already running. For example, only one navigation application, "Android Auto™"/"CarPlay™", or the application

MULTIMEDIA EQUIPMENT


integrated into your multimedia system can be used;

– when you are using "Android Auto™" or "CarPlay™", some multimedia system functions will continue to run in the background. For example, if you start "Android Auto™" or "CarPlay™" and use the navigation on your smartphone while the radio on the multimedia system is currently playing, the radio will continue to be broadcast.



When you use the "Android Auto™" application or the "CarPlay™" service, the transfer of mobile data required for it to operate may lead to additional costs not included in your phone subscription.

Return to the interface of your multimedia system

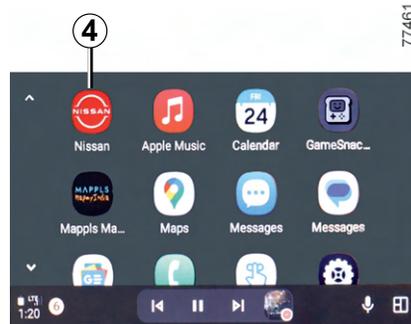


To return to the interface:

– press the "Home" button on the front panel of your multimedia system or on the central control;

or

– press button **4** on the multimedia system screen according to "Android Auto™" or "CarPlay™".

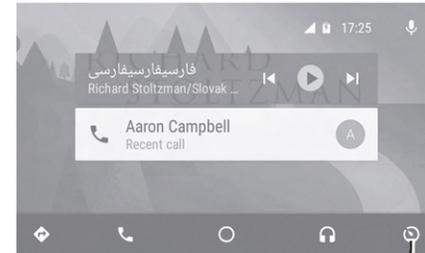

The availability of the functions of the "Android Auto™" app and the "CarPlay™" service depends on your telephone brand and model. For further information, please refer to the manufacturer's website if there is one.


4

MULTIMEDIA EQUIPMENT

Smartphone replication

Methods

4

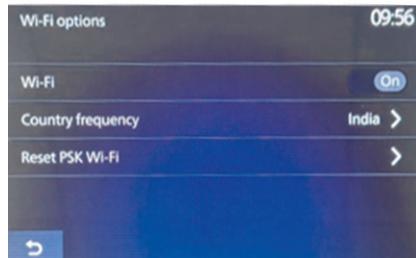

There are two ways to access the smartphone interface:

- connect to the smartphone by plugging into the multimedia port USB



- wireless smartphone connection (availability depends on the vehicle and/or finish level).

A settings menu is available for the wireless connection.

Note: for the correct operation of the application, the USB cable used must be:

- referenced by the telephone manufacturer;
- maximum length of 1.5 m.

"Wi-Fi Options"

To access the "Wi-Fi Options" menu, from the main menu press "Settings" then the "Devices" tab.

"Wi-Fi"

Select "ON" or "OFF" to activate or deactivate your vehicle's WIFI connection.

"Country frequency"

From this menu you can select the country in which you are using your vehicle's WIFI connection in order to adapt the connection frequency to the regulation in place in that country.

"Reset Wi-Fi PSK"

Use this option to reinitialise all previous connections to your vehicle, in order to connect a new device or to fix a connectivity problem.

Connect the smartphone using a USB connection

A



First use

After connecting your smartphone to your vehicle's USB port, the **A** screen should appear:

- "Media": enables you to use your smartphone for the following portable digital audio player functions:
 - MTP (Media Transfer Protocole) ;
 - portable digital audio player.
- "Tutorial": access tutorials on how to use smartphone interface applications;
- "Smartphone integration": enables you to access the smartphone interface via the adapted application:
 - Android Auto™ ;


MULTIMEDIA EQUIPMENT

- CarPlay™.

Select the "Android Auto™, CarPlay™" option **1** to access the smartphone interface.

The smartphone interface application screen should appear on your multimedia system.

Connect the smartphone using a wireless connection

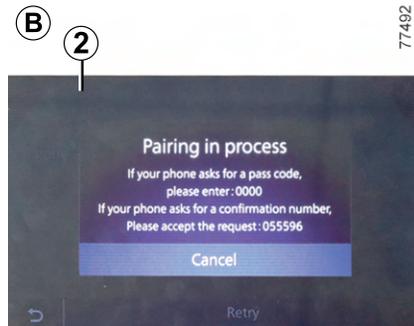


Availability depends on the vehicle and/or finish level.

First use

For this type of connection, you will need to carry out operations to pair your Bluetooth® telephone to the multimedia system:

- activate the Bluetooth® connection and the WIFI connection on your telephone and on your multimedia system;
- from the main menu of your multimedia system, press "Settings", "Devices", "Device Manager", "Add" **2**, "OK". You thereby make the system visible for the other Bluetooth® phones;
- the **B** screen appears displaying a password and the time left during which the system remains visible;
- from your telephone, display a list of available Bluetooth® devices;
- select the multimedia system from the available devices in the time given and use your telephone keypad to enter the password displayed on the system screen (depending on the telephone).

A message appears on your telephone screen to notify you that it is now paired with the multimedia system.

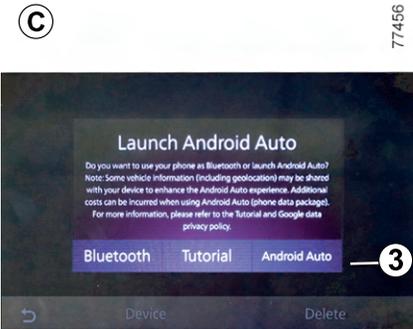

4

Once your smartphone is paired, the **C** screen should appear.

Select "Android Auto™, CarPlay™" **3** to access the smartphone interface.

The smartphone interface application screen should appear on your multimedia system.

Note: operation of the Android Auto™/CarPlay™ wireless (WIFI) interface depends on the technical specifications of your smartphone and current local legislation.

System settings

Audio settings

→ 177.

MULTIMEDIA EQUIPMENT

Display settings

« Brightness »

You can set the brightness of the screen to your liking. You have the option of three modes:

- « Low » ;
- « Middle » ;
- « High ».

"Day/Night Mode"

To improve the visibility of the navigation screen between day and night, you can change the combination of the colours of the map.

- "Auto": the map screen is displayed by GPS. The switch to daytime or night-time running lights is automatic, depending on whether the headlights are on.
- "Day": the map screen is always displayed with bright colours.
- "Night": the map screen is always displayed using darker colours.


"CLIM. Info"

This function activates/deactivates the display of air conditioning information when adjusting settings.

Devices

➔ 163.

System setting

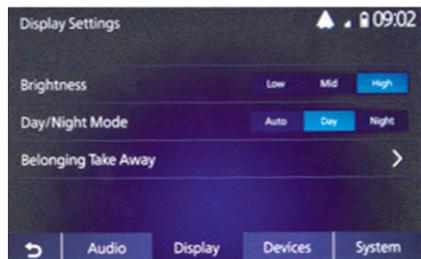

« Language »

This function allows you to change the language used in the system and voice guidance language.

To change the language, select the desired language and confirm your choice by pressing "OK".

"Clock "

Use this function to set the time display ("12" or "24" hour clock).

To change the time manually, press "Clock/Units" and then select "Setting the time".

« Units »

This function allows you to set the unit of distance displayed on your multimedia

system. You can change the unit between the "km" and "mils".

Note: the settings for your multimedia system do not affect your vehicle's instrument panel display. For further information on the instrument panel display settings.

"Factory Settings"

This function allows you to reset various settings to the default settings.

- All: resets all the settings to their "Default settings".
- Phone: resets all the settings related to the phone.
- Audio/Media/Radio/System: resets all the settings related to Audio/Media/Radio.

"System version"

This function allows you to check the version of system.

« Belonging take away »

When you leave your vehicle, this function emits a sound signal and a message to warn you not to leave your objects (bag, coat, etc.) in the passenger compartment.

You can activate/deactivate this function by selecting "ON" or "OFF".

PASSENGER COMPARTMENT EQUIPMENT

Windows

Electric window



Press/pull the switch to raise/lower the windows to the desired height (the rear windows do not open fully).

From the driver's seat, use

- 1** for driver side;
- 2** and **4** for rear passenger side;
- 3** for driver to prevent operation of rear electric windows. A confirmation message will display in the cluster;
- 5** for front passenger side.

From the rear seats



Depending on the variants, use **6** to raise/ lower the rear passenger windows to the desired height.

Manual window winders



Depending on the variants, turn handle **7** to lower or raise the window to the desired height.

One-touch mode

Depending on the vehicle, this mode works in addition to the operation of the electric windows described previously. It is only fitted to the driver's window. Briefly press or pull switch 1 fully : the window is fully lowered or raised. Pressing the switch again stops the window moving.

Note : If the driver's window detects resistance when closing (e.g. tree branch, etc.), it stops and then lowers again by a few centimetres.

PASSENGER COMPARTMENT EQUIPMENT



When closing the windows, ensure that no part of the body (arm, hand, etc.) is protruding from the vehicle.

Risk of serious injury.



Avoid resting any objects against a half-open window: there is a risk that the electric window could be damaged.

4



Driver's responsibility

Never leave your vehicle with the key or remote control in it, leaving a child, adult who is not self-sufficient or a pet inside, even for a short while.


They may pose a risk to themselves or to others by starting the engine or activating equipment (such as the gear lever or electric windows).

If any part of the body becomes trapped, reverse the direction of the window immediately by pressing the relevant switch.

Risk of serious injury.

Interior lighting

Front Courtesy light

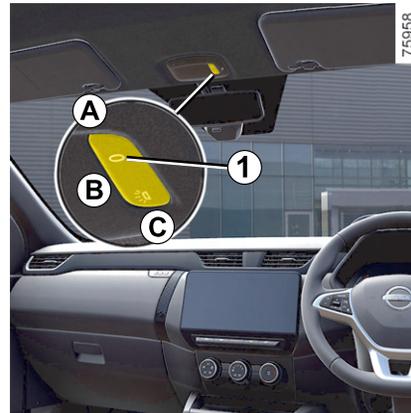


This feature depends on the vehicle version.

1. Press switch to position
 - **A** for switching **OFF** the light.
 - **B** for auto-ON lighting, which activates when a door is opened and

switches off when the doors have been closed correctly.

- **C** for switching **ON** the light.

Front Map reading light

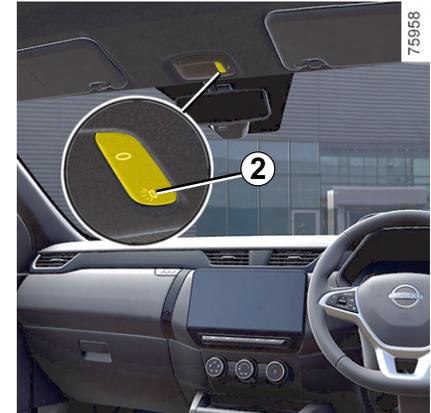


This feature depends on the vehicle version.

2. Pressing switch provides:

- Continuous lighting;
- no lighting.

PASSENGER COMPARTMENT EQUIPMENT

Rear Courtesy light

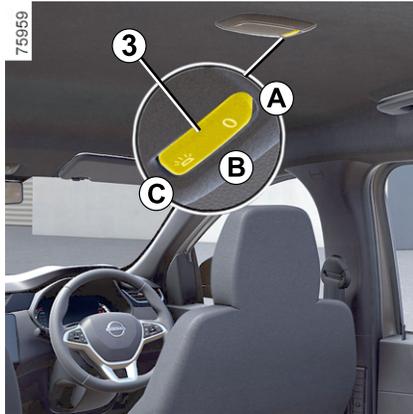


This feature depends on the vehicle version.

3. Press switch to position

- **A** for switching **OFF** the light.
- **B** for auto-ON lighting, which activates when a door is opened and switches off when the doors have been closed correctly.
- **C** for switching **ON** the light.

Sun visor, mirror, grab handle

Front sun visor

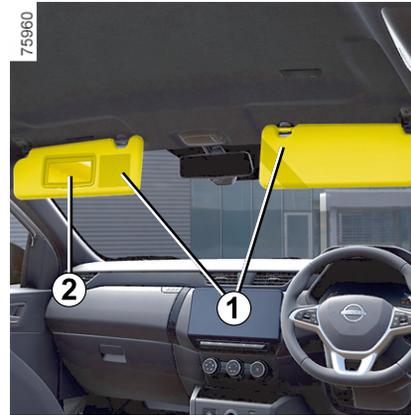

Lower the sun visor **1** over the windscreen or unclip it and turn it over the side window.

Courtesy mirrors

Depending on variants, it is fitted with courtesy mirrors **2**.

Front and rear grab handles **3**



This offers support and can be held when the vehicle is being driven. Do not use it for getting into or out of the vehicle.

PASSENGER COMPARTMENT EQUIPMENT

Accessories socket

Accessories socket 1, 2

4




It is provided for connecting accessories approved by our technical department.



 Connect accessories with a maximum power of 120 watts (12 V) only. When several accessory sockets are used at the same time, the total power of the connected accessories must not exceed 180 watts.
Fire hazard.

PASSENGER COMPARTMENT STORAGE, FITTINGS

Upper Glove Box

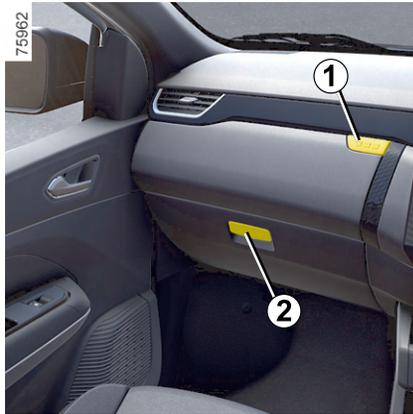

Depending on variant, Press **1** to open the upper glove box.

Lower Glove box

Pull handle **2** to open lower glove box.

Cooled Glovebox



Depending on the variant, opening/ closing the valve **3** along the arrow direction will enable/disable the cooling inside glove box.

Centre console Storage 4



4

Cup Holder 5



PASSENGER COMPARTMENT STORAGE, FITTINGS

4



Ensure that no hard, heavy or pointed objects are placed in the “open” storage compartments in such a way that they may fall onto passengers during sudden turning, braking or in the event of an accident.

Rear console cooled box 6



Depending on variant, vehicle is fitted with rear console cooled box. Gently pull the valve **A** and move along the arrow direction to enable the cooling inside the box.

Front door storage 7



They can hold 1 litre bottle.

Rear door storage 8



They can hold 1litre bottle.



Nothing should be placed on the floor area in front of the driver as such objects may slide under the pedal during braking manoeuvres, thus obstructing its use.

PASSENGER COMPARTMENT STORAGE, FITTINGS

Third row armrest storage 9



Depending on variants, front seat storage available behind the front seat backrest.

Front seat storage 10



TRANSPORTING OBJECTS

Roof bars

Longitudinal roof bars



If fitted on the vehicle, you can transport luggage or additional equipment (bike racks, ski racks, etc) :

- on a roof rack ;
- on transverse roof bars which must in turn be attached to roof bars fitted lengthways **1** ;
- directly onto the longitudinal roof bars.

It is forbidden to fit longitudinal roof bars on vehicles which are not originally equipped/ not recommended by manufacturer.

i For information on the range of equipment adapted to your vehicle, we advise you to consult an approved Dealer. Refer to the manufacturer's instructions for information on how to fit and operate the equipment. Please keep these instructions with the rest of the vehicle document.

Maximum permissible load on roof rack : refer to the information on "Weights" in Section 6.

ACCESSING THE ENGINE, LEVELS

Bonnet




To open the bonnet, pull the knob **1**.

Unlocking the bonnet latch


Gently lift the bonnet and push the tab **3** in the direction indicated by the arrow **A** to release the latch **2**.

Opening the bonnet




Raise the bonnet and disengage the stay rod **4** from its mounting **5**; for your safety you **must** position the stay rod in its placement **6**.

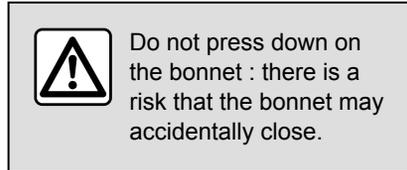

Closing the bonnet

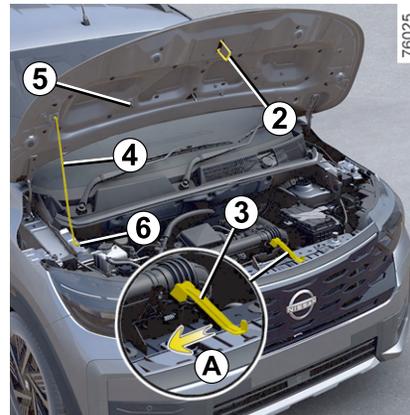

To close the bonnet, refit the stay rod **4** in its mounting **5**, hold the bonnet in the middle then lower the bonnet to 20 cm above the closed position before letting go. It will lock automatically under its own weight.

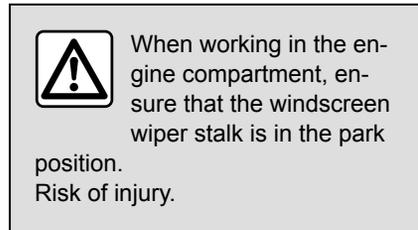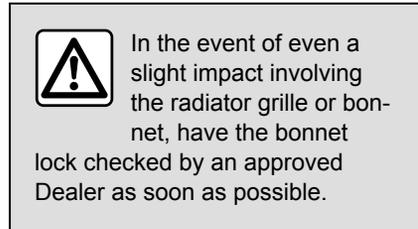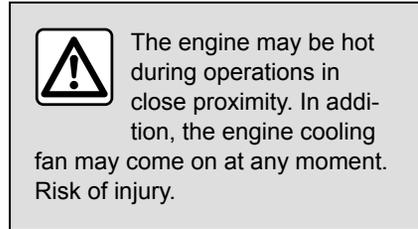

5

ACCESSING THE ENGINE, LEVELS



Ensure that the bonnet is properly locked.
Ensure that nothing is preventing locking (grit, cloths, etc.).



Make sure nothing is left in the engine compartment (cloth, tools, etc.).
These may damage the engine or cause a fire.

5

Engine oil

Topping up, filling

It is normal for an engine to use oil for lubrication and cooling of moving parts and it is normal to top up the level between oil changes.


However, contact your approved Dealer if more than 0.5 litres is being consumed every 1,000 kms after the running in period.

Oil change frequency : check the oil level from time to time and certainly before any long journey to avoid the risk of damaging your engine.



In order to prevent splash-back, it is recommended that a funnel be used when topping up/filling with oil.
Consult your approved dealer at once if you notice an abnormal or repeated drop in any of the fluid levels.

Reading the oil level

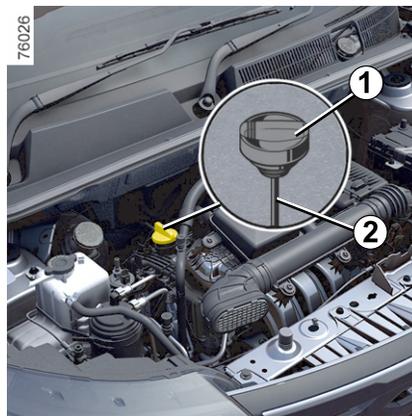

- Remove the dipstick **2** and wipe with a clean, lint-free cloth.
- Guide the dipstick in as far as it will go (for vehicles equipped with a cap-type dipstick, screw the cap **1** in as far as it will go).

- Take out the dipstick **2** again.
- Read the level : it should never fall below minimum mark or exceed maximum mark.

Once the operation has been completed, ensure that the dipstick is guided in as far as it will go or that the “cap-type dipstick” is completely screwed in.



Exceeding the maximum engine oil level


Under no circumstances must the maximum fill level be exceeded : risk of damage to the engine and catalytic converter.
If the oil level exceeds the maximum level, **do not start your vehicle** and contact an approved Dealer.



Before performing any action in the engine compartment, the ignition must be switched off by pressing the engine stop button → 108.

ACCESSING THE ENGINE, LEVELS

Topping up/Filling

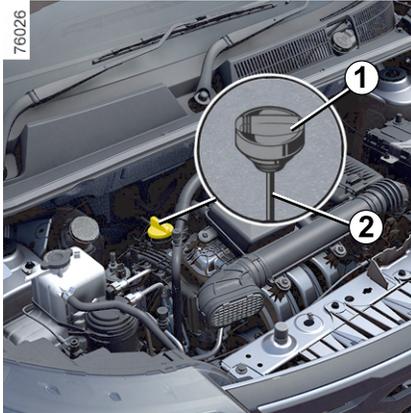

The vehicle must be parked on level ground and the engine should be cold (for instance, before the engine is started up for the first time in the day).

 Do not exceed the **max** level and do not forget to refit cap **1**.

- Unscrew cap **1**.
- top up the level (as a guide, the capacity between the minimum and maximum reading on the dipstick **2** is approximately 0.85 litres, (depending on the engine).

- wait for approximately 20 minutes to allow the oil to flow into the engine.
- check the level using the dipstick **2** (as described above).

Once the level has been read, ensure that the “cap-type dipstick” is completely screwed in.

 In order to prevent splash back, it is recommended that a funnel be used when topping up/filling with oil.

 Consult an approved dealer at once if you notice an abnormal or repeated drop in any of the fluid levels.

 Never run the engine in an enclosed space as exhaust gases are poisonous.



The engine may be hot during operations in close proximity. In addition, the engine cooling fan may come on at any moment. Risk of injury.



Engine oil change : if you are changing the oil when the engine is hot, be careful not to scald yourself if the oil overflows.

Oil change

Service interval : refer to the Maintenance Document for your vehicle.

Oil change capacity

Please refer to the maintenance document for your vehicle, or contact an authorised dealer.

Always check the engine oil level using the dipstick, as explained previously (it should never fall below the minimum).

Engine oil grade

Refer to the maintenance document for your vehicle.

ACCESSING THE ENGINE, LEVELS

5



Exceeding the maximum engine oil level

The oil level should only be read with the dipstick as explained above. If the oil level exceeds the maximum level, **do not start your vehicle** and contact an approved dealer.




Filling and/or Checking the oil level :

Take care when topping up or checking the oil level. Make sure that no oil drips onto engine components. Remember to refit the cap securely, and put the dipstick back in place to avoid oil splashes onto hot engine components.

Fire hazard.

Coolant level

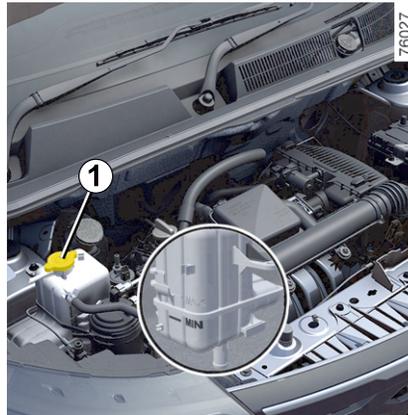

Check the level on flat ground, with the engine switched off. **When cold**, the level must be between the **MINI** and **MAXI** marks on the reservoir **1**.

Top this level up **when cold** before it reaches the **MINI** mark.



No operations should be carried out on the cooling circuit when the engine is hot.

Risk of burns.



When working in the engine compartment, ensure that the windscreen wiper stalk is in the park position.

Risk of injury.



Before carrying out any action in the engine compartment, you must switch off the ignition

→ 107.



For your safety, do not remove the bonnet holding straps.

Risk of the bonnet falling on the road surface.

ACCESSING THE ENGINE, LEVELS

Levels, filters

Brake fluid level



 The level should be read with the engine switched off and on level ground.

This should be checked frequently, and immediately if you notice even the slightest loss in braking efficiency.

 If there is an abnormal or repeated drop in the fluid level, please consult an authorised dealer.




When working under the bonnet, the bonnet may be hot. The engine cooling fan may also start at any moment.

Risk of injury.

Level 2

It is normal for the level to drop as the brake shoes become worn, but it must never drop lower than the “**MINI**” warning line shown on brake fluid reservoir.

Windscreen washer reservoir

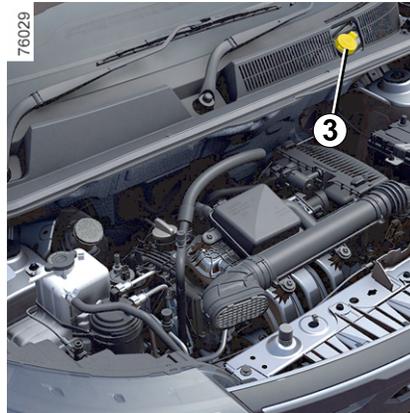

Topping up

Engine switched off:

- open the cap **3**;
- pull the extending funnel upwards as far as it will go;
- fill until you can see the fluid;
- push the funnel by pressing on it and replace the cap.

Liquid

Only use Windscreen washer fluid containing antifreeze. We advise you to consult an authorised dealer or a qualified professional.



Do not use hard water (risk of damage to the priming pump, limescale building up on the pump and the jets)

Jets : To adjust the height of the windscreen washer jets, please consult an authorised dealer.



For your safety, do not remove the bonnet holding straps.

Risk of the bonnet falling on the road surface.

BATTERY



5

The battery **1** does not require any maintenance. **You must not open it or perform any added liquid.**

The charge status of your battery can decrease especially if you use your vehicle :

- for short journeys.
- for driving in town.
- when the temperature drops.
- after extended use of consumers (radio etc.) with the engine switched off.



Handle the battery with care as it contains sulphuric acid, which must not come into contact with eyes or skin. If it does, wash the affected area with plenty of water and see a doctor if necessary.

Ensure that naked flames, red hot objects and sparks do not come into contact with the battery as there is a risk of explosion.




For your safety and the proper operation of the vehicle's electrical equipment (lights, windscreen wipers, braking assistance etc.), any work on the 12 V battery (removal, disconnection etc.) must be carried out by a specialist professional.

Risk of serious burns or electric shocks.

Respect categorically the replacement intervals (without exceeding them) as stated in the maintenance document.

The battery is a specific type. Please ensure it is replaced with the same type. Contact an Authorised Dealer.

BATTERY

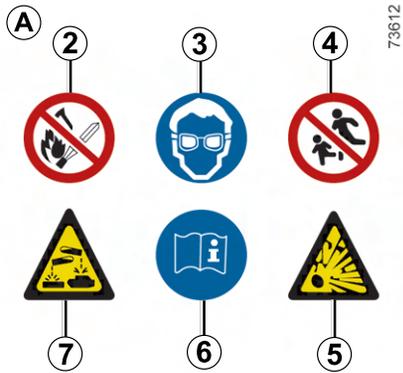

Label A

Observe the indications on the battery :

- **2** naked flames and smoking prohibited ;
- **3** eye protection required ;
- **4** keep away from children ;
- **5** explosive materials ;
- **6** please consult the vehicle user manual ;
- **7** corrosive materials.

Replacing the battery

As this operation is complex, we advise you to contact an approved Dealer.



The engine may be hot during operations in close proximity. In addition, the engine cooling fan may start at any moment. Risk of injury.



Before carrying out any action in the engine compartment, you must switch off the ignition.



For your safety, do not remove the bonnet holding straps.
Risk of the bonnet falling on the road surface.

CLEANING

Bodywork maintenance

A well-maintained vehicle will last longer. It is therefore recommended to maintain the exterior of the vehicle regularly.

Your vehicle has been treated with very effective anti-corrosion products. It is nevertheless subject to various outside influences.

5

Corrosive agents in the atmosphere

- atmospheric pollution (in built-up and industrial areas);
- saline atmospheres (near the sea, particularly in hot weather);
- seasonal and damp climatic conditions (e.g. road salt in winter, water from road cleaners, etc.).

Minor impacts

Abrasive action

Dust and sand in the air, mud, road grit thrown up by other vehicles, etc.

You should take a number of minor precautions in order to safeguard your vehicle against such risks.

You should do the following

Wash your car frequently, **with the engine off**, with cleaning products recommended by our Technical Department (never use abrasive products).

Rinse thoroughly beforehand using a jet washer:

- spots of tree resin and industrial pollution;
- mud in the wheel arches and underneath the body which forms damp patches;
- **bird droppings, which cause a chemical reaction with the paint that rapidly discolours paintwork and may even cause the paint to peel off;**

wash the vehicle **immediately** to remove these marks since it is impossible to remove them by polishing;

- salt, particularly in the wheel arches and underneath the body after driving in areas where the roads have been gritted.

Remove any plant matter (resin, leaves, etc.) from the vehicle regularly.

Respect local regulations about washing vehicles (e.g. do not wash your vehicle on a public highway).

Observe the vehicle stopping distances when driving on gravelled surfaces to prevent paint damage.

Repair, or have repaired quickly, areas where the paint has been damaged, to prevent corrosion spreading.

Remember to visit the body shop periodically in order to maintain your anti-

corrosion warranty. Refer to the Maintenance Document.

Observe local regulations about washing vehicles (e.g. do not wash your vehicle on a public highway).

When washing the vehicle with a high-pressure cleaning device, please take the following precautions:

- make sure that your vehicle's paintwork, the area or the component that you want to clean is compatible with this type of washing;
- the pressure delivered by the device must be less than 100 bar;
- when washing, position the spray nozzle at least 15 cm from the vehicle and check that the water flow rate is less than 15 l/min (3.30 gal);
- do not persist in washing the same area, impacted points or the seals (risk of damage to the paint, seals becoming detached, etc.).

If mechanical components, hinges, etc. have been cleaned, they must be protected again by spraying with products approved by our Technical Department.

CLEANING



We have selected special products to care for your vehicle and you can obtain these from the manufacturer's accessory outlets.

Do not do the following

Wash the vehicle in bright sunlight or freezing temperatures.

Do not scrape off mud or dirt without pre-wetting.

Allow dirt to accumulate on the exterior.

Allow rust to form following minor impacts.

Do not use solvents not approved by our Technical Department to remove stains as this could damage the paintwork.

Do not drive in snow or muddy conditions without washing the vehicle, particularly under the wheel arches and body.



Degrease or clean using high-pressure cleaning equipment or by spraying on products not approved by our Technical Department :

- mechanical components (e.g. : engine compartment);
- underbody;
- parts with hinges (e.g. : inside the doors);
- painted plastic external fittings (e.g. : bumpers).

Doing this could give rise to corrosion or operational faults.

Vehicles with a matte paint finish

This type of paint requires certain precautions.

You should do the following

Wash the vehicle by hand using plenty of water, using a soft cloth or a gentle sponge.

Do not do the following

Use wax-based products (polishing). Rub too hard.

Wash the vehicle in a roller-type car wash. Attach stickers to the paintwork (risk of leaving marks).



Wash the vehicle using a high-pressure cleaning device.

Using a roller type car wash

Return the wiper stalk to the park position. Check the mounting of extern-

al accessories, additional lights and rear view mirrors, and ensure that the wiper blades are secured with adhesive tape.

Remove the radio aerial mast if your vehicle is fitted with this equipment.

Remember to remove the tape and refit the antenna after washing.

Cleaning the headlights, sensors and cameras

Use a soft cloth or cotton wool. If this does not clean them properly, moisten the cloth with soapy water, then wipe clean with a soft damp cloth or cotton wool.

Finally, carefully dry off with a soft dry cloth.

Do not use cleaning products containing alcohol or utensils (e.g. : a scraper).

Interior trim maintenance

A well-maintained vehicle will last longer. It is therefore recommended to maintain the interior of the vehicle regularly.

A stain should always be dealt with swiftly.

Whatever type of stain is on the trim, use **cold (or warm) soapy water with natural soap**.

CLEANING

Detergents (washing-up liquid, powdered products, alcohol-based products) should not be used.

Use a soft cloth.

Rinse and soak up the excess.

instrument panel

(e.g. instrument panel, clock, radio display, etc.)

Use a soft cloth (or cotton wool).

5

Caution :

No liquid cleaning agents and water should be used to clean the Instrument panel.

It is recommended to use only soft and dry cloth to clean the instrument panel as there is no glass screen on the same.

Cleaning products containing alcohol must not be used under any circumstances.

Seat belts

These must be kept clean.

Use products selected by our Technical Department (Approved outlets) or warm, soapy water and a sponge and wipe with a dry cloth.

Detergents or dyes must not be used under any circumstances.

Textiles (seats, door trim, etc)

Vacuum-clean the textiles **regularly**.

Liquid stain

Use soapy water.

Dab lightly (never rub) with a soft cloth, rinse and remove the excess.

Solid or semi-solid stain

Carefully remove the excess solid or pasty material **immediately** with a spatula (working from the edges to the centre to avoid spreading the stain).

Clean in a similar way as a liquid stain.

Special instructions for sweets or chewing gum

Put an ice cube on the stain to solidify it, then proceed as for a solid stain.



For further recommendations for maintaining the interior, and/or for any unsatisfactory results, please see an authorised dealer.

Removal/replacing removable equipment originally fitted in the vehicle

If you need to remove equipment in order to clean the passenger compartment (for example, mats), always en-

sure that they are correctly refitted and they are at correct position. (The driver's mat should be fitted on the driver's side, etc.) and fit them with the components supplied with the equipment (for example, the driver mat should always be fixed using the pre-fitted mounting components).

With the vehicle stationary, ensure that nothing will impede driving (anything obstructing the pedals, heel wedged by the mat, etc.).

You should not :

You are strongly advised not to position objects such as deodorants, scents, etc. near air vents, as this could damage your dashboard trim.



You are strongly recommended not to use high-pressure or spray cleaning equipment inside the passenger compartment : use of such equipment could impair the correct functioning of the electrical or electronic components in the vehicle, or have other detrimental effects.

CLEANING



Use high-pressure cleaning equipment or sprays inside the passenger compartment :

Without careful use, this equipment could impair the correct functioning of the electrical or electronic components in the vehicle, or have other detrimental effects.

TYRES

Tyre and wheel safety

The tyres are the only contact between the vehicle and the road, so it is essential to keep them in good condition.

You must make sure that your tyres conform to local road traffic regulations.



For your safety, please respect the speed limit. When they need to be replaced, only tyres of

the same make, size, type and profile should be used on a single axle.

They must : either have a load capacity and a speed capacity at least equal to the original tyres, or correspond to those recommended by your authorised dealer.

Failure to heed these instructions could endanger your safety and affect your vehicle's roadworthiness.

Risk of loss of control of the vehicle.

Maintaining the tyres



The tyres must be in good condition and the tread form must have sufficient depth ; tyres approved by our Technical Department have tread wear indicators **1** which are **indicators moulded into the tread at several points.**

When the tread has worn down to the wear warning strips, **these strips will become visible 2 : it is then necessary to replace your tyres because the tread rubber is now only 1.6 mm deep at most, resulting in poor road holding on wet roads.**

An overloaded vehicle, long journeys by motorway, particularly in very hot weather, or continual driving on poorly

surfaced minor roads will lead to more rapid tyre wear and affect safety.



Incidents which occur when driving, such as striking the kerb, may damage the tyres and wheel rims, and could also lead to misalignment of the front or rear axle geometry. In this case, have the condition of these checked by an approved dealer.

Tyre pressures

Adhere to the tyre pressures (including the emergency spare wheel). The tyre pressures should be checked at least once a month and additionally before any long journey (refer to the label affixed to the edge of the driver's door).

TYRES



Incorrect tyre pressures lead to abnormal tyre wear and unusually hot running. These are factors which may seriously affect safety and lead to :

- poor road holding.
- risk of bursting or tread separation.

The pressure depends on the load and the speed of use. Adjust the pressure according to the conditions of use (refer to the label affixed to the edge of the driver's door).

The pressures should be checked cold : ignore higher pressures which may be reached in hot weather or following a high speed journey.

If the tyre pressures cannot be checked when the tyres are **cold, increase the pressures from 0.2 to 0.3 bar (or 3 PSI)**.

Never deflate a hot tyre.

Special note

Depending on the vehicle, there may be an adapter which needs to be positioned on the valve before air is added.



Please be aware that a poorly tightened or missing valve cap can make the tyres less airtight and lead to pressure loss.

Always use valve caps identical to those fitted originally and tighten them fully.




Vehicle fitted with a tyre pressure monitoring system

In the event of under-inflation (punctures, under-inflation etc.),

the  warning light appears on the instrument panel → 122.

Changing wheels around

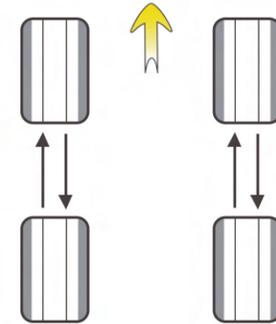

73619

6

Swap the wheels as shown in above picture with every regular intervals 12 months / 10000 Kms (which ever comes earlier).

Swapping needs to be done along with wheel balancing and wheel alignment.

Emergency spare wheel

→ 202, → 205.

TYRES

6



Fitting new tyres

For safety reasons, this operation must be carried out by a specialist.

Fitting different tyres may change your vehicle as follows :

- it may mean that your vehicle no longer conforms to current regulations.
- it may change the way it handles when cornering.
- it may cause the steering to be heavy.
- It may affect the use of snow chains.



Changing a wheel

As the tyre pressure monitor may take several minutes to correctly determine the positions of the wheels and the pressure values after driving, check the tyre pressures following any operation.

For safety reasons, fitting snow chains to the rear axle is strictly forbidden.

Chains cannot be fitted to tyres which are larger than those originally fitted to the vehicle.

Snow or Winter tyres

We would recommend that these be fitted to all **four wheels** to ensure that your vehicle retains maximum adhesion.

Warning : These tyres sometimes have a specific direction of rotation and a maximum speed index which may be lower than the maximum speed of your vehicle.



Snow chains may only be fitted to tyres of the same size as those originally fitted to **your vehicle**.

Studded tyres

This type of equipment may only be used for a limited period and as laid down by local legislation. It is necessary to observe the speed specified by current legislation.

These tyres must, at a minimum, be fitted to the two front wheels.

Snow or Winter tyres

We recommend that these be fitted to all four wheelers to ensure that your vehicle remains maximum adhesion.

Warning :

These tyres sometimes have a specific direction of rotation and a maximum speed index which may be lower than the maximum speed of your vehicle.



In all cases, we would recommend that you contact an authorised dealer who will be able to advise you on the choice of equipment which is most suitable for your vehicle.

Tyre pressure

Adhere to the tyre pressures (including the emergency spare wheel). The tyre pressures should be checked at least once a month and additionally before any long journey.

Tyre pressures should always be checked when the tyres are cold, ignore higher pressures which may be reached in hot weather or following a fast journey.


If the tyre pressures cannot be checked when the tyres are cold, in-

TYRES

crease the pressures from 0.2 to 0.3 bar (or 3 PSI).

Never deflate a hot tyre.

Refer the tyre pressure labels **1** details pasted on the driver door of the vehicle.

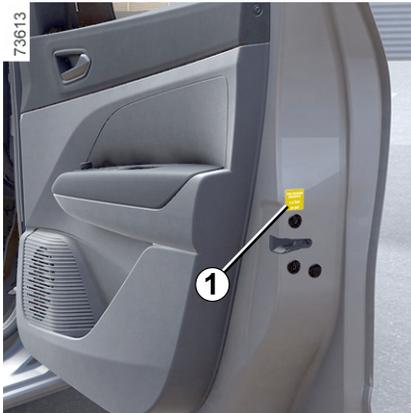

For vehicles used fully laden (maximum permissible all-up weight)

The maximum speed must be limited to **(62 mph) 100 km/h** and the tyre pressure increased by 0.2 bar. → **234**
Risk of tyre blowouts.



For your safety, please respect the speed limit. When they need to be replaced, only tyres of

the same make, size, type and profile should be used on a single axle.

They must : either have a load capacity and speed rating at least equal to those of the original tyres, or conform to those recommended by an authorised dealer. Failure to heed these instructions could endanger your safety and affect your vehicle's road worthiness. Risk of loss of control of the vehicle.



Vehicle fitted with a tyre pressure monitoring system

In the event of under-inflation (punctures, under-inflation etc.),

the  warning light appears on the instrument panel → **122**.

Tools



Depending on the vehicle, to access the tools:

- move the second row right side seat **1** in forward direction → **41**;
- release the knob **6** and swing out the lever **7** to access the tools.

6

TYRES



6



Jack 2

To use jack 2, move the second row right side seat forward → 41 and re-

lease knob 6. Swing out the lever 7 and take out the jack 2. To store the jack after use, ensure the jack is located in the same position, swing out the lever 7 again and tighten the knob 6.

Towing eye 3 → 208

Guide wheel bolt 4

Wheel wrench 5

This can be used to lock or unlock the wheel bolts and the towing eye 3.

This is placed along with warning triangle. Replace it in the same pouch after use.



Do not leave the tools unsecured inside the vehicle as they may be projected during braking.

After use, check that all the tools are correctly clipped into the tool kit, then position it correctly in its housing to reduce any **risk of injury**.



For safety reasons, the use of a jack not recommended by the manufacturer is strictly forbidden.

The jack is specific to the vehicle and used to change the wheels. Under no circumstances should it be used:

- on another vehicle;
- to carry out a repair;
- to access the underside of the vehicle.

Risk of injury.

Risk of damage to the vehicle.

Puncture, emergency spare wheel

In case of puncture

Depending on the vehicle, the following may be available:

- a tyre inflation kit;
- an emergency spare wheel.

TYRES

i **Vehicle fitted with a tyre pressure monitoring system**

In the event of under-inflation (punctures, under-inflation etc.),

the **!** warning light appears on the instrument panel → 122.

Emergency spare wheel




The spare wheel is stored in cradle **3** underneath the floor at the rear of the vehicle.

To access the emergency spare wheel

- Have all passengers get out from the vehicle;
- Open the luggage compartment door and fold down the third row seat;
- loosen the bolt using the wheelbrace **1**;
- Unhook the cradle **3** by lifting upward direction to release it from the hook **4**;
- release the emergency spare wheel.

i Do not loosen the bolt excessively, otherwise the spare wheel cradle may fall suddenly.

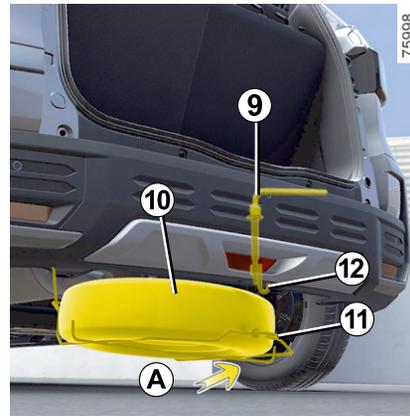

To store the wheel in the cage

- Make sure to reposition the wheel **2** correctly in the cradle, with the valve facing downwards;
- place the wheel as far to the right as possible and at the bottom of the cradle **3** (movement **A**);
- lift the cradle **3** towards upward direction and re-fit into hook **4**;
- tighten the nut using the wheelbrace **1** to refit and lock the assembly;
- fold the third row seat back to the desired position.



If the vehicle is parked on the hard shoulder, you must warn other road users of your vehicle's presence with a warning triangle or with other devices as per the legislation applying to the country you are in.

6

TYRES



Do not leave the tools unsecured inside the vehicle as they may be projected during braking.

After use, make sure the tools are correctly positioned in their mountings: **failure to do so presents a risk of injury**. If bolts are supplied with the emergency spare wheel, you must use these bolts only for the emergency spare wheel.



If the emergency spare wheel has been stored for several years, have it checked by your Dealer

to ensure that it is safe to use.

Vehicle fitted with an emergency spare wheel that differs from the other wheels :

- Never fit more than one emergency spare wheel to the same vehicle.
- The punctured wheel is wider than the emergency spare wheel, so the height of the vehicle ground clearance is reduced.
- Replace the emergency spare wheel as soon as possible with a wheel identical to the original one.
- When this is fitted to the vehicle, which must only be a temporary measure, the driving speed must not exceed the speed indicated on the label on the wheel.
- Fitting an emergency spare wheel may alter the way the vehicle usually runs.

Avoid sudden acceleration or deceleration and reduce your speed when cornering.



Note: Ensure that the emergency spare wheel or punctured wheel are correctly positioned. Check that the boot carpet is correctly positioned in its bump stops to prevent it from being damaged.



Note: Do not fit the wheel cover if the emergency spare wheel is fitted to the vehicle.

TYRES



Vehicle fitted with a tyre pressure monitoring system

In the event of under-inflation (punctures, under-inflation etc.),

the  warning light appears on the instrument panel → 122.



Do not leave the tools unsecured inside the vehicle as they may be projected during braking.

After use, check that all the tools are correctly clipped into the tool kit, then position it correctly in its housing to reduce any risk of injury.

If bolts are supplied with the emergency spare wheel, you must use these bolts only for the emergency spare wheel.



For safety reasons, the use of a jack not recommended by the manufacturer is strictly forbidden.

The jack is specific to the vehicle and used to change the wheels. Under no circumstances should it be used:


- on another vehicle;
- to carry out a repair;
- to access the underside of the vehicle.

Risk of injury.

Risk of damage to the vehicle.

Wheel trims, wheel trim – wheel

Central wheel trim 1 with visible wheel bolts

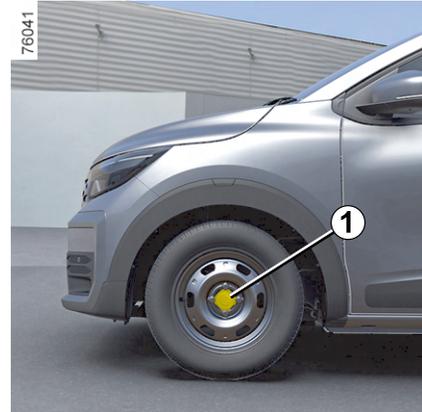

The bolts are directly accessible.

Wheel trim




TYRES

Depending on the version, after removing the wheel cover **2**, the bolts are accessible.

BREAKDOWN RECOVERY

Towing: breakdown

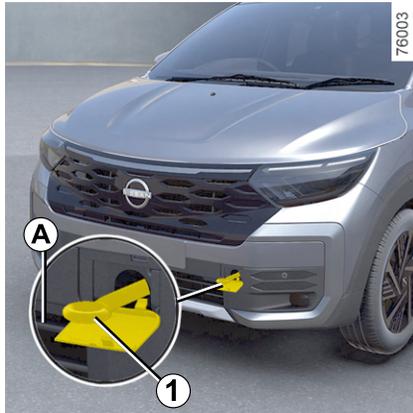

The steering wheel must be unlocked and the ignition key must be in ignition ON condition to provide brake lights and hazard warning lights on the towed vehicle. At night the vehicle must have its lights on.

Front towing point.

Remove the tow hook cover **A** to access the tow hook **1**. This towing point must only be used for towing; never use it for lifting the vehicle directly or indirectly.

Before towing, unlock the steering column. Press clutch and shift the gear lever to 1st gear (**N/R in automatic transmission vehicle**). **Insert the**

hands free card into the card reader, press and hold the engine start button for 2 seconds. Shift the gear lever to N (position N in automatic transmission vehicle). The steering column gets unlocked and accessory mode gets ON to have the brake lights and hazard warning lights ON in the towed vehicle.

 Ensure the towing hook should be fitted completely until the end of thread.

 Always pull straight ahead when using tow hooks. It is prohibited to pull the vehicle from sides or at a vertical angle.

 Do not remove the handsfree card from the drive while towing.



Do not remove the key from the ignition when the vehicle is being towed.

When the engine is stopped, steering and braking assistance are not operational.

- Do not leave the tools unsecured inside the vehicle as they may come loose under braking ;
- A vehicle must not be towed if it is not fit to be driven ;
- Use a rigid towing bar. If a rope or cable is used (where the law allows this), the vehicle being towed must be able to brake.



Do not leave the tools unsecured inside the vehicle as they may come loose under braking.

BREAKDOWN RECOVERY



It is prohibited to hang the car to lower arm or Rear Axle. To hang car there is a specific place provided.

Battery: breakdown recovery

Troubleshooting

To avoid all risk of sparks :

- Ensure that all electrical equipments (courtesy lights, etc.) are switched off before disconnecting or reconnecting the battery.
- when charging, stop the charger before connecting or disconnecting the battery.
- to avoid creating a short circuit between the terminals, do not place metal objects on the battery.
- always wait at least one minute after the engine has been switched off before disconnecting a battery.
- make sure that you reconnect the battery terminals after refitting.

Connecting a battery charger

The battery charger must be compatible with a battery with nominal voltage of 12 volts.

Do not disconnect the battery when the engine is running. **Follow the instructions given by the manufacturer of the battery charger you are using.**



Some batteries may have specific conditions for recharging. Consult your approved dealer. Avoid the risk of sparks, as this could cause a sudden explosion, and always charge the battery in a well-ventilated area. Risk of serious injury.



Handle the battery with care as it contains sulphuric acid, which must not come into contact with eyes or skin. If it does, wash the affected area with plenty of cold water and consult a doctor, if necessary. Ensure that naked flames, red hot objects and sparks do not come into contact with the battery as there is a risk of explosion. The engine may be hot when carrying out operations in close proximity. In addition, the engine cooling fan can come on at any moment. Risk of injury.

Starting the vehicle using the battery from another vehicle

If you have to use the battery from another vehicle to start, obtain suitable jump leads (with a large cross section) from an approved dealer or, if you already have jump leads, ensure that they are in perfect condition.

The two batteries must have an identical nominal voltage of 12 volts. The battery supplying the cur-


BREAKDOWN RECOVERY

rent should have a capacity (amp-hours, Ah) which is at least the same as that of the discharged battery.

Ensure that there is no risk of contact between the two vehicles (risk of short circuiting when the positive terminals are connected) and that the discharged battery is properly connected. Switch off your vehicle ignition.

Start the engine of the vehicle supplying the current and run it at an intermediate engine speed.

6

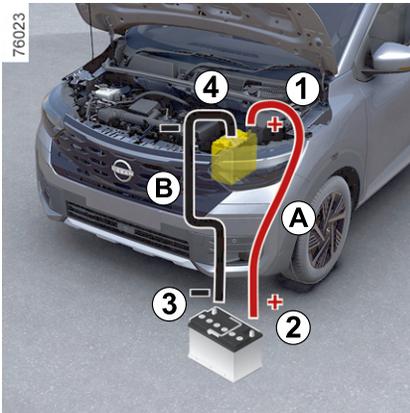

Connect the positive cable (+) **A** to the (+) terminal **1** of the discharged battery, then to the (+) terminal **2** of the battery supplying the current.

Connect the negative cable (-) **B** to the (-) **3** terminal of the battery sup-

plying the current and then to the (-) **4** terminal of the discharged battery.

Start the engine as normal. As soon as it starts, disconnect cables **A** and **B** in reverse order (**4-3-2-1**).




Check that there is no contact between leads **A** and **B** and that the positive lead **A** is not touching any metal parts on the vehicle supplying the current. Risk of serious injury and/or damage to the vehicle.

HEADLIGHTS, LIGHTS: REPLACING BULBS

Exterior lighting: replacing bulbs

Front headlights: replacing the bulbs

Vehicles with LED headlights

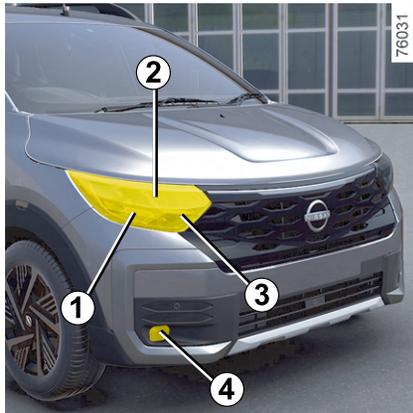


LED Main/ Dipped beam headlight 1

Consult an approved dealer.

LED daytime running light 2

Consult an approved dealer.

Direction indicator lights 3

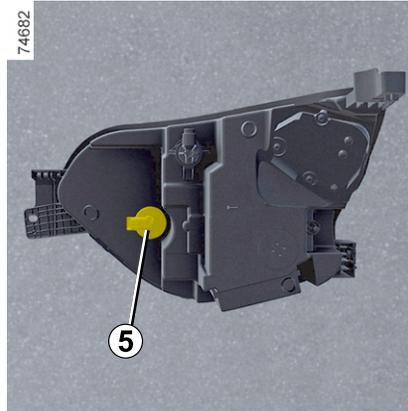

turn the bulb holder **5** a quarter of a turn and take out the bulb.

Bulb type: PY21W.

LED front fog lights 4

Consult an approved dealer.



Before carrying out any action in the engine compartment, you must switch off the ignition

→ 107.



Any operation on (or modification to) the electrical system must be performed by an approved Dealer since an incorrect connection might damage the electrical equipment (harness, components and in particular the alternator). In addition, your Dealer has all the parts required for fitting these units.




The engine may be hot during operations in close proximity. In addition, the engine cooling fan may come on at any moment.
Risk of injury.


6

Vehicles with halogen headlights

HEADLIGHTS, LIGHTS: REPLACING BULBS

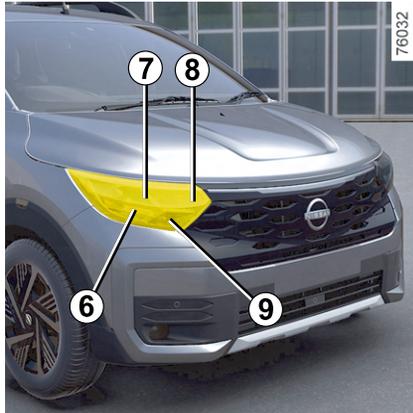

(depending on the vehicle)
Dipped beam headlight **6**

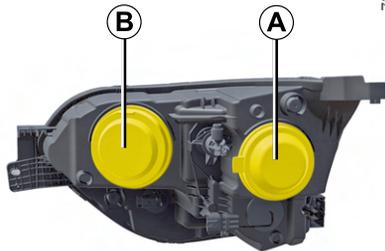


Remove the cover **A**.

212 - Practical advice

Unclip the connector **10**, remove the assembly from its housing and take out the bulb.

Bulb type: H7.

Main beam headlight 7

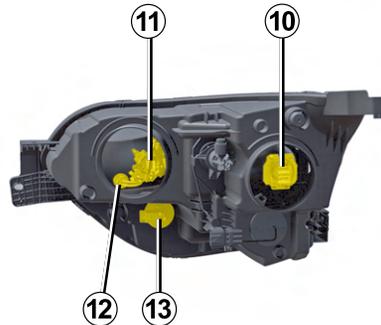

Remove the cover **B**.

Unclip the connector **11**, remove the assembly from its housing and take out the bulb.

Bulb type: H1.

Before replacing the bulb, make a careful note of its position in its housing. After changing it, check that the replacement bulb is in exactly the same position in the housing. Clip the cover in place.



The bulbs are under pressure and can break when replaced.
Risk of injury.

Side light **8**

Unclip the connector **12**, remove the assembly from its housing and take out the bulb.

Bulb type: W5W.

Direction indicator lights **9**

turn the bulb holder **13** a quarter of a turn and take out the bulb.

Bulb type: PY21W.



Before carrying out any action in the engine compartment, you must switch off the ignition

→ 107.

HEADLIGHTS, LIGHTS: REPLACING BULBS



Any operation on (or modification to) the electrical system must be performed by an approved Dealer since an incorrect connection might damage the electrical equipment (harness, components and in particular the alternator). In addition, your Dealer has all the parts required for fitting these units.



The engine may be hot during operations in close proximity. In addition, the engine cooling fan may come on at any moment.
Risk of injury.




The headlamps can be replaced. However, we recommend you to have them replaced with an approved dealer, if it proves difficult. To comply with legislation, or as a precaution, you can obtain an emergency kit containing a set of spare bulbs and fuses from an approved dealer.

Rear lights: replacing the bulbs

(depending on the vehicle)

LED high-level brake light 14

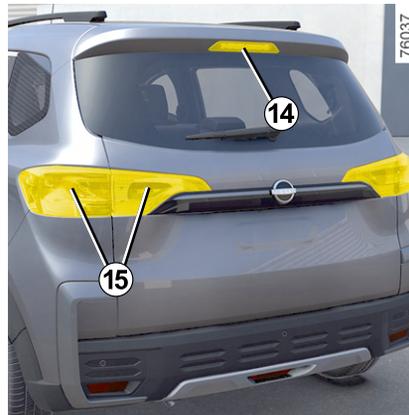


Consult an approved dealer.

LED Side lights 15

Consult an approved dealer.

Brake lights and direction indicator lights

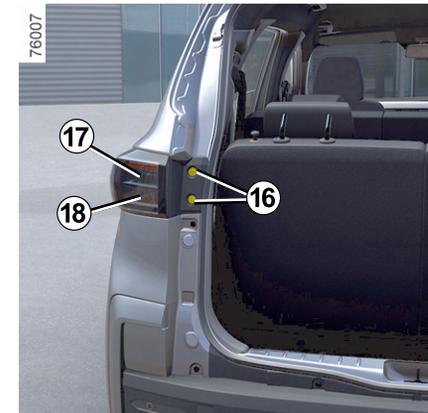


Open the luggage compartment lid and remove the screws 16.

Release the lamp assembly by pulling the lamp outwards.

HEADLIGHTS, LIGHTS: REPLACING BULBS

6

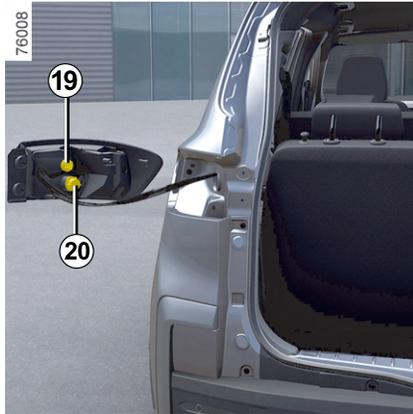

Rotate bulb holders **19** & **20** in anti-clockwise direction and remove the bulbs.

Brake lights 17

Bulb type: W16W


Direction Indicator lights 18

Bulb type: WY16W



Do not touch the exhaust.
Risk of burns.

Reversing light

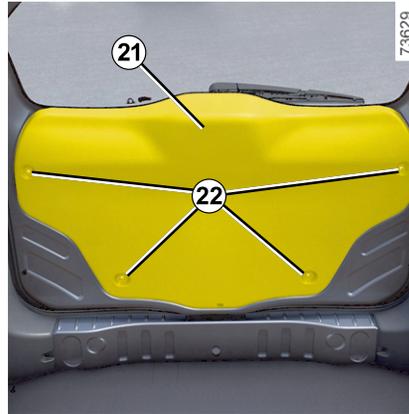

open the luggage compartment lid.
remove the panel **21** by removing the screws **22**.



unscrew the nut **23** and clips to release the light assembly from the outside of the vehicle by pulling towards the outside.



Unclip the connector and rotate the bulb holder **24** in anti-clockwise direction to remove the bulb concerned.

Bulb type: W16W



The bulbs are under pressure and can break when replaced.
Risk of injury.

Refitting

HEADLIGHTS, LIGHTS: REPLACING BULBS

To re-fit, proceed in the reverse order taking care not to damage the wiring, tighten screws **1** first.



The bulbs are under pressure and can break when replaced.
Risk of injury.

LED Side indicator lights 25



Consult an approved dealer.

Side/ Brake lights and direction indicator lights

(depending on the vehicle)



Open the luggage compartment lid and remove the screws **26**.

Release the lamp assembly by pulling the lamp outwards.



Rotate bulb holders **27** in anti-clockwise direction and remove the bulbs.

Side light/Brake lights 27

Bulb type: P21W/5W

Direction Indicator lights 28

Bulb type: PY21W




Do not touch the exhaust.
Risk of burns.

Reversing light


(depending on the vehicle)

HEADLIGHTS, LIGHTS: REPLACING BULBS

6

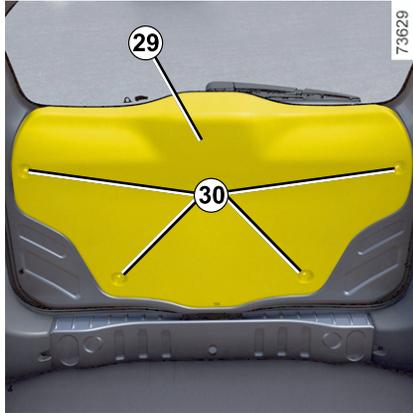

open the luggage compartment lid.
remove the panel **29** by removing the screws **30**.

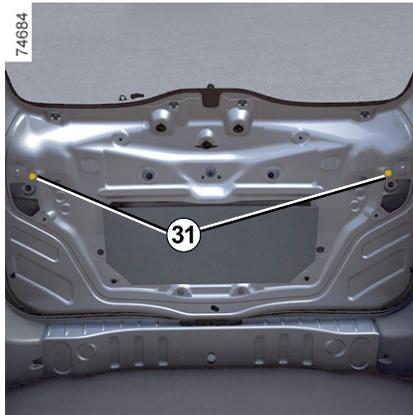

unscrew the nut **31** and clips to release the light assembly from the outside of the vehicle by pulling towards the outside.



Unclip the connector and rotate the bulb holder **32** in anti-clockwise direction to remove the bulb concerned.

Bulb type: W16W



The bulbs are under pressure and can break when replaced.
Risk of injury.


Refitting

To re-fit, proceed in the reverse order taking care not to damage the wiring, tighten screws **30** first.




The bulbs are under pressure and can break when replaced.
Risk of injury.

Number plate lights

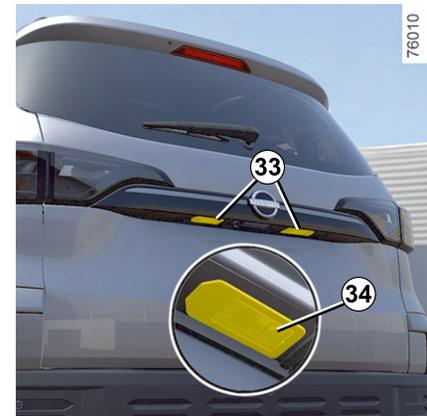

Unclip the light **33** by pressing the tab **34** using a flat-blade screwdriver or similar tool.

HEADLIGHTS, LIGHTS: REPLACING BULBS

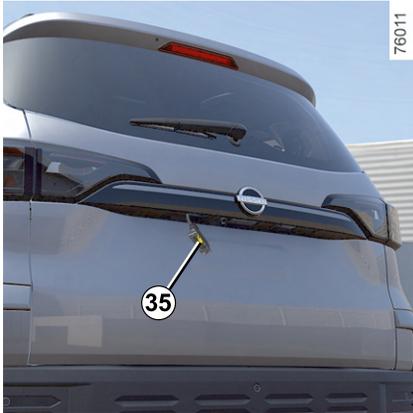


Remove the bulb **35** from the holder.

Bulb type: W5W.

Refitting

To refit, proceed in the reverse order, taking care not to damage the wiring. Once the bulb has been replaced, check that it is properly secured.

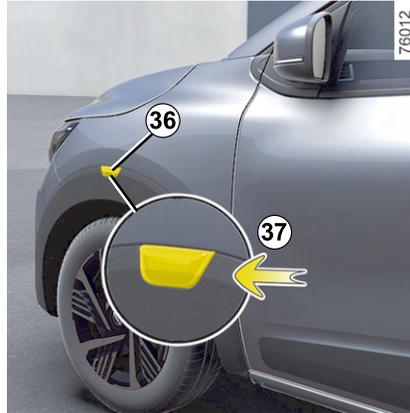


Side indicator lights

(depending on the vehicle)


Unclip the indicator light **36** using a flat-blade screwdriver or similar tool positioned at **37** to lever the indicator light towards the outside of the vehicle.



The bulbs are under pressure and can break when replaced.
Risk of injury.

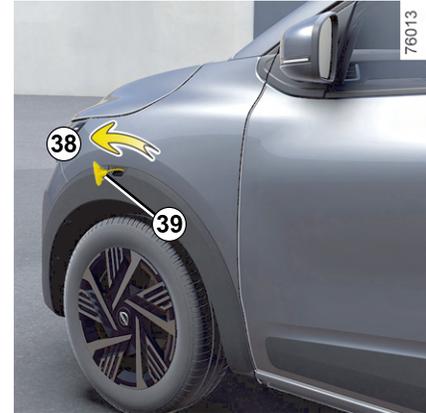

Make a quarter of a turn (movement **38**) on the bulb holder **39** and remove the bulb **40** (movement **41**).

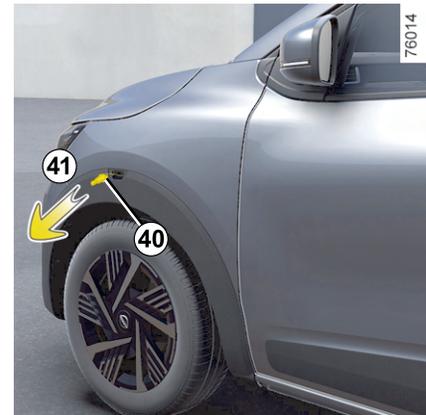


HEADLIGHTS, LIGHTS: REPLACING BULBS

Bulb type: WY5W.

Replace the bulb and refit the indicator light.

Interior lighting: changing bulbs

LED Front courtesy light 1

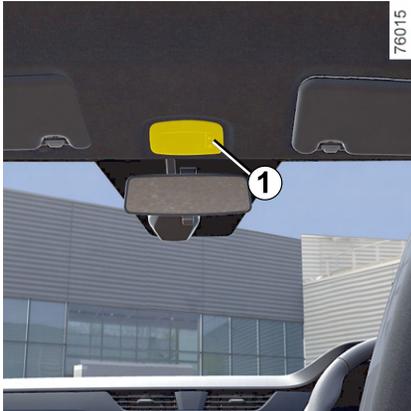

76015

6

Consult an approved dealer.

LED Rear reading light 2



76016


Consult an approved dealer.



The bulbs are under pressure and may break when replaced.
Risk of injury.


WIPER BLADES: REPLACEMENT

Windscreen wiper - to lift/re-place wiper blades

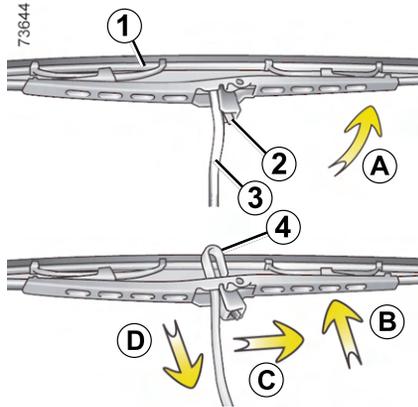

Replacing windscreen wiper blades 1

- With the ignition off, lift wiper arm **3**.
- Turn the blade horizontally (movement **A**).
- Press tab **2** and slide the wiper blade downwards (movement **D**) until hook **4** on the wiper arm is released.
- Slide the blade (movement **C**) then lift it (movement **B**) to release it.

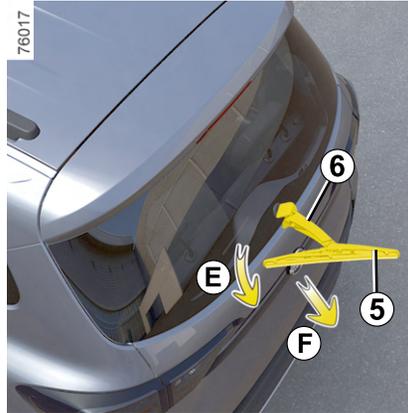

Replacing the rear screen wiper blades 5

- With the ignition off, lift wiper arm **6**.
- Turn blade **5** until some resistance is met (movement **E**).
- Pull the blade to release it (movement **F**).

Refitting windscreen wiper blades

To refit the wiper blade, proceed in the reverse order to removal. Make sure that the blade is correctly locked in position.

 Check the condition of the wiper blades. You are responsible for their service life :

- clean the blades, windscreen and rear screen regularly with soapy water ;
- do not use them when the windscreen or rear screen are dry ;
- free them from the windscreen or rear screen when they have not been used for a long time.




- In frosty weather, make sure that the wiper blades are not stuck by ice (to avoid the risk of the motor overheating).
- Check the condition of the wiper blades.

Replace the wiper blades as soon as they begin to lose efficiency (approximately once a year). While changing the blade, take care not to drop the arm onto the window after it has been removed as this may break the window.

FUSES

Fuse box

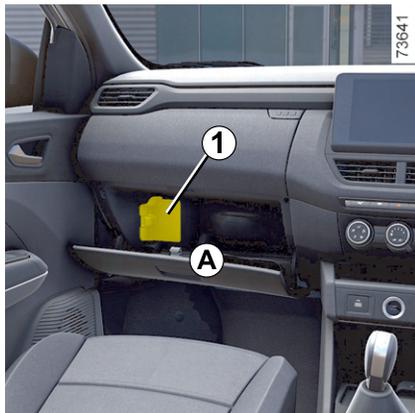

6

If any electrical component does not work, check the condition of the fuses.

Fuses in the passenger compartment A

To remove the flap 1 pull it from the lower edge to access the fuses.



To comply with current legislation, or as a precaution, you can obtain an emergency kit from your approved dealer containing a set of spare bulbs and fuses.

Removing the fuses

Remove the fuse, located at the back of flap A from position.

To remove the fuse, slide the fuse.

It is not advisable to use the free fuse locations.



The engine may be hot when working in close proximity. In addition, the engine cooling fan may come on at any moment.

Risk of injury.




Check the fuse in question and replace it. If a fuse is fitted where the rating is too high, it may cause the electrical circuit to overheat (risk of fire) in the event of an item of equipment using an excessive amount of current.

FUSES

Allocation of fuses in the passenger compartment

(presence of some fuses DEPENDS ON VEHICLE EQUIPMENT LEVEL)

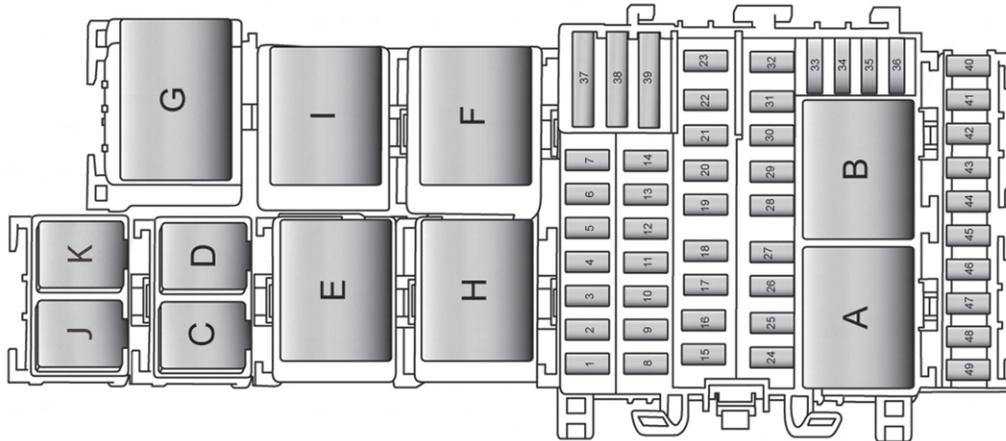

76043

FUSES

Allocation of fuses

Number	Allocation
A	Defroster/Front power window
B	Reverse lights/Front blower (Manual transmission)
C	Ambient lighting
D	Anti-pinch
E	Hands free access ECU
F	Rear AC/2nd & 3rd row Accessory socket
G	Front blower (Automatic transmission)
H	Power window - Front/Rear
I	Child safety
J	Mirror Auto fold/Unfolding
K	Mirror Auto fold/Unfolding
Number	Allocation
1	Rear AC
2	Parking assistance/ Cruise control

3	Multimedia CAN interface
4	Outside rear view mirror (AUTO)
5	Rain light sensor
6	Rear power window
7	BCM/Radio/Ultra low cost navigation
8	Hands-free mode
9	EMM ignition power supply
10	Ambient lighting
11	Starter - Non Hands-free mode
12	Roof light - Front/Rear/ Puddle lamp
13	Cluster
14	Combi switch
15	Radio/Ultra low cost navigation/ Diagnostic socket/ Multimedia CAN interface
16	Combi switch - low beam
17	Body control module
18	Horn
19	Door locking/Tail gate
20	Body control module

21	EMM2 (Tail light/ front fog left right/ DRL lamp night)
22	EMM2 (Input bat voltage)
23	Not used
24	Not used
25	Defroster
26	Backup light/Rear wiper/ Parking assist ECU & Buzzer
27	Wiper motor
28	BCM/Fuel pump relay/starter relay/Injection ECU/Power transmission control unit/ Automatic gear selector/ EMM2 ignition power
29	Electric power steering
30	Air bag
31	Stop light /Ultra low cost navigation
32	Transponder/ABS/clutch travel end/stop light
33	Second row accessory socket
34	Third row accessory socket

FUSES

35	EMM2 (Back light illumination/ left drl/front position light)
36	EMM2 (Low beam/high beam)
37	Front blower motor
38	Outside rear view mirror/ Electrical adjustment
39	EMM2 Input power wiper
40	Left hand side head light - High beam
41	Right hand side head light - High beam
42	Left hand side head light - Low beam
43	Right hand side head light - Low beam
44	Position lamp
45	First row accessory socket
46	Front power window -Nor- mal/Anti-pinch
47	Power window Anti-pinch
48	Not used
,49	

INSTALLATION AND USE OF ACCESSORIES



Electrical and electronic accessories

Before installing this type of accessory (particularly for transmitters/receivers: frequency bandwidth, power level, position of the aerial, etc.), make sure it is compatible with your vehicle. Contact an approved dealer.

Before connecting an accessory to a socket, ensure that it does not exceed the maximum power authorised for the socket → 151, → 182.

Fire hazard.

No work may be carried out on the vehicle's electrical and/or electronic circuits, except by a qualified professional. In fact, an incorrect connection and/or the installation of electrical/electronic accessories not approved by the manufacturer could lead to:

- damage to the electrical and/or electronic equipment;
- damage to the components connected to it;
- the collection and use of vehicle data;
- an invasion of privacy (modification, deletion or unwarranted access to personal data);
- cancellation of the authorisation for entry into service.

Risk of serious accidents.

Risk of invasion of privacy.

If you have electrical equipment fitted in future, make sure that you obtain information on the rating and position of this fuse.

Using the diagnostic socket

The use of electronic accessories on the diagnostic socket may cause serious disturbance to the vehicle's electronic systems. For your safety, we recommend that you only use electronic accessories approved by the manufacturer: consult an approved dealer.

Risk of serious accidents

Fitting aftermarket accessories

If you wish to install accessories on the vehicle: consult an approved dealer. Also, to ensure the correct operation of your vehicle, and to avoid any risk to your safety, we recommend that you use only accessories specifically designed for your vehicle, which are the only accessories for which the manufacturer will provide a warranty.

If you are using an anti-theft device, only attach it to the brake pedal.

Driver obstruction

INSTALLATION AND USE OF ACCESSORIES

On the driver's side, only use mats suitable for the vehicle, attached with the pre-fitted components, and check the fitting regularly. Do not lay one mat on top of another.

There is a risk of wedging the pedals.

OPERATING FAULTS

The following advice will enable you to carry out quick, temporary repairs. For safety reasons you should always contact an approved dealer as soon as possible.

The starter is activated	POSSIBLE CAUSES	WHAT TO DO
Warning lights dim or fail to come on ; the starter does not run.	Battery terminals disconnected, oxidised or incorrectly secured.	Retighten them, reconnect them or clean them if they are oxidised.
	Battery discharged or worn.	Connect another battery to the faulty battery. Refer to the information on "Battery : troubleshooting" in Section 5 or replace the battery if necessary. Do not push the vehicle if the steering column is locked.
The engine is not starting.	Starting conditions are not fulfilled.	Please refer to the information on "Starting, stopping the engine" in Section 2.
The steering column remains locked.	Steering wheel locked.	To unlock, gently move the key and the steering wheel (refer to the information on the "Ignition switch" in Section 2).
Traces of condensation in the lights.	This is not a fault. Traces of condensation are a natural phenomenon caused by variations in temperature. The traces will disappear slowly once the lights are switched on.	
On the road	POSSIBLE CAUSES	WHAT TO DO
Vibrations.	Tyres not inflated to correct pressures, incorrectly balanced or damaged.	Check the tyre pressures ; if this is not the cause, have their condition checked by an approved dealer.
Coolant boiling in the coolant reservoir.	Mechanical fault : cylinder head gasket damaged, faulty coolant pump.	Stop the engine. Contact an approved dealer.
	Engine cooling fan not working.	Contact an approved dealer.

OPERATING FAULTS

On the road	POSSIBLE CAUSES	WHAT TO DO
Smoke under the bonnet.	Short circuit or cooling system leak.	Stop, switch off the ignition, move away from the vehicle and contact an approved dealer.
The oil pressure warning light comes on :		
on a bend or under braking	The engine oil level is too low.	Top up the engine oil level (refer to the information on "Engine oil level : topping up/filling" in Section 4).
at idle speed	Low oil pressure.	Go to your nearest approved dealer.
The oil pressure warning light takes a long time to go out or remains lit during acceleration.	Loss of oil pressure.	Stop the vehicle : contact an approved dealer.

On the road	POSSIBLE CAUSES	WHAT TO DO
The engine overheats. The coolant temperature indicator light comes on.	Engine cooling fan not working.	Stop the vehicle, switch off the engine and contact an approved dealer.
	Coolant leaks.	Stop the vehicle, switch off the engine and check the coolant reservoir : it should contain fluid. If there is no coolant, consult an approved dealer as soon as possible.
The wiper does not work.	Wiper blade stuck.	Free the blades before using the wipers.
	Faulty electrical circuit.	Consult an approved dealer.
The wiper does not stop.	Faulty electrical controls.	Consult an approved dealer.
Direction indicators flashing more quickly.	Bulb blown.	Replace the bulb.

OPERATING FAULTS

On the road	POSSIBLE CAUSES	WHAT TO DO
The direction indicators do not work.	Faulty electrical circuit.	Consult an approved dealer.
The headlights do not switch on or off.	Faulty electrical circuit or control.	Consult an approved dealer.
Abnormal white smoke from the exhaust	Mechanical fault : damaged cylinder head gasket.	Stop the engine. Contact an approved dealer.

6



Radiator : If there is a significant lack of coolant, remember that it must never be topped up using cold coolant while the engine is very warm. After any procedure on the vehicle which has involved even partial draining of the cooling system, it must be refilled with a new mixture prepared in the correct proportions. Reminder : only products approved by the Technical Department may be used for this purpose.

INFORMATION ABOUT THE VEHICLE

Vehicle identification plates




The information shown on the vehicle identification plate should be quoted on all correspondence or orders.

Open up the bonnet to access the Vehicle Identification number Plate.

Vehicle identification plate A

Identification number.

Engine identification, engine specifications

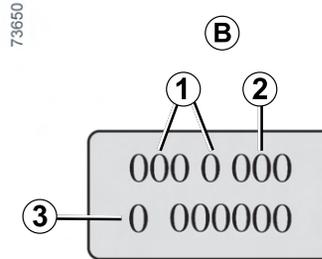

Please quote the information on the engine identification information in area B in all correspondence or orders.

(Location varies depending on engine)

1. Engine type.
2. Engine suffix.
3. Engine number.



INFORMATION ABOUT THE VEHICLE

Engine specifications

Versions	1.0 12V
Engine type (see engine plate)	B4D
Cubic capacity (cc)	999
Type of fuel octane rating	Petrol. It is essential to use unleaded petrol with an octane rating 91 and higher.
Spark plugs	Only use spark plugs specified for your vehicle's engine. The type should be marked on a label stuck inside the engine compartment. If it is not, then Contact your approved Dealer for replacement of Spark Plugs. Fitting spark plugs which are not to specification may damage the engine.

7


INFORMATION ABOUT THE VEHICLE

Versions	1.0 12V
Engine type (see engine plate)	BR10DE / B4D
Cubic capacity (cc)	999
Fuel types that meet Indian standards and are compatible with the engines of vehicles sold in India (in any other case, contact an Approved Dealer).	<p>E10 Unleaded petrol compliant with standard IS 2796: 2017 containing up to 10% ethanol in volume.</p> <p>E20 Unleaded petrol compliant with standard IS 17021: 2018 containing up to 20% ethanol in volume.</p>

INFORMATION ABOUT THE VEHICLE

Dimensions (in metres)

7

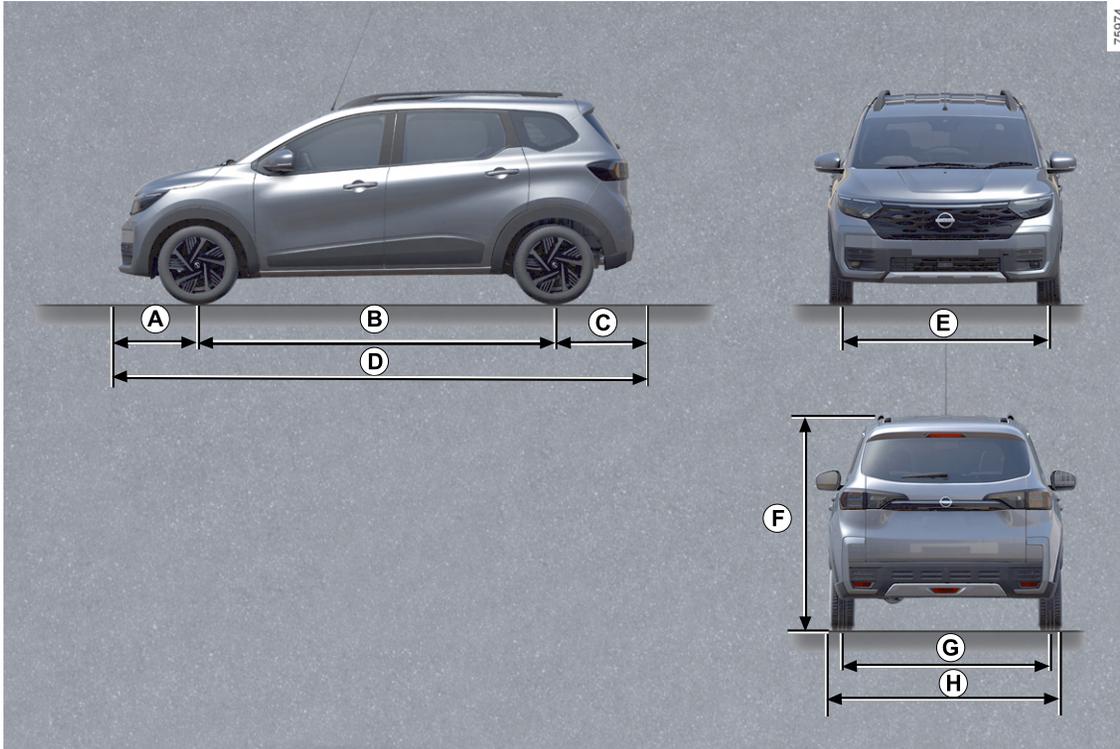

INFORMATION ABOUT THE VEHICLE

	Dimensions
A	0.655
B	2.636
C	0.696
D	3.986
E	1.530 to 1.550
F	1.644 unladen - without roof bars 1.662 unladen - with roof bars
G	1.535 to 1.555
H	1.793 with door mirrors folded in 1,939 with door mirrors folded out

INFORMATION ABOUT THE VEHICLE

Weights (in kg)

The weights indicated for a basic vehicle without options : they vary depending on your vehicle's equipment. Consult your approved Dealer.	
Minimum Weight - Unladen condition (Depending on vehicle)	936 Kg
Maximum Weight - Unladen condition (Depending on vehicle)	993 Kg
Maximum Weight - Laden condition (Depending on vehicle)	1538 Kg
Maximum permissible load on roof (with carrying device)	50 kg (maximum)

7

REPLACEMENT PARTS AND REPAIRS



Original parts are based on strict specifications and are subject to highly specialized tests. Therefore, they are of at least the same level of quality as the parts fitted originally.

If you fit genuine replacement parts always to your vehicle, it will perform well. Furthermore, repairs carried out within manufacturers network using original parts are guaranteed according to the conditions set out on the reverse of repair order.

ANTICORROSION CHECK

If the continuation of the warranty is subject to repair, it is indicated below.

VIN:

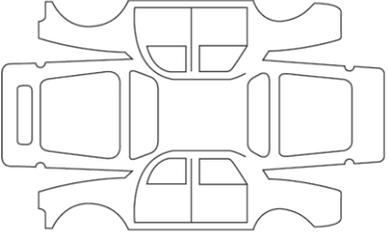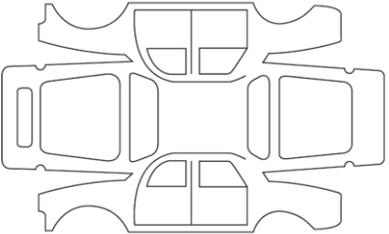Date of repair:		Stamp
Corrosion repair operation to be carried out:		
Date of repair:		Stamp
Repair to be carried out:		



7



ANTICORROSION CHECK

If the continuation of the warranty is subject to repair, it is indicated below.



VIN:

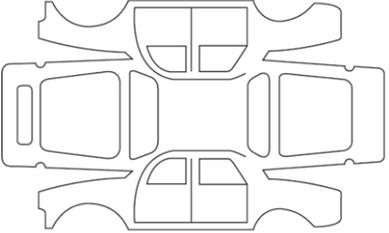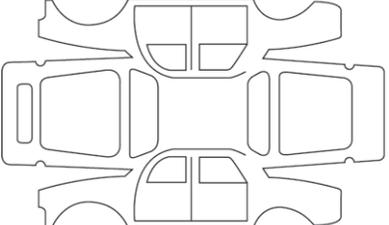Date of repair:		Stamp
Corrosion repair operation to be carried out:		
Date of repair:		Stamp
Repair to be carried out:		

ANTICORROSION CHECK

If the continuation of the warranty is subject to repair, it is indicated below.

VIN:

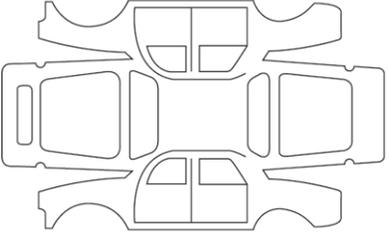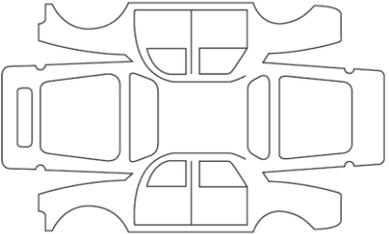Date of repair:		Stamp
Corrosion repair operation to be carried out:		
Date of repair:		Stamp
Repair to be carried out:		



7



ANTICORROSION CHECK

If the continuation of the warranty is subject to repair, it is indicated below.



VIN:

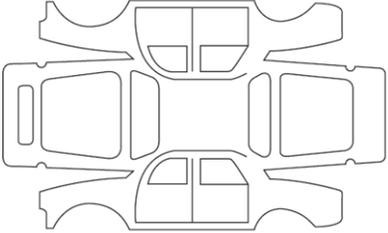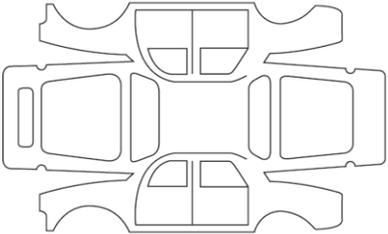Date of repair:		Stamp
Corrosion repair operation to be carried out:		
Date of repair:		Stamp
Repair to be carried out:		

ANTICORROSION CHECK

If the continuation of the warranty is subject to repair, it is indicated below.

VIN:

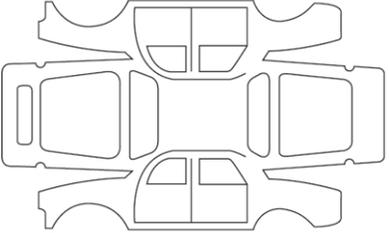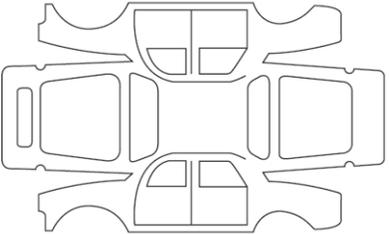Date of repair:		Stamp
Corrosion repair operation to be carried out:		
Date of repair:		Stamp
Repair to be carried out:		



7



ANTICORROSION CHECK

If the continuation of the warranty is subject to repair, it is indicated below.



VIN:

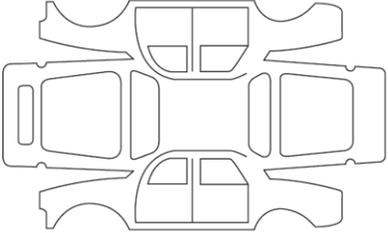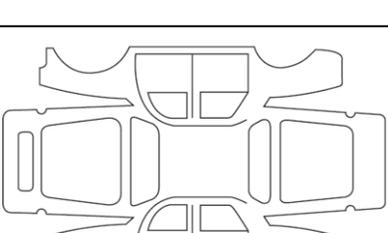Date of repair:		Stamp
Corrosion repair operation to be carried out:		
Date of repair:		Stamp
Repair to be carried out:		

ANTICORROSION CHECK

If the continuation of the warranty is subject to repair, it is indicated below.

VIN:

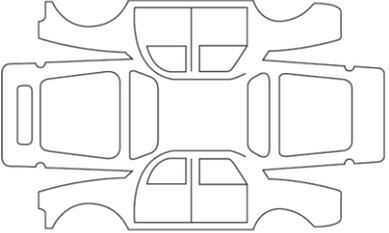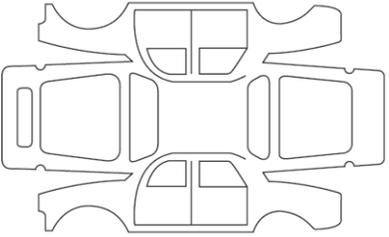Date of repair:		Stamp
Corrosion repair operation to be carried out:		
Date of repair:		Stamp
Repair to be carried out:		

7



ALPHABETICAL INDEX

Symbols

»hands-free » card : use, 22

A

Accessories socket, 182, 182

Access to the engine compartment, 187

Additional methods of restraint to the front seat belts, 50

Advice on antipollution, 117

Air bag, 50

Air conditioning, 148, 149

Air conditioning: information and advice for use, 149

Air vents, 145, 147

Anti-corrosion protection, 194

Antipollution advice, 117, 118

Ashtrays, 182

Audible and visual signals, 99

B

Battery: troubleshooting, 209

Battery troubleshooting, 209

Bonnet, 187

C

Card: emergency key, 20

Card: engine not starting in hands-free mode, 20

Card: hands-free, 20

Card: locking/unlocking the opening elements, 20

Card : use, 20, 22

Changing a wheel, 202

Changing gear, 111, 111

Child booster seat, 58

Child restraint/seat, 58

Child safety, 58, 58

Child seats, 58, 63

Cigar lighter, 182

Cleaning : inside the vehicle, 196

Closing the doors, 32, 32

Control instruments, 94

Courtesy light, 180

D

Display, 83

Doors, 32, 32, 36

Doors/tailgate, 20

Driver's position, 73

Driving, 107, 111, 118, 139, 140

E

Electric windows, 179

Emergency key, 20

Emergency spare wheel, 198, 202

Engine oil, 188, 188

Engine oil grade, 188

Engine oil level, 188

Environment, 138

ALPHABETICAL INDEX

Exterior lighting and signals, [94](#)
Exterior lights, [211](#)

F

Filter, [191](#)
Fitting a child seat, [63](#)
Fittings, [183](#)
Front seat adjustment, [39](#)
Front seats, [39](#), [39](#)
Front seats adjustment, [39](#)
Fuel advice on fuel economy, [118](#)
Fuel economy, [118](#)
Fuel tank, [105](#)

G

Gear control, [111](#)
Gear lever, [111](#)
Grab handle, [181](#)

H

Handbrake, [111](#)
Hands-free telephone integrated control, [151](#)
Heating and air conditioning system, [145](#), [147](#), [148](#), [149](#)
Heating system, [145](#), [147](#), [148](#), [149](#)

I

Interior lighting, [180](#)
Interior trim maintenance, [196](#)

K

Key/Remote control, [28](#)
Keys, [28](#)

L

Levels, [187](#), [191](#), [191](#)
Lighting : exterior, [94](#)
Lighting : interior, [180](#)
Lights, [94](#)
Lights: replacing bulbs, [211](#)
Locking/unlocking the opening elements: doors, [33](#)
Locking the doors, [20](#), [22](#)

M

Maintenance, [117](#)
Maintenance : bodywork, [194](#)
Maintenance: filters, [191](#)
Maintenance : interior trim, [196](#)
Maintenance: mechanical, [191](#)
Map reading lights, [180](#)
Methods of restraint in addition to the seat belts, [50](#)
Mirrors, [181](#)
Multimedia equipment, [151](#)

N

Navigation, [151](#)
Navigation system, [151](#)

ALPHABETICAL INDEX

O

- Opening elements, [32](#), [36](#)
- Opening the doors, [32](#), [32](#)
- Operating faults: card batteries, [20](#)

P

- Paintwork maintenance, [194](#)
- Parking brake, [115](#)
- Parking distance control, [139](#), [140](#)
- Power consumption, [83](#)
- Pretensioners, [50](#)
- Puncture, [202](#)

R

- Radio, [151](#)
- Rear headrests, [40](#)
- Rear seat, [41](#)
- Rear seats, [40](#)
- Rear view mirrors, [92](#)
- Remote control/key: batteries, [30](#)
- Remote control door locking unit, [28](#)
- Replacing windscreen wiper blades, [219](#)
- Reverse gear selecting, [111](#), [111](#)
- Reversing sensor, [139](#), [140](#)
- Roof bars, [186](#)
- Running in, [106](#)

S

- Seat belt pretensioners front seat belt, [50](#)
- Seat belts, [45](#), [50](#)
- Sequential gearbox, [111](#)
- Signals and lights, [94](#)
- Starting, [107](#)
- Starting the engine, [107](#), [107](#)
- Steering wheel adjustment, [91](#)
- Stopping the engine, [107](#)
- Storage compartment, [183](#)
- Storage compartment/fitings: passenger compartment, [183](#)
- Storage compartments, [183](#)
- Sun visor, [181](#)

T

- Telephone, [151](#)
- Tool kit, [206](#)
- Transporting children, [58](#)
- Trip computer, [76](#)
- Troubleshooting: battery, [209](#)
- Tyres, [198](#), [198](#)

V

- Ventilation heating and air conditioning system, [148](#), [149](#)

W

- Warning buzzer, [32](#)

ALPHABETICAL INDEX

Washing, [194](#)

Wheel trim, [206](#)

Windows, [179](#), [179](#)

Windscreen washer, [100](#), [191](#)

Wiper blades: replacement, [219](#)

Wipers, [100](#), [100](#), [102](#)

Printing: January 2026

Printed in India

999109489V

T15-NR